

## CELLCORDER™ CRT-400 Cell Resistance Tester



### Quick Start Instructions Operating Instructions

### Powering On the Cellcorder

1. Press and release the green **Power Key**.

Power



2. The firmware version number appears.



```
System Initializing
* * * * *
Flash Vers.##.#####
Boot Vers.##.#####
```


3. If readings are in temporary storage, messages appear.
4. To save readings, insert the USB flash drive and press **Yes/F1**. Whether you select **Yes** or **No/F2**, readings stay in memory.

```
Readings are in
temporary storage.
Save readings to
the USB device?
YES NO HELP
```

5. To clear readings from the memory, press **Yes/F1**. Do this if you are starting a new set of readings.

```
Do you want to erase
the readings from
temporary storage?
YES NO
```

6. To keep readings in memory, press **No/F2**. Do this if you are not finished taking readings or want to examine the readings.
7. The **Main Menu** appears.

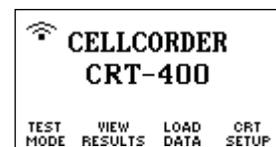

**Note:** It is highly recommended that the calibration constants are saved to the USB flash drive.

## Powering Off the Cellcorder

1. Press and hold the green **Power Key**.

Power



```
System is now
shutting down
3
```

```
System is now
shutting down
2
```

```
System is now
shutting down
1
```

```
Release
Power Button
```

2. Powering off doesn't automatically delete voltage or resistance readings from memory.
3. If readings are in memory, you are prompted to save them.

```
Readings are in
temporary storage.
Save readings to
the USB device?
YES NO HELP
```

```
Do you want to erase
the readings from
temporary storage?
YES NO
```

## Taking Voltage Readings

1. Connect the voltage probes to the Cellcorder and select **Test Mode/F1**.

```
CELLCORDER
CRT-400
TEST VIEW LOAD CRT
MODE RESULTS DATA SETUP
```

2. From the Test Mode menu, select **F1-Voltage**.

```
Test Mode
F1 - Voltage
F2 - Resistance
F3 - S.G./Temp.
VOLT RES SG/TEMP BACK
```

3. If "**Resume Test**" appears, put the probes on the cell.

```
CELL 001
13.50 Volts
(RESUME TESTING)
DVM DONE
```

## Warning

Don't measure voltages greater than 20V DC.


4. If "**Stored in Memory**" appears, retest the cell or change the cell number by typing a number and pressing **Enter**.

```
CELL 001
13.50 Volts
(STORED IN MEMORY)
DVM RETEST DONE
```


5. When the unit beeps, remove the probes. The cell number advances automatically to the next cell.

## The Cellcorder is also a Digital Voltmeter (DVM)

1. In the voltage mode, select **DVM** by pressing the **F1** button.

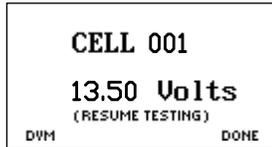


2. The screen displays the measured voltages.
3. Readings are not saved in **DVM** mode.

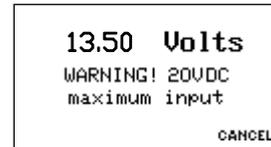


## Taking Resistance Readings


1. Connect the resistance test leads to the Cellcorder and select **Test Mode/F1**.

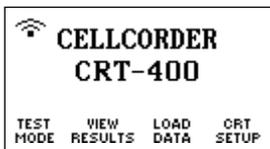

2. From the **Test** menu, select **F2-Resistance**.

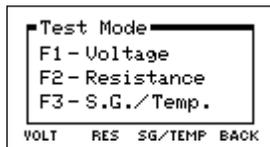

3. Select the **Amp Hour rate/F2** of the cell being tested. Specify the number of **Intercell connections/F3** per cell.

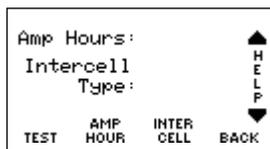

4. Select **Test/F1**.


(mem) Voltage Readings Stored in Memory  
(act) Actual Voltage Reading

Up to 4 Intercell Readings

### No VFloat Readings Exist. Now What?


If "No VFloat readings exist. Are you sure you want to continue?" appears. Choose **No/F2**, read voltage, then resume resistance testing. Reading voltage before resistance results in more accurate voltage readings because skewing is not a factor. If you choose **Yes/F1**, voltage and resistance are read concurrently. Concurrent readings are subject to the skewing effect.

5. Connect the leads to the cell. See lower-left for some examples; refer to the CRT-400 User's Guide for more details. Press the orange **Test** button. The display shows test progress.

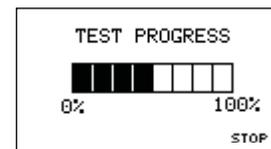

6. When the unit beeps, remove the probes. When leads are moved, the cell number advances automatically to the next cell.

7. When finished testing, press the **Done/F4** button.

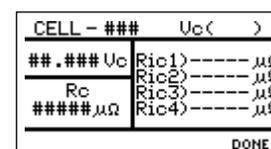


## Connecting the Resistance Leads

These figures show connections for dual post cells.

- Take two readings.

Read with the intercell leads connected from terminal posts A to C.


Then read with the intercell leads connected from terminal posts B to D.

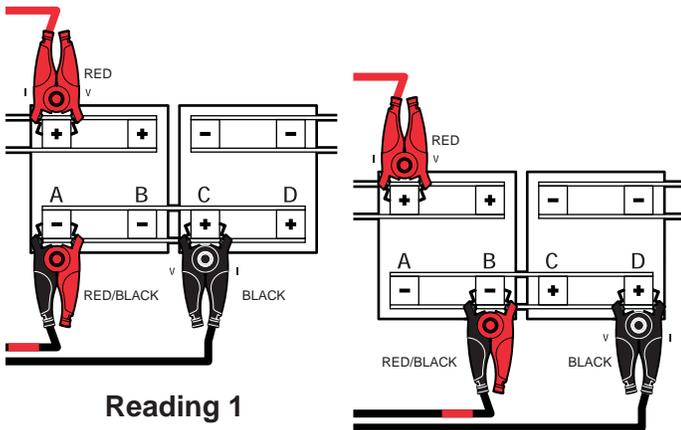

- Take two readings.

Read with the intercell leads connected from terminal posts A to C.


Then read with the intercell leads connected from terminal posts B to D.

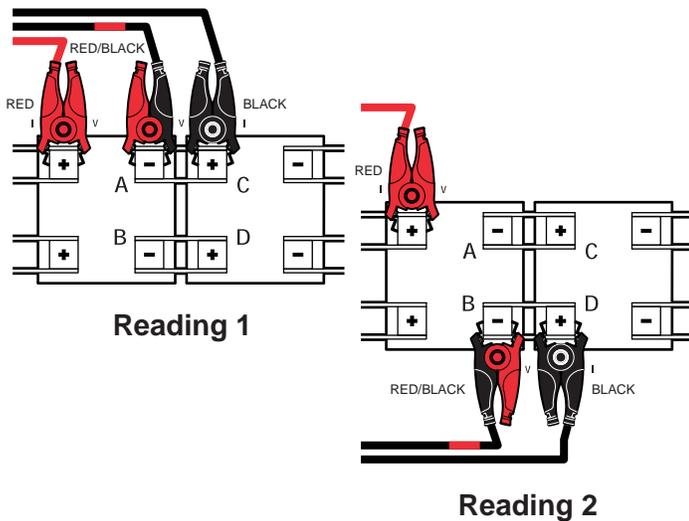


These figures show connections for triple post cells.

- Take three readings.


Read with the intercell leads connected from terminal posts A to D.

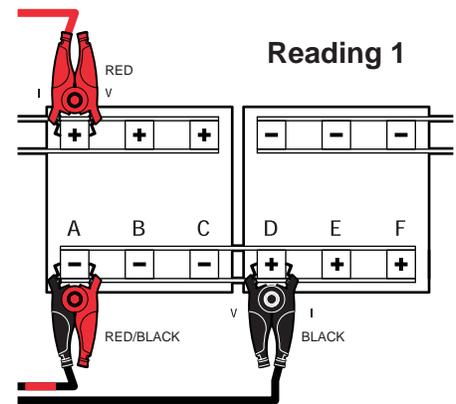

- Then read with the intercell leads connected from terminal posts B to E.

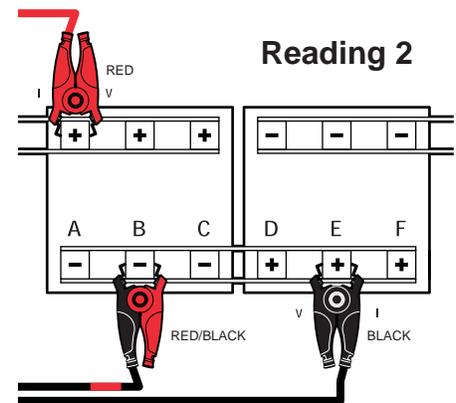


- Then read with the intercell leads connected from terminal posts C to F.

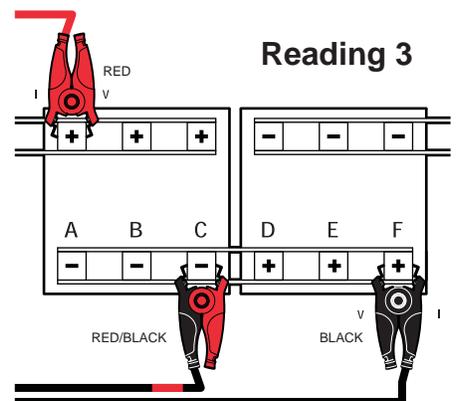


## Transferring Specific Gravity and Temperature Readings

1. On the CRT-400, select a cell data file to transfer **Specific Gravity** and **Temperature** readings into. This can be readings that already exist in memory or you can open a previously saved set of readings from the USB flash drive.


2. From the **Main Menu**, select **Test Mode/F1**.

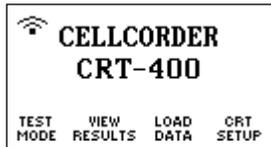


3. From the **Test Mode** menu, select **F3-S.G./Temp.**

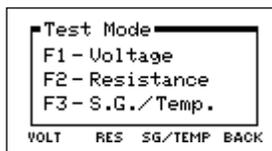

4. From the **SG/Temp** screen, select **Import** by pressing **F2**.

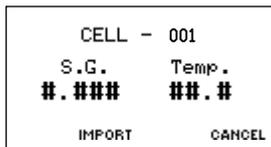


5. On the **Data Module**, select a channel (**A-H**) of data to transfer.

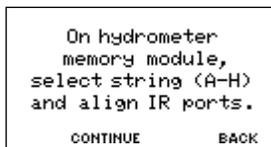


6. Align the **Data Module** and **CRT-400 IR port**.

7. On the CRT-400 press **F2** for **Continue**.

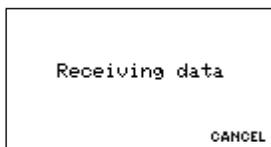

8. When transfer is done, the **S.G./Temp.** value from Cell 1 appears.

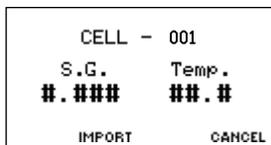

9. Select **Import/F2** to save the file to the USB flash drive.

## Saving the Readings

### Saving New Data Readings to the USB Flash Drive

1. Make sure the Cellcorder has been charged properly.
2. The USB flash drive may be placed into the left side USB port on the Cellcorder before or after the Cellcorder is powered on.
3. Follow the prompts on the Cellcorder's LCD accordingly.
4. When prompted to save readings to USB flash drive, select **Yes/F1**.
5. Follow the prompts and enter the file name and select **Save/F2**.
6. If the file already exists, a **Warning** displays, asking for overwrite confirmation. Press **F1** to overwrite the file or **F2** to enter a new file name.
7. The USB flash drive has now stored the new data.

**Note:** Do not remove the USB flash drive while accessing data, writing to a file, reading information, etc.


### Warning

Never leave the USB flash drive plugged into the Cellcorder when performing tests or while the Cellcorder is connected to a battery for testing.


Readings cleared from Cellcorder temporary storage cannot be retrieved unless they have been saved to the USB flash drive or PC.

### Loading Data Readings from the USB Flash Drive


1. Insert a USB flash drive with readings into the Cellcorder. From the Main Menu, select **F3-Load Data**.

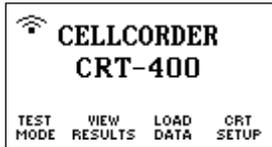

2. Select **F2-Cell Data**.

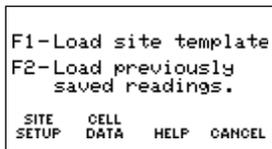

3. **Select-F2** the file from the list provided.

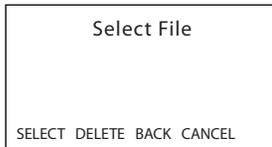

### Recommended Steps to Save CAL-K

The **CAL-K** are calibration constants that are utilized for calibration correction during calibration. In the event these constants are lost, they can be restored easily.



It is highly recommended that the calibration constants are saved to the USB flash drive.

To save the constants:

1. Make sure the CRT is powered on.
2. Select **Shift**, then the number **7** from the keypad.
3. Enter the password '**1234**' and press **Enter**.
4. Select **Calibration** by pressing the number **1** on the keypad.
5. Choose **CAL-K** by selecting **F2**.
6. Select **F2** once again to confirm the **Backup**.
7. Enter a File Name and select **F2** to so **Save**.

### Using the *Bluetooth*® Headset

1. Make sure the CRT and the *Bluetooth* wireless headset are charged properly.
2. Power the *Bluetooth* headset on.
3. Power the CRT on. The CRT automatically attempts to connect to the last stored wireless device when powered on.
4. To connect manually to a stored headset, select **CRT Setup/F4** and use the down arrow key to go to **F3-Bluetooth**, press **F3**.

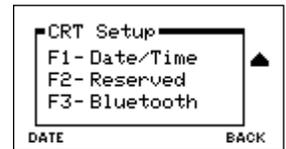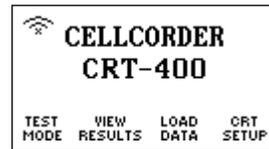


5. The last stored device will display, press **F2** to connect.
6. When connecting to a new headset:
  - a. Press **F1-New**.
  - b. Now press **F1-Headset**.
  - c. Place the *Bluetooth* device in discovery mode.
  - d. Press **F2** to **Continue**.
  - e. When *Bluetooth* devices are found, a list is populated.



Use the arrow keys to select the desired *Bluetooth* device and press **F1**.

7. Once the *Bluetooth* headset and the CRT are connected, press **F1-Test Mode**.
8. Choose the desired test by pressing either **F1**, **F2**, or **F3**.

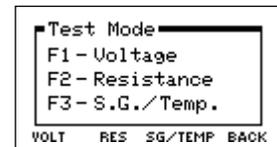

9. Place the *Bluetooth* headset on your ear for test status information.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc and any use of such marks by Alber is under license. Other trademarks and trade names are those of their respective owners.

## Files Used by the CRT-400 Cellcorder and Battery Analysis System (BAS) Program


There are many file types used with the Cellcorder and BAS program, and they are fully described in the user's guides. This section describes the two most common file types.

### .CDF Cell Data File -


Created by the CRT-400 when saving readings to the USB flash drive. It is the transport file that gets data from the CRT-400 to the computer. This file contains one set or multiple sets (if in multi-string mode) of readings for a complete string of batteries. The Battery Analysis System (BAS) program imports this file into an ADF file.

### .ADF Accumulated Data File -

Contains sets of readings that were imported from CDF files. One ADF file can contain many CDF files from the same string. This gives the BAS program the ability to trend over many sets (different dates) of data. Create one ADF file for each string or one battery with parallel strings. Every time readings are taken for that string, import the data in the CDF file into the ADF file.

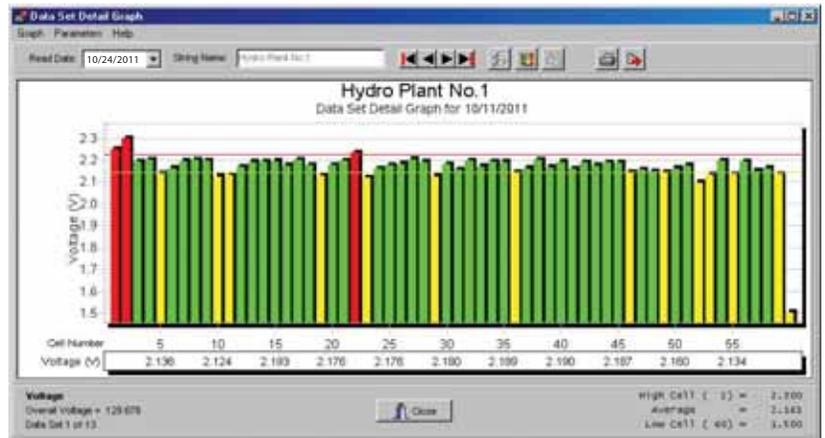

## Importing a CDF File into an ADF File

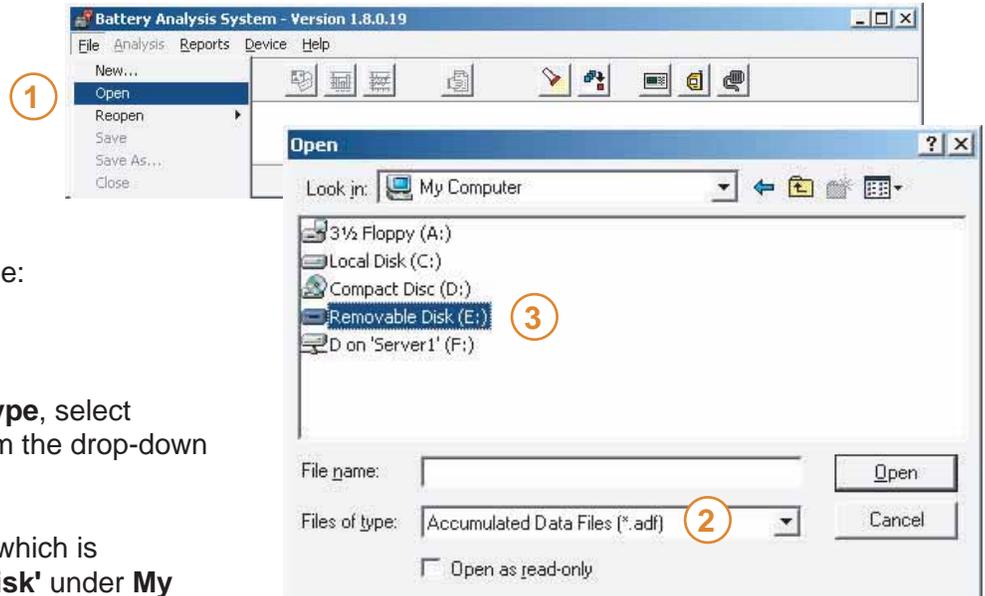



To import a **CDF** file into an **ADF** file:

1. Select **File** then **Open**.
2. In the **Open** dialog box at **File Type**, select **Cellcorder Data File (\*.cdf)** from the drop-down list.
3. Navigate to the USB flash drive which is normally labeled '**Removable Disk**' under **My Computer**.
4. In the **Confirmation** dialog box, click **Import to Existing File** or **Create New File**. Both buttons refer to an **ADF** file.

**Note:** If this is the first time importing, click **Create New File** and then, each time you take additional readings for that string, click **Import to Existing File** and select the appropriate previously-created ADF file.

If **Import to Existing File** is selected, navigate to the desired **ADF** file and select it. The new data will be added to the existing data as a new read date when viewing the readings.

If **Create New File** is selected, the **Configuration Information** dialog box appears. This box can be configured using the **CRT-400 template** setup or with the configurator in the program. You can change or add information by using **File** then **Properties**.

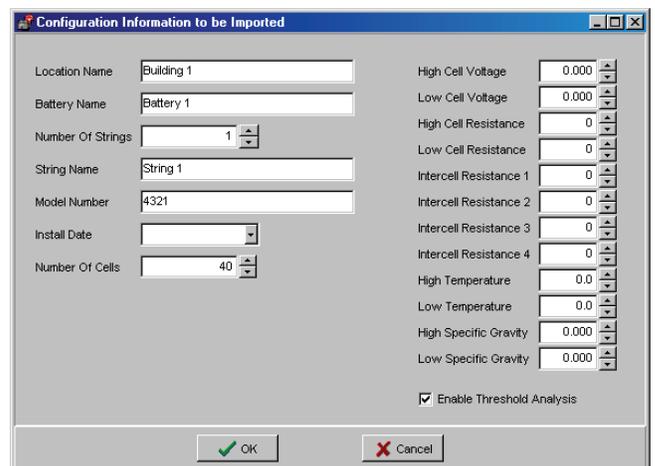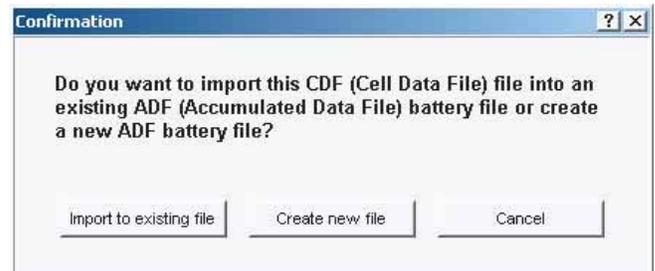

## Viewing Battery File Properties


This page describes the five **File Properties** pages, which you may use to edit battery data. Open a file, click **File** then **Properties**. You must click **File** then **Save** to save changes.

The **General** page shows details and allows editing of these details, such as location name, battery name, number of strings, string name, battery model, temperature scale, installation date and number of cells/jars. The temperature scale and number of cells will affect the battery data file. The number of data sets, most recent read date, overall voltage, and average resistance are also shown on the general page.


**Note:** Do not use identical battery names in the same location name or identical string names in the same battery name.




The **Details** page displays a table of values for all cells with data. Columns display cell number, cell voltage, internal resistance, intercell R1 to R4 resistance, specific gravity, and temperature. This list view can display cell data in colors based on threshold values, and intertier cell data in bold.

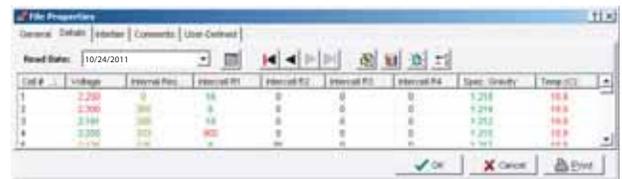

The **Intertier** page manually or automatically marks cells in a battery as intertier cells to indicate they are on the boundary of an intertier connection. By convention, only the cell with the lower cell number is marked. For example, if Cell 10 is the last cell of one string and connected to Cell 11, which is the first cell of the next string, only Cell 10 is marked as an intertier cell.

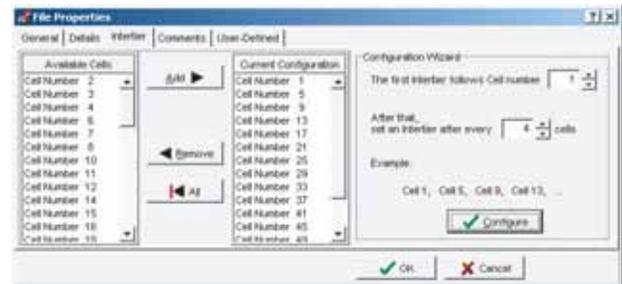

The **Comments** page has a text editor for typing comments, such as the date and type of readings taken or when connectors were cleaned. The **Select a New Read Date** dialog box lets you associate comments with a read date. To save a **Comments** page as a template, click the **Save As New Comment Template** button.

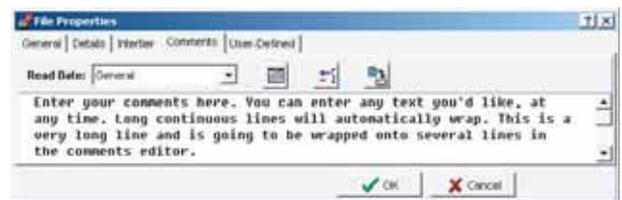

Use the **User-Defined** page to list reference notes. The notes, which can be included in reports, might identify pilot cells or equipment such as chargers.



## Viewing Battery Readings

To show a graph of an **ADF Battery File**: Click **File** then **Open** on the main menu and select a file name, then click **Analysis, Data Set** then **Detail**. To enlarge a graph area, drag a rectangle across it. To return to normal size, right-click the graph and click **Undo Zoom**.


View voltage, resistance, intercell resistance, temperature or SG.

Set threshold display properties and the graph scale.


View different data sets by selecting a date from the list.

Print the graph.

Export to a file or the clipboard.

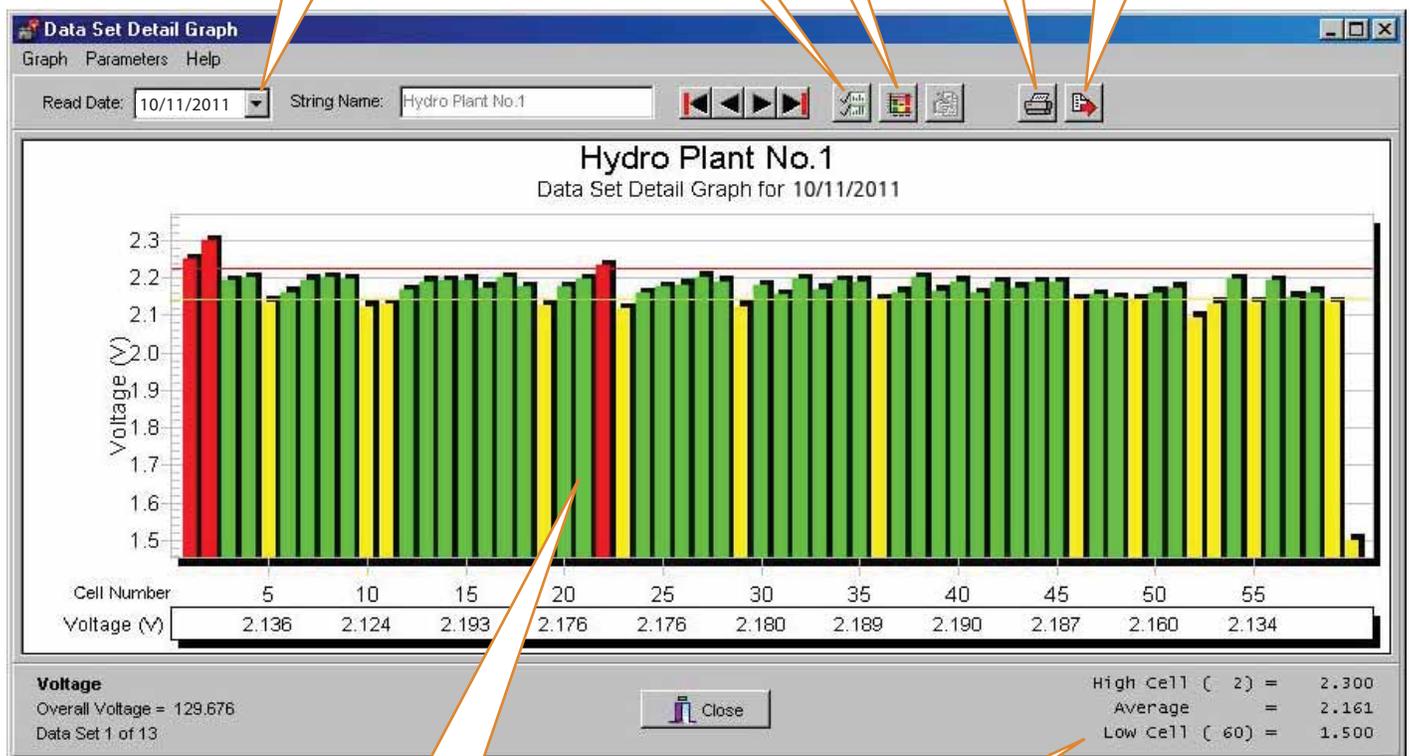

Shows the minimum, maximum and average values of the readings.

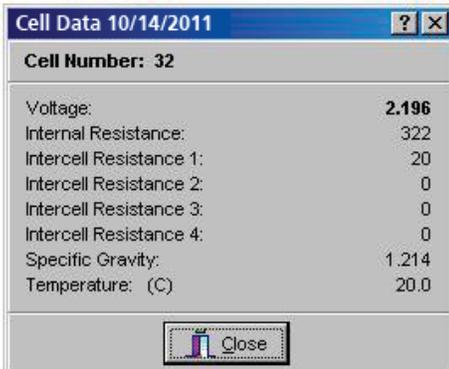


### Bar Graph Cell Data

To display text data for a cell, click on a bar. The **Cell Data** box shows **Cell Number, Cell Voltage, Internal Resistance, Intercell Resistance, Specific Gravity** and **Temperature** when available.

## Trending a Parameter Over Time

Trending a specific parameter can help identify a problem:


1. Open a file with at least two data sets and click the **View Battery Data Set Graphs** button.
2. Click a cell in the graph, then click **Parameters, Trend then Cells**.
3. Click the **Select Which Parameters Appear in Graph** button.
4. On the **Data Subsets** box, select **Internal Resistance** only. A **Battery Cell Trend Graph** displays the cell values over time.
5. Click a data point or date to display details in the **Cell Data** box. If the box does not appear, enable it under **File then Preferences**.

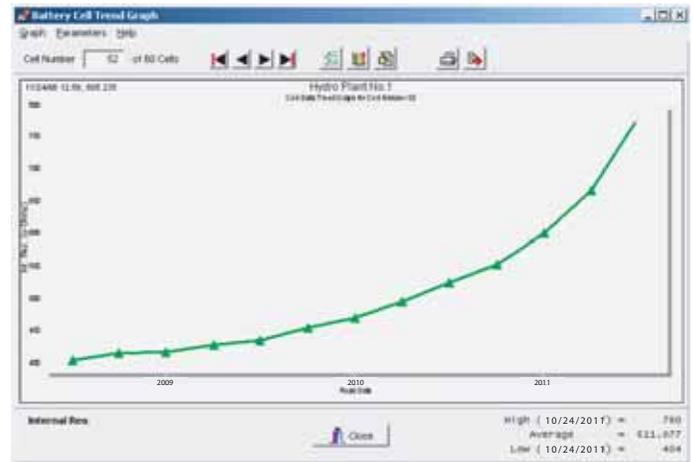

## Trending a Parameter Average Over Time

Trending a parameter average helps identify inconsistencies in a battery system, and trending internal resistance averages helps determine a battery's end of life. The average summaries on the internal resistance screen are calculated to reduce false averages. The calculation eliminates cells above or below the true average by 25%, and then recalculates a new Modified Average.

1. Open a file with at least two Data Sets and click the **View Battery Data Set Graphs** button.
2. Click a cell in the graph, then click **Parameters, Trend then Cell Averages**.
3. Click the **Select Which Parameters Appear in Graph** button.
4. On the **Data Subsets** box, select **Internal Resistance** only. A **Battery Cell Averages Trend Graph** displays internal resistance over time.
5. Click a data point or date to display details in the **Cell Data** box.

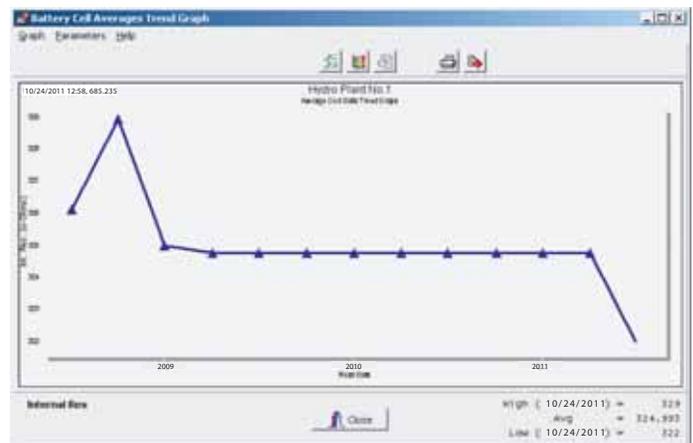



# Alber Cellcorder™ CRT-400

## User's Guide



Albercorp  
7775 West Oakland Park Blvd  
Sunrise, FL 33351  
Tel: (954) 377-7101 Fax: (954) 377-7042  
[www.alber.com](http://www.alber.com)  
4200-070

## Copyright and Disclaimer

### Cellcorder CRT-400 User's Guide

Document Revision	3
Part Number	4200-070

### Revision History

Revision	Date of Change	Description of Change	By
1.00	01/21/07	Original document	LL, ED
1.01	06/16/2011	Format entire document. Edit grammar. <i>Bluetooth</i> updates	MS
1.02	08/16/2013	Added charge information note. Updated the import/export file types.	MS
1.03	02/17/2014	Removed safety information that is not associated with the CRT-400 in section 1.	MS
1.04	06/23/2015	Added new address and phone number.	MS
2	4/1/2016	Updated revision number from 1.04 to 2. This was done so documentation can be added to the Agile/LES system. Updated the copyright year from 2015 to 2016.	
3	10/14/16	Added WEEE logo	DI

Albér Cellcorder User's Guide Part Number 4200–070

©2016 Albécorp. All rights reserved.

Albécorp, 7775 West Oakland Park Blvd, Sunrise, FL 33351 USA.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording for any purpose, without the express written permission of Albécorp.

Information in this document is subject to change without notice.

### Trademarks

The first instances of registered trademarks or trademarks of Albécorp and other companies are annotated above using the ® and ™ symbols. For ease of reading, these symbols do not appear in the remainder of this Guide.

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth* SIG, Inc and any use of such marks by Alber is under license. Other trademarks and trade names are those of their respective owners.

Printed in the United States of America.

## Alber Customer Service

Alber Customer Service is available Monday to Friday, 8:00AM to 4:30PM Eastern Time.

Telephone: (954) 377-7101  
Fax: (954) 377-7042  
Email: [service@alber.com](mailto:service@alber.com)  
Website: [www.alber.com](http://www.alber.com)

Corporate Office Address:  
Albercorp  
7775 West Oakland Park Blvd  
Sunrise, FL 33351 USA



### EUROPEAN UNION CUSTOMER NOTICE: Disposal of Old Appliances\*

This product uses components that are dangerous for the environment, such as electronic cards and other electronic components. Any component that is removed must be taken to specialized collection and disposal centers. If this unit must be dismantled, this must be done by a specialized center for collection and disposal of electric and electronics appliances or other dangerous substances. This product has been supplied from an environmentally aware manufacturer that complies with the Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC. The "crossed-out wheeled bin" symbol to the left is placed on this product to encourage you to recycle wherever possible.

Please be environmentally responsible and recycle this product through your recycling facility at its end of life. Do not dispose of this product as unsorted municipal waste. Follow local municipal waste ordinances for proper disposal provisions to reduce the environmental impact of waste electrical and electronic equipment (WEEE) Directive 2012/19/EU.

For information regarding the scrapping of this equipment, go to [www.eu.emersonnetworkpower.com](http://www.eu.emersonnetworkpower.com) ("Products" or "Contact us" sections) or call Emerson's worldwide technical support at: **00 8001154499 (Toll free number)** or **+39 0298250222 (Toll number based in Italy)**

*\*This notice only applies to 50Hz units placed on the European Union market.*

---

## SOFTWARE LICENSE AGREEMENT

**READ THESE TERMS AND CONDITIONS CAREFULLY BEFORE ATTEMPTING TO DOWNLOAD, INSTALL, OR USE THE SOFTWARE. BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE, YOU AGREE TO BE BOUND BY THESE TERMS AND CONDITIONS. IF YOU DO NOT ACCEPT THESE TERMS AND CONDITIONS, DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE. IN SUCH A CIRCUMSTANCE, THE SOFTWARE MAY BE RETURNED WITHIN THIRTY (30) DAYS OF YOUR RECEIPT FOR A FULL SOFTWARE REFUND. YOU REPRESENT THAT YOU (I) ARE NOT LOCATED IN, UNDER THE CONTROL OF, OR A NATIONAL RESIDENT OF ANY COUNTRY TO WHICH THE UNITED STATES HAS EMBARGOED GOODS, (II) ARE NOT ON THE U.S. TREASURY DEPARTMENT'S LIST OF SPECIALLY DESIGNATED NATIONALS, (III) ARE NOT ON THE U.S. COMMERCE DEPARTMENT'S LIST OF DENIED PERSONS, OR (IV) ARE NOT OTHERWISE PROHIBITED BY U.S. LAW FROM RECEIVING OR USING THE SOFTWARE (COLLECTIVELY "EXPORT RESTRICTIONS"). IF YOU DO NOT HAVE AUTHORITY TO ACCEPT THIS AGREEMENT FOR YOUR ORGANIZATION, IT IS YOUR OBLIGATION TO ENSURE THAT AN AUTHORIZED INDIVIDUAL MAKES THE DETERMINATION THAT YOUR ORGANIZATION IS NOT SUBJECT TO THE ABOVE EXPORT RESTRICTIONS PRIOR TO DOWNLOADING, INSTALLING, OR USING THE SOFTWARE.**

This Software License Agreement ("Agreement") is a legal agreement between you and Albér Corp., a Florida, United States of America, corporation, ("Albér"). Albér's software, including enhancements, upgrades, and any future releases, if provided, is made available exclusively for use with the associated Albér products (the "Products"). The foregoing, including any accompanying program(s), documentation, images, animation, and text incorporated therein, (collectively "Software"), is provided solely for commercial and industrial use under the license terms specified herein.

**GRANT OF RIGHTS:** Provided that you comply with all of the terms of this Agreement, Albér grants a non-exclusive, non-transferable license to you to install and use the Software solely for use with Products as provided for herein. You represent and warrant that you will not use the Software in violation of applicable laws and regulations or where such use detrimentally affects Albér's rights in the Software or subjects Albér to liability. You assume responsibility for the selection of the Software to achieve your intended results, and for the installation, use, and the results obtained from the Software. Provided that you have paid the applicable license fees, you may use (i) BMDM with SQL, on one server on one site, with a maximum of two hundred (200) users; (ii) all other Software, an unlimited number users per site. Any other operation of the Software at any time shall constitute a material breach of this Agreement and shall terminate this license as provided for below. By use of the Software, you agree that Albér may, at its option, perform an audit of your usage of the Software to determine the number of servers and Products that are using the Software.

**TERMINATION OF LICENSE:** Your license is automatically terminated if you: (1) use the Software with anything other than Products, (2) attempt to copy or reconstruct any part of the object code, source code, or algorithms, (3) attempt to decompile, disassemble or reverse engineer the Software, in whole or in part, or otherwise attempt to derive the source code of the Software, (4) provide, disclose, sell, rent, lease, license, sublicense, or otherwise transfer or assign the Software to any third party, (5) use the Software in excess of the licensed coverage purchased, (6) write or develop any derivative software or any other software program based upon the Software, (7) modify or alter the Software, or (8) fail to comply with any other license terms. You may elect to terminate this license at any time by destroying the Software together with all copies and any portions thereof in any form.

**LIMITED WARRANTY:** Albér represents that it has the right and authority to grant the license herein. Albér warrants solely to you for a period of thirty (30) days from the date of Albér shipment or distribution that the distribution media (if supplied) on which the Software is furnished under normal use will be free from defects in material and workmanship and the Software will substantially conform to Albér published

documentation. EXCEPT FOR THE ABOVE EXPRESS WARRANTIES, THIS SOFTWARE IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR INTENDED PURPOSE. ALBÉR DOES NOT WARRANT THAT THE SOFTWARE FUNCTIONS WILL MEET YOUR REQUIREMENTS OR THAT THE SOFTWARE WILL OPERATE UNINTERRUPTED OR ERROR FREE.

**LIMITATION OF REMEDIES:** Albér's entire liability and your exclusive remedy arising from use or inability to use the Software is:(1) The replacement of any distribution media not meeting Albér's warranty, or (2) If Albér is unable to provide you a replacement that conforms to Albér's warranty, to refund the purchase price. **THE REMEDIES SET FORTH IN THIS AGREEMENT ARE EXCLUSIVE.**

**LIMITATION OF DAMAGES: IN NO EVENT, REGARDLESS OF THE FORM OF THE CLAIM OR CAUSE OF ACTION (WHETHER BASED IN CONTRACT, INFRINGEMENT, NEGLIGENCE, STRICT LIABILITY, OTHER TORT, OR OTHERWISE), SHALL ALBÉR'S LIABILITY TO YOU EXCEED THE PRICE PAID BY YOU FOR THE SOFTWARE. YOU AGREE THAT ALBÉR'S LIABILITY TO YOU SHALL NOT EXTEND TO INCLUDE SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES EVEN IF ALBÉR IS ADVISED OF THE POSSIBILITY OF THESE DAMAGES.** The term "consequential damages" shall include, but not be limited to, loss of anticipated profits, business interruption, loss of use, revenue, reputation and data, costs incurred, including without limitation, for capital, fuel, power and loss or damage to property or equipment. You acknowledge that this Agreement reflects this allocation of risk.

**COPYRIGHT:** This Software is the proprietary property of Albér and/or its suppliers and is protected by United States copyright laws, other applicable copyright laws, and international treaty provisions. Title and ownership of all copyrights to the Software remain in Albér or third parties. Accordingly, your rights to use, copy and modify the Software are strictly limited to the specific rights provided in this Agreement or as may otherwise be required by applicable copyright law.

**U.S. GOVERNMENT RESTRICTED RIGHTS:** This Software is developed at private expense and is provided with "Restricted Rights." Use, duplication, or disclosure by the United States Government is subject to restrictions set forth in the Federal Acquisition Regulations and its Supplements.

**ASSIGNMENT:** You may not sublicense, assign, or otherwise transfer this license of the Software without the prior written consent of Albér. Any such transfer of rights, duties, or obligations is void and terminates this Agreement.

**EXPORT RESTRICTIONS:** You may not export the Software in violation of applicable export laws and regulations of the applicable countries. You agree to comply with all laws, regulations, decrees and orders of the United States of America that restrict the exportation (or re-exportation) of the Software to other countries, including, without limitation, the U.S. Export Administration Regulations.

**UPDATE POLICY:** Albér may create, from time to time, updated versions of the Software. Albér reserves the right to make changes to or improvements in any aspect of the Software at any time without prior notice to you and without an obligation to supply such changed and/or improved Software to you.

**NUCLEAR/MEDICAL:** THE SOFTWARE IS NOT FOR USE IN CONNECTION WITH ANY NUCLEAR, MEDICAL, LIFE-SUPPORT, AND RELATED APPLICATIONS. You agree to defend, indemnify, and hold harmless Albér from any claims, losses, suits, judgments and damages, including incidental and consequential damages, arising from such use, whether the cause of action be based in tort, contract or otherwise, including allegations that the Albér's liability is based on negligence or strict liability.

**JAVA SUPPORT:** The Software may contain support for programs written in Java. Java Technology is not fault tolerant and is not designed, manufactured, or intended for use or resale as online control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear

facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of java technology could lead directly to death, personal injury, or severe physical or environmental damage.

**COMPLETE AGREEMENT/GOVERNING LAW/VENUE:** This Software license agreement comprises the final and complete agreement between the parties. No person is authorized to change or modify this Agreement except an executive officer of Alber Corporation and then only in writing. The laws of the United States and the State of Florida shall apply to this Agreement and its interpretation without reference to choice or conflict of laws principles. Alber and you hereby irrevocably submit to the personal and subject matter jurisdiction of any State of Florida or federal court sitting in Miami, Florida, in any action or proceeding arising from or relating to this Agreement. If any provision of this Agreement is held to be void, invalid, unenforceable, or illegal, the other provisions shall continue in full force and effect.

**FCC DECLARATION OF CONFORMITY**

This notice is applicable to Product/System/Hardware/Equipments with the Radio Frequency RF headset communication option installed for *Bluetooth* communication. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (i) This device may not cause harmful interference
- (ii) This device must accept any interference received, including interference that may cause undesired operations

---

## LIMITED WARRANTY FOR ALBÉR PRODUCTS

This Warranty is given ONLY to purchasers who buy for commercial or industrial use in the ordinary course of each purchaser's business.

### General:

Albér Corp. products and systems are, in our opinion, the finest available. We take pride in our products and are pleased that you have chosen them. Under certain circumstances, we offer with our products the following One Year Warranty Against Defects in Material and Workmanship.

Please read your Warranty carefully. This Warranty sets forth our responsibilities in the unlikely event of defect and tells you how to obtain performance under this Warranty.

### ONE YEAR LIMITED WARRANTY AGAINST DEFECTS IN MATERIAL AND WORKMANSHIP

#### ALBÉR PRODUCTS COVERED:

BDS-40, BDS 256XL, BDSU, and MPM-100.

#### Terms of Warranty:

As provided herein, the Albér product is warranted to be free of defects in material and workmanship for a period of twelve (12) months from date of commissioning, not to exceed eighteen (18) months from date of shipment, provided that startup is performed by Albér authorized personnel, and the product has been stored in a suitable environment prior to start-up. The start-up date will be determined only from the completed ASCOMP file provided to Albér from User and accepted by Albér. The product shipment date will be determined only from the Albér bill of lading. If any part or portion of the Albér product fails to conform to the Warranty within the Warranty period, Albér, at its option, will furnish new or factory remanufactured products for repair or replacement of that portion or part.

#### Warranty Extends to First Purchaser for Use. Non-transferable:

This Warranty is extended to the first person, firm, association or corporation for whom the Albér product specified herein is originally installed for use (the "User"). This Warranty is not transferable or assignable without the prior written permission of Albér.

#### Assignment of Warranties:

Albér assigns to User any warranties which are made by manufacturers and suppliers of components of, or accessories to, the Albér product and which are assignable, but Albér makes NO REPRESENTATIONS as to the effectiveness or extent of such warranties, assumes NO RESPONSIBILITY for any matters which may be warranted by such manufacturers or suppliers and extends no coverage under this Warranty to such components or accessories.

#### Drawings. Descriptions:

Albér warrants for the period and on the terms of the Warranty set forth herein that the Albér product will conform to the descriptions contained in the approved drawings, if any, applicable thereto, to Albér's final invoices, and to applicable Albér product brochures and manuals current as of the date of product shipment ("Descriptions"). Albér does not control the use of any Albér product. Accordingly, it is understood that the Descriptions are NOT WARRANTIES OF PERFORMANCE and NOT WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE.

#### Warranty Claims Procedure:

Within a reasonable time, but in no case to exceed thirty (30) days after User's discovery of a defect, User shall contact Albér at 1-800-851-4632.

User shall ship the product, with proof of purchase, to Albér freight prepaid. Albér products shipped to Albér without a return authorization number will be refused and returned freight collect to User at User's expense. Products shipped by User to Albér which have incurred freight damage due to User's improper packaging of the product will not be covered by this Warranty and any replacement parts, components or products needed will be invoiced in the full current price amount and returned freight collect to User.

Subject to the limitations specified herein, Albér will replace, without charge for Albér labor or materials, subsequent to its inspection, and return freight prepaid F.O.B. Albér's facility, the product shipped to Albér with a return authorization number and warranted hereunder which does not conform to this Warranty.

Warranty coverage will be applicable only after Albér's inspection discloses the claimed defect and shows no signs of treatment or use that would void the coverage of this Warranty. All defective products and component parts replaced under this warranty become the property of Albér.

#### Warranty Performance of Component Manufacturers:

It is Albér's practice, consistent with its desire to remedy Warranty defects in the most prompt and effective manner possible, to cooperate with and utilize the services of component manufacturers and their authorized representatives in the performance of work to correct defects in the product components. Accordingly, Albér may utilize third parties in the performance of Warranty work, including repair or replacement hereunder, where, in Albér's opinion, such work can be performed in less time, with less expense, or in closer proximity to the Albér product.

#### Items Not Covered By Warranty:

THIS WARRANTY DOES NOT COVER DAMAGE OR DEFECT CAUSED BY misuse, improper application, wrong or inadequate electrical current or connection, negligence, inappropriate on site operating conditions, repair by non-Albér designated personnel, accident in transit, tampering, alterations, a change in location or operating use, exposure to the elements, Acts of God, theft or installation contrary to Albér's recommendations or specifications, or in any event if the Albér serial number has been altered, defaced, or removed.

THIS WARRANTY DOES NOT COVER shipping costs, installation costs, or maintenance or service items and further, except as may be provided herein, does NOT include labor costs or transportation charges arising from the replacement of the Albér product or any part thereof or charges to remove or reinstall same at any premises of User.

REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR PART THEREOF DOES NOT EXTEND THE ORIGINAL WARRANTY PERIOD.

**Limitations:**

- THIS WARRANTY IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.
- USER'S SOLE AND EXCLUSIVE REMEDY IS REPAIR OR REPLACEMENT OF THE ALBÉR PRODUCT AS SET FORTH HEREIN.
- IF USER'S REMEDY IS DEEMED TO FAIL OF ITS ESSENTIAL PURPOSE BY A COURT OF COMPETENT JURISDICTION, ALBÉR'S RESPONSIBILITY FOR PROPERTY LOSS OR DAMAGE SHALL NOT EXCEED THE NET PRODUCT PURCHASE PRICE.
- IN NO EVENT SHALL ALBÉR ASSUME ANY LIABILITY FOR INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES OF ANY KIND WHATSOEVER, INCLUDING WITHOUT LIMITATION LOST PROFITS, BUSINESS INTERRUPTION OR LOSS OF DATA, WHETHER ANY CLAIM IS BASED UPON THEORIES OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, TORT, OR OTHERWISE.

**Miscellaneous:**

- NO SALESPERSON, EMPLOYEE OR AGENT OF ALBÉR IS AUTHORIZED TO ADD TO OR VARY THE TERMS OF THIS WARRANTY. Warranty terms may be modified, if at all, only by a writing signed by a Albér officer.
- Albér obligations under this Warranty are conditioned upon Albér timely receipt of full payment of the product purchase price and any other amounts due. During the period when any amounts are overdue from User, Albér warranty obligations shall be suspended. The warranty expiration date shall not be extended upon payment of the overdue amount. Albér reserves the right to supplement or change the terms of this Warranty in any subsequent warranty offering to User or others.
- In the event that any provision of this Warranty should be or becomes invalid and/or unenforceable during the warranty period, the remaining terms and provisions shall continue in full force and effect.
- This Warranty shall be governed by, and construed under, the laws of the State of Florida, without reference to the conflict of laws principles thereof.
- This Warranty represents the entire agreement between Albér and User with respect to the subject matter herein and supersedes all prior or contemporaneous oral or written communications, representations, understandings or agreements relating to this subject.



---

## Table of Contents

---

1.	Safety Information .....	1-1
1.1.	General.....	1-1
1.2.	Document Symbols .....	1-1
1.3.	Safety Symbols .....	1-2
1.4.	Product Safety Practices .....	1-2
2.	Preventive Maintenance.....	2-1
2.1.	Visual Inspection .....	2-1
2.2.	Cleaning System Components .....	2-1
2.3.	Internal Component Replacement.....	2-1
2.4.	Shipping, Storage, Normal Use Protection .....	2-1
3.	Product Overview .....	3-1
3.1.	BAS Software.....	3-1
3.2.	Cellcorder Serial Number.....	3-1
3.3.	Features .....	3-1
3.4.	Cellcorder CRT-400 .....	3-5
3.5.	Panel Controls and Indicators .....	3-8
3.6.	Specifications .....	3-15
4.	Before Using The CRT-400 .....	4-1
4.1.	Highly Recommended Reading .....	4-1
4.2.	Charging the Cellcorder Battery.....	4-1
4.3.	Test Lead Connection Practices .....	4-3
4.4.	Understanding the USB Port and Flash Hard Drive .....	4-3
4.5.	Understanding <i>Bluetooth</i> <sup>®</sup> .....	4-6
5.	Getting Ready to Test Batteries with the CRT-400 .....	5-1
5.1.	Power .....	5-1
5.2.	Basic Main Menu Functions.....	5-1
5.3.	Navigation .....	5-3
5.4.	The Baseline Resistance Data File on USB .....	5-3
5.5.	Insert the USB Device Into the CRT.....	5-3
5.6.	How to Edit Items within the Site Template .....	5-4
5.7.	Deselecting a Site .....	5-8
5.8.	Next Steps, Battery Selection.....	5-8
6.	Taking Float Voltage Readings First .....	6-1

---

6.1.	F4/Done Voltage Testing.....	6-2
6.2.	Stored In Memory Explained .....	6-2
6.3.	Resume Testing Explained .....	6-3
7.	Setting Up To Take Resistance Readings .....	7-1
7.1.	Check/Set Amp Hours .....	7-3
7.2.	Set Intercell Connections .....	7-3
8.	Taking Resistance Readings .....	8-1
8.1.	Resistance Readings.....	8-1
9.	Connecting Resistance Test Leads .....	9-1
9.1.	Connection for Single Intercell Connectors .....	9-1
9.2.	Connection for Dual Post Cells – Example One.....	9-2
9.3.	Connection for Dual Post Cells – Example Two .....	9-3
9.4.	Connections for Triple Post Cells .....	9-4
9.5.	Performing a Resistance Test.....	9-5
9.6.	Moving Probes from Cell to Cell .....	9-6
9.7.	When No Float Voltages Exist .....	9-7
10.	Understanding Voltage Skewing Effect.....	10-1
11.	Using the CRT-400 as a Digital Voltmeter .....	11-1
12.	The Hydrometer and the Data Logger .....	12-1
12.1.	Setting Up the CRT for Hydrometer Usage .....	12-2
12.2.	Taking Readings with the Hydrometer .....	12-4
12.3.	Transferring Hydrometer Data to Computer .....	12-6
13.	Setting Up the CRT .....	13-1
13.1.	Selecting a Battery .....	13-2
13.2.	Reading USB .....	13-2
13.3.	Selecting a Manufacturer.....	13-2
13.4.	Selecting a Model.....	13-2
13.5.	Setting Thresholds.....	13-3
13.6.	Setting Thresholds without a Site File.....	13-4
13.7.	Clearing Memory.....	13-6
13.8.	Displaying Additional Functions.....	13-8
13.9.	Sound Adjustment .....	13-9
13.10.	Frequency.....	13-9
13.11.	Adjusting Date and Time.....	13-10
13.12.	Reserved.....	13-10

---

13.13.	Setting Up Bluetooth Wireless Communication .....	13-10
14.	Setting Up and Editing a Site Template .....	14-1
15.	Working with Files.....	15-1
15.1.	Saving Readings and Files to the USB Flash Hard Drive .....	15-1
15.2.	File Types Located on the USB Flash Hard Drive.....	15-2
15.3.	Appending to an Existing File .....	15-9
15.4.	Storing Data for Multiple Strings .....	15-11
15.5.	Deleting a File from the USB Flash Hard Drive.....	15-11
15.6.	Sending Readings Via IR .....	15-12
15.7.	Sending Readings Via <i>Bluetooth</i> Wireless.....	15-15
16.	Viewing Results .....	16-1
16.1.	Viewing Status.....	16-1
16.2.	Viewing the Overall Voltage Data .....	16-1
17.	Using Diagnostics .....	17-1
17.1.	Testing Keypad.....	17-1
17.2.	A/D Linearity .....	17-3
18.	Utilizing CRT-400 Service Menu .....	18-1
18.1.	Entering the Password .....	18-1
18.2.	Changing the Password.....	18-3
18.3.	Error Codes.....	18-4
18.4.	Battery Maintenance Schedule.....	18-4
18.5.	Upgrading Firmware .....	18-5
19.	Application Note CC-001 .....	19-1
20.	Application Note CC-002-A.....	20-1
21.	Cellcorder Connection Options.....	21-1
22.	Cellcorder Jaw Options .....	22-1
23.	Index.....	23-1

---

## List of Figures

---

Figure 1 - Serial Number Location and Label .....	3-2
Figure 2 - Cellcorder Right Panel Connector/Infrared .....	3-2
Figure 3 - Cellcorder Left Panel Connector/Test Lead and USB .....	3-3
Figure 4 - CRT Front Panel Diagram Left.....	3-8
Figure 5 - CRT Front Panel Diagram Right.....	3-9
Figure 6 - Top Panel LED Indicators.....	3-10
Figure 7 - Keypad .....	3-10
Figure 8 - Trans–reflective LCD Display .....	3-12
Figure 9 - Top Panel Controls, F1, F2, F3, and F4.....	3-12
Figure 10 - Back Panel/Telco/Reset Switch/Power .....	3-14
Figure 11 - Green LED Charge Indicator .....	4-1
Figure 12 - USB Device.....	4-4
Figure 13 - My Computer/Eject.....	4-4
Figure 14 - Safely Remove Hardware Window.....	4-5
Figure 15 - Confirmation To Stop Hardware Device .....	4-5
Figure 16 - CRT-400 Main Menu on LCD with F1, F2, F3 and F4 buttons .....	5-1
Figure 17 - CRT-400 F1, F2, F3 and F4 buttons .....	5-2
Figure 18 - CRT-400 Power and Arrow buttons .....	5-3
Figure 19 - CRT-400 with USB Flash Hard Drive.....	5-4
Figure 20 - CRT-400 Keypad Buttons.....	5-5
Figure 21 - CRT-400 Load Data Functions .....	5-5
Figure 22 - Deselecting a Site.....	5-8
Figure 23 - CRT Set up.....	5-9
Figure 24 - CRT Test Mode.....	5-9
Figure 25 - Connect Voltage Test Leads .....	6-1
Figure 26 - CRT - Test Mode .....	6-1
Figure 27 - Placement of Probes on Cells.....	6-2
Figure 28 - Resistance Test Lead Assembly Clamps.....	7-1
Figure 29 - Insert Resistance Test Leads Left Side CRT.....	7-1
Figure 30 - CRT-Test Mode/F1 .....	7-2
Figure 31 - Quad Testing .....	7-4
Figure 32 - CRT-Test Mode/F1 .....	8-1
Figure 33 - Single Intercell Connectors .....	9-1
Figure 34 - Connections For Dual Post Cells – Example One .....	9-2
Figure 35 - Connections for Dual Post Cells – Example Two.....	9-3
Figure 36 - Connections For Trip Post Cells – One.....	9-4
Figure 37 - Connections for Trip Post Cells – Two.....	9-4
Figure 38 - Connections for Trip Post Cells – Three.....	9-5
Figure 39 - CRT–Test Mode/F1 .....	11-1
Figure 40 - Hydrometer, Data Logger, PC, CRT, USB Interaction.....	12-1
Figure 41 - CRT–CRT Setup/F4.....	12-2
Figure 42 - CRT–Thresholds F4/F2.....	12-2
Figure 43 - CRT–Main Menu/Load Data/F3 .....	12-4
Figure 44 - Data Logger.....	12-6

Figure 45 - CRT–Main Menu with F Buttons for CRT Setup/F4 .....	13-1
Figure 46 - CRT– Setup/Bat. Select–F4/ .....	13-2
Figure 47 - CRT– Setup/Thresholds or F4/F2 .....	13-3
Figure 48 - CRT Setup/Clear Memory or F4/F3 .....	13-7
Figure 49 - CRT Setup/Display Functions.....	13-8
Figure 50 - CRT Sound Adjustment .....	13-9
Figure 51 - CRT AC Line Frequency 50/60 Hz .....	13-9
Figure 52 - CRT Time and Date .....	13-10
Figure 53 - CRT Load Data Main Menu .....	14-1
Figure 54 - CRT Load Data Main Menu .....	14-4
Figure 55 - CRT Clear/F3/Deselect a Site .....	14-5
Figure 56 - CRT Main Menu on LCD/Load Data .....	14-6
Figure 57 - CRT Main Menu on LCD/Load Data .....	14-7
Figure 58 - CRT Main Menu on LCD/Load Data .....	14-8
Figure 59 - CRT Main Menu on LCD/LOAD DATA.....	14-12
Figure 60 - www.alber.com/Baseline Resistance Data.....	15-4
Figure 61 - Snapshot Baseline Resistance Data.....	15-4
Figure 62 - File Download Window .....	15-5
Figure 63 - Saving BLF File .....	15-5
Figure 64 - My Computer ICON .....	15-6
Figure 65 - My Computer/Eject.....	15-6
Figure 66 - Safely Remove Hardware Window.....	15-7
Figure 67 - Confirmation to Stop Hardware Device.....	15-7
Figure 68 - Safe to Remove Hardware Device .....	15-7
Figure 69 - CRT Main Menu on LCD/Load Data .....	15-8
Figure 70 - CRT Main Menu on LCD/Load Data .....	15-11
Figure 71 - BAS Software Program Select Cellcorder .....	15-13
Figure 72 - BAS/CRT Interface Window .....	15-14
Figure 73 - BAS/Battery Data Capture Open or Create New File.....	15-14
Figure 74 - BAS/Cellcorder Battery Data Capture .....	15-14
Figure 75 - BAS/CRT Interface Data Transfer Completed .....	15-15
Figure 76 - BAS Software Program Select Cellcorder .....	15-16
Figure 77 - BAS/CRT Interface Window .....	15-16
Figure 78 - BAS/Battery Data Capture Open or Create New File.....	15-17
Figure 79 - BAS/Cellcorder Battery Data Capture .....	15-17
Figure 80 - BAS/CRT Interface Data Transfer Completed .....	15-18
Figure 81 - View Results/F2–Faults/F3 .....	16-2
Figure 82 - Communications Settings Com Port BAS Software.....	18-7
Figure 83 - BAS Software Program Select Cellcorder .....	18-7
Figure 84 - BAS/CRT Interface.....	18-8
Figure 85 - BAS/CRT Interface Window .....	18-9
Figure 86 - Valve Regulated and Vented Cells .....	19-1
Figure 87 - Classical Cell Model .....	19-2
Figure 88 - Internal Resistance Model.....	19-3
Figure 89 - Capacity and Internal Resistance Ratio.....	19-4
Figure 90 - Typical Discharge Curve of a 100% Capacity Cell .....	19-4

---

Figure 91 - Typical Discharge Curve with Metallic Resistance Problem .....	19-5
Figure 92 - Typical Discharge Curve with a Cell with an Electrochemical Resistance Problem	19-6
Figure 93 - Normalized Internal Resistance Vs. Temperature .....	19-7
Figure 94 - Measuring Internal Resistance .....	19-8
Figure 95 - Single Interconnections .....	20-2
Figure 96 - Contacting Tips to Posts (Fig. 2A and Fig. 2B).....	20-2
Figure 97 - (Figure 3A and 3B) Connections for Dual Posts. ....	20-3
Figure 98 - (Figure 4) Connections for Triple Posts.....	20-4
Figure 99 - (Fig 5) Connections for Triple Posts.....	20-4
Figure 100 - CRT-400 Cellcorder Connection Options.....	21-1
Figure 101 - CRT-400 Cellcorder Jaw Options .....	22-1

---

## List of Tables

---

Table 1 - Back Panel/Telco/Reset Switch/Power .....	3-16
Table 2 - Function Buttons .....	5-1
Table 3 - CRT-400 Keypad Buttons .....	5-7
Table 4 - Editing a Site Template .....	14-3
Table 5 - Battery Maintenance Schedule .....	18-4

# 1. Safety Information

## 1.1. General

The protective features of this product may be compromised if it is used in a manner not specified in this guide and/or related operation or installation instructions. This manual describes general installation of the device. If the device has features or accessories not described in this manual, contact Albér.

The following general safety precautions must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. Albér assumes no liability for the customer's failure to comply with these requirements.

 Note	<ul style="list-style-type: none"> <li>• Use safety equipment when working in and around the batteries.</li> <li>• Never exceed equipment voltage, power ratings or capabilities.</li> <li>• Use of this product in a manner not specified could compromise the designed in safety if this product.</li> </ul>
--	--

## 1.2. Document Symbols

The symbols below appear in this manual or are affixed to the Albér device. It is important to review these symbols and to understand the type of instructional information they convey.

 <b>WARNING</b>	<p>Highlights areas related to user safety.</p> <p>Calls attention to a procedure, practice, or condition which, if not correctly followed, could result in personal injury. Do not proceed beyond a WARNING symbol until the indicated conditions are fully understood and met. Always observe safety information when installing, setting up or operating this product.</p>
 <b>CAUTION</b>	<p>Highlights areas related to product or data safety.</p> <p>Calls attention to an operating procedure or condition which, if not correctly followed, could result in damage to the product or permanent loss of data. Do not proceed beyond a CAUTION symbol until the indicated conditions are fully understood and met.</p>
 Note	<p>The Note symbol calls attention to important information.</p> <p>Describes additional information to help the user.</p>

### 1.3. Safety Symbols

The following symbols may appear on the system or individual equipment.



CAUTION. Risk of danger.

### 1.4. Product Safety Practices

The following describe safety practices particular to the installation or operation of the product.

#### Equipment Service

If you have questions, contact Albér and request assistance. Except as explained in this manual, do not attempt to service Albér equipment.

Any adjustment, maintenance or repair of this product must be performed by qualified personnel. Contact an Albér customer service engineer and request assistance. Only qualified and trained personnel may perform the operations described in this manual. All safety information must be read, understood, and strictly adhered to before installing, powering up or using the equipment.

#### Equipment Access

Operating personnel must not remove equipment covers, shields, and or panels. Component repair and/or replacement and internal adjustments must be made only by qualified service personnel.

#### Operating Damaged Equipment

Do not operate damaged equipment. Equipment that appears damaged or defective must be made inoperative and secured against unintended operation until repaired by qualified service personnel. Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture or any other reason, remove power and do not use the product until safe operation can be verified by qualified service personnel. If necessary, contact Albér to ensure the safety features are maintained.

#### Servicing and Adjusting



**CAUTION:** Do not service or adjust alone. While in the battery circuit, do not attempt internal service or adjustment of this equipment unless another person, capable of calling for or rendering first aid and resuscitation, is present.

### Substituting Parts or Modifying Equipment



**CAUTION:** Do not substitute parts or modify equipment. Due to the possibility of introducing additional hazards, do not substitute parts or perform any unauthorized modification to the product. If necessary, contact Alber to ensure the safety features are maintained.

### Ventilation

Never block equipment ventilation ports or openings. The equipment must have adequate ventilation to prevent overheating. Ensure equipment is operated within specified temperature and humidity ranges.

## 2. Preventive Maintenance

### 2.1. Visual Inspection

Visually inspect device components for damaged or frayed power cables, or damaged component panels, controls, and connectors. When damage is detected, remove the equipment from service until the damage is repaired.

### 2.2. Cleaning System Components

Clean device components using a soft cloth, slightly moistened with water. Do not use commercial or industrial cleaners that may attack the computer display and housing. Never expose components to water, high humidity, or dampness.



**WARNING:** Before cleaning equipment, ensure the device is shut off.

### 2.3. Internal Component Replacement

The device has no user replaceable components. Since high voltage is on this device, only knowledgeable users should remove the covers. Failure to comply with this restriction could pose a safety hazard and/or void the product warranty.

### 2.4. Shipping, Storage, Normal Use Protection

Protect the device from physical impact during normal use or storage, and when necessary, provide protection during shipment between test sites.

## 3. Product Overview

The Cellcorder™ CRT-400 Cell Resistance Tester is specially designed to strictly comply with IEEE standards for testing batteries. When a battery is tested, the measurements are affected by several factors.

- Online tests are subject to ripple (AC noise) from the charger or inverters.
- Batteries have a natural capacitance that will influence the accuracy of the readings.
- The size of the test current directly relates to the accuracy of the measurement.

With Albér's patented technology, the Cellcorder's DC resistance test is not influenced by these factors.

The Cellcorder reads single cells and multicell modules, and displays and records cell float voltage, internal cell resistance, and intercell connection resistance. A compatible hydrometer can transfer specific gravity and temperature. The self-contained CRT-400 Cellcorder is comprised of a microprocessor, load resistor, display, and rechargeable battery. Voltmeter probes and a three clip resistance set are provided; optional test leads are available from Albér. The CRT-400 functions well even in high noise environments, without the need to disconnect the battery from service. A 60 amp DC load (on 2V cells) is used to calculate internal cell resistance and intercell resistance. Circuitry rejects the 50Hz/60Hz ripple and associated harmonics often troublesome to AC-based impedance and conductance meters.

This well-proven and patented DC resistance test completely eliminates the guess work when trying to find the weakest link.

The New Cellcorder CRT-400 at a glance is lightweight, rugged and durable. The Cellcorder comes complete with a durable carrying case, voltage probes, resistance leads, USB flash drive, AC charger, data trending and analysis software, and a user manual. Everything required to get started in one case from Albér!

### 3.1. BAS Software

The Battery Analysis Software helps you identify bad cells, generate descriptive reports and archive data. Measurements are stored and presented to allow trending. This makes it possible to detect early performance degradation in individual battery cells.

### 3.2. Cellcorder Serial Number

The Cellcorder's serial number is located on the label on the back of the Cellcorder, toward the top of the Cellcorder.

### 3.3. Features

The CRT-400 Cellcorder battery cell voltage and resistance tester features:

- a USB port for USB data storage devices and ease of data transfer from the field
- graphical reflective LCD display
- audible feedback when enabled
- infrared IR communication

- optional short range Radio Frequency RF communication via *Bluetooth*® allowing data transfer to a *Bluetooth* compatible computer, and/or testing instructions via headset

The self-contained CRT-400 Cellcorder is comprised of a microprocessor, internal resistance test module, display, and rechargeable battery.

Voltmeter probes part number 1100-222 and a three clip resistance set, part number 1100-221 are provided; optional test leads and accessories are available from Alber. Contact Alber at 954-377-7101.

### Serial Number Location

The label contains the model number, input information, serial number and the upcoming calibration date.



Figure 1 - Serial Number Location and Label

### Infrared Port

The Cellcorder comes with an infrared IR port which is located on the right panel, this port is used for communicating with a computer, printer or data logger via IR light signal.

**Note:** When using the IrDA interface port with a CRT printer, the printer must be set up in “IrDA Physical layer” mode to communicate with an Alber CRT-400.



Figure 2 - Cellcorder Right Panel Connector/Infrared

## Other Features Include

### Ventilation

A temperature controlled cooling fan is installed.



Figure 3 - Cellcorder Left Panel Connector/Test Lead and USB

### Test Lead

Easy port for molded test cables and optimized battery clamps.

### USB connection

Universal Serial Bus USB port for portable USB flash drive/data storage devices. May insert/remove with power on or off, the **USB Memory** amber LED lights up when the drive is accessed.

**Important Note!:** The Portable USB flash drive should not be connected to the CRT-400 when the power cord is plugged into the CRT-400.

### Measurement Capabilities

The CRT-400 functions well even in high noise environments, without the need to disconnect the battery from service. An approximate 60 Amp DC load on 2V cells are used to calculate internal cell resistance and intercell resistance. Circuitry rejects the 50Hz/60Hz ripple and associated harmonics often troublesome to AC-based impedance and conductance meters.

### Readings

The Cellcorder reads single cells and multicell modules, and displays and records:

- cell float voltage
- internal cell resistance
- intercell connection resistance

A compatible hydrometer can transfer specific gravity and temperature data via the IR port. Data can be transferred to a PC and merged with previously stored readings using the serial cable supplied with the hydrometer or by using the USB data storage device.

### Auto Ranging

The CRT-400 automatically selects the correct voltage range, load resistor, and test time.

### Float Voltage

The CRT-400 measures the voltage applied during full float operation. The voltage range covers all cells or modules up to 20 volts. Accuracy of readings is to four full digits.

### Internal Cell Resistance

Using a patented process, the CRT-400 applies a momentary load and calculates internal cell resistance by determining instantaneous voltage drop and load current. Cells floating on-line or off-line can be measured. This method helps find weak, potentially failing cells when comparing internal cell resistance of all like cells in the string.

### Intercell Resistance

The CRT-400 measures the resistance between two electrically connected cell terminals. The measurement consists of connector resistance and contact resistance at the points of connection to the cell terminals.

### Data Analysis, Storage and Transfer

A large amount of data can be stored within the CRT-400 and obtained by IR, or USB device. The IR port transfers readings to a computer for analysis and report generation or the user may insert a portable USB device/flash hard drive for data capture and retrieval. The CRT-400 creates two files each time the data is stored to the USB flash hard drive. These two files each have three letter extensions, .CSV and .CDF. The .CSV file is used by Microsoft® Excel to display data in spreadsheet format. The .CDF file is used by the Battery Analysis Program/BAS software, or CRT Previewer program when test data is saved to the USB device.

The BAS program analyzes data, displays results in graph or tabulated formats, and prints reports. It also exports report files in ASCII, Excel or .CSV, comma-delimited format so other programs can generate customized reports. Refer to the Battery Analysis System User's Guide.

### Radio Frequency RF Headset Communication

The CRT-400 is capable of communicating via radio frequency using *Bluetooth*. This optional feature allows the user to receive verbal testing instructions or test status via a *Bluetooth* headset instead of having to read the instructions on the CRT-400 display.

### Reset Switch

**Note:** The Mechanical Reset Switch is under the battery compartment on the rear panel next to the input for the charger module. The Telco connection option is not widely used and is disconnected.

### 3.4. Cellcorder CRT-400

Part Number	Part	Description
KIT-1000-056/ KIT-1000-056BT*  *Bluetooth model		Cellcorder battery tester.
5V@4A Desktop power supply/ charger module for Cellcorder KIT- 4000-034		Power supply charges Cellcorder
Resistance test lead assembly clips 1100-221		Resistance Test Lead Assembly Clamps Test cell and intercell resistance values.
Shoulder strap 3800-029		Shoulder Strap allows for easy CRT portability.
USB 2GB flash drive 2030-005		A plug and play data storage device that is fully compatible with USB. The USB flash drive contains all the CRT-400 User Guides
Voltage lead assembly 1100-222		Voltage sense lead connector.

Part Number	Part	Description
CRT carrying case 3800-028		A convenient carrying case for Cellcorder and its accessories.
Battery Analysis System BAS and Previewer software and User's Guides 2027-014 4200-002 BAS 4200-040 Preview		Software downloads, updates and User's Guides can be downloaded from the Website at: <a href="http://www.alber.com">www.alber.com</a>
2 Wire Cord W/ IEC-320 Plug 6003-015 = US, 6003-016 = Euro, 6003-017 = UK		Power for the charger module part number KIT-4000-034, to charge the CRT's battery.
Spike Probes 1101 Series		The Cellcorder Spike Probes are for use with hard-to-access battery terminal posts. Using these probes, it is possible to measure the internal resistance of a cell or module and take float voltage readings. Check <a href="http://www.alber.com">www.alber.com</a> for the latest models.
Printer 2025-132L Thermal Printer Paper 2025-126		Printer with IrDA interface <b>Note:</b> When using the IrDA interface port with a CRT printer, the printer must be set up in "IRDA Physical layer" mode to communicate with an Alber CRT-400.

Part Number	Part	Description
<p>Bluetooth® Headset 2025-036</p>		<p>Hands-free communication while testing.</p>
<p>DMA 35n Portable Density/Specific Gravity/ Concentration Meter, Hydrometer Kit 2900-032</p>		<p>The hydrometer measures the amount of sulfuric acid in the electrolyte to determine if the battery needs charging. A data logger module is included in the Hydrometer Kit</p> <p><b>Note:</b> A data logger module is included in the DMA35n Kit. The RS232 cable is for use with data transfer to a pc. The data logger's IR port can be used to obtain information from the hydrometer. Then, this data can be transferred to the CRT via IR.</p>
<p>PC/Computer</p>		<p>To be used in conjunction with BAS software to analyze test data.</p>

### 3.5. Panel Controls and Indicators

This section illustrates the CRTs controls, indicators, and connectors.

**Note:** Prior to powering up your CRT-400, be sure to charge the lithium ion rechargeable battery. When the Battery Charge LED is off, it indicates a fully charged battery.

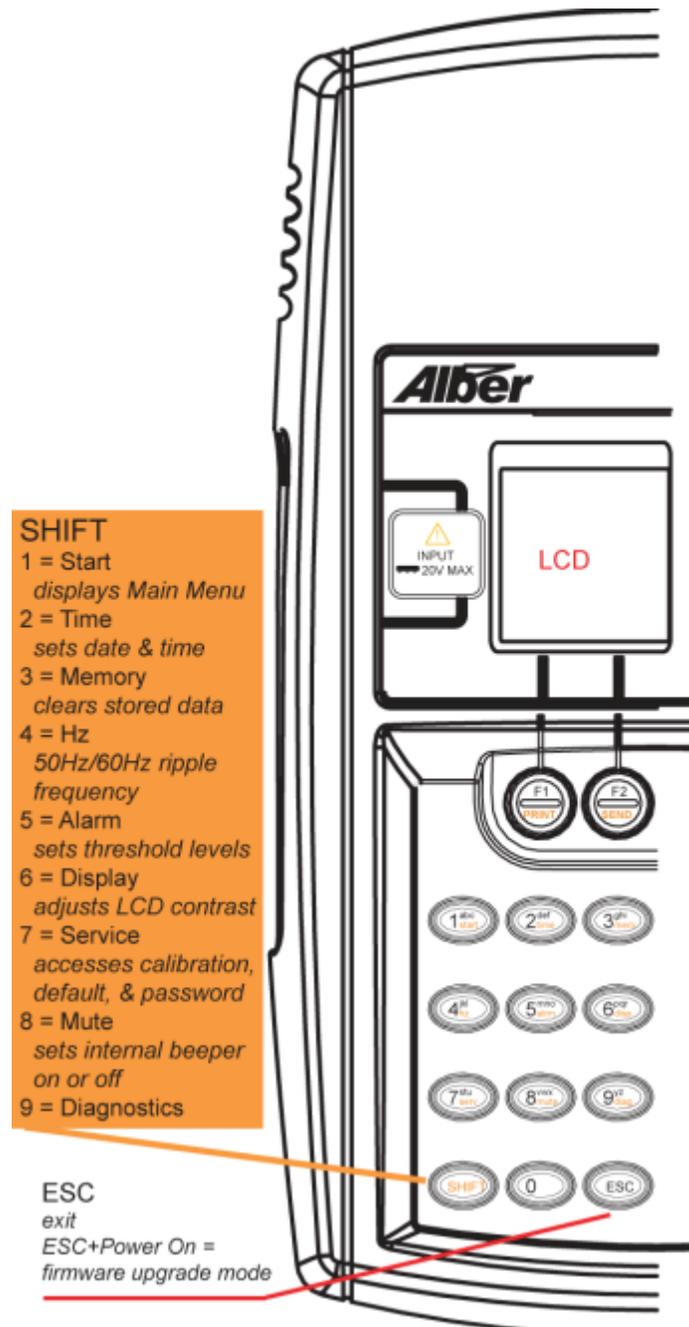


Figure 4 - CRT Front Panel Diagram Left

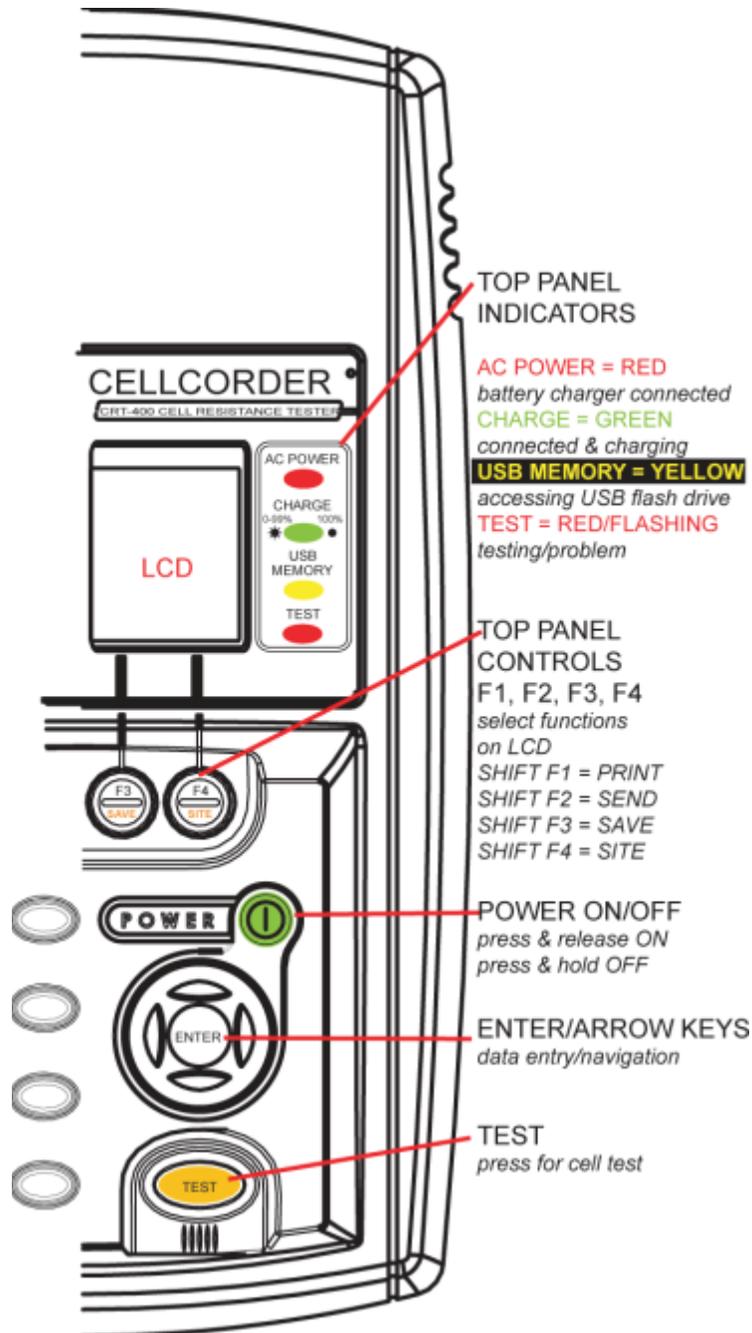


Figure 5 - CRT Front Panel Diagram Right

### Top Panel Indicators

**AC Power LED** - indicator is illuminated red when connected to AC power.

**Battery Charge LED** - indicator is illuminated green when charger/power supply is connected and charging is in process. When the LED is off, it indicates a fully charged battery.

USB LED - indicator is illuminated yellow when the USB flash drive is engaged.

**Important Note!:** The Portable USB flash drive should not be connected to the CRT-400 when the power cord is plugged into the CRT-400.

Test LED - indicator is illuminated red when testing is in progress. The LED Flashes to indicate a problem with the resistance test.

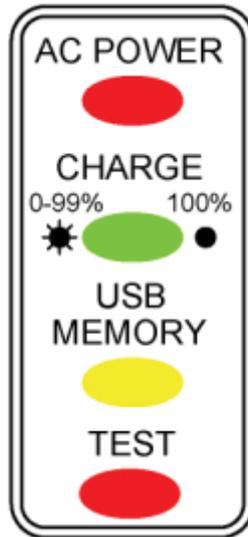





Figure 6 - Top Panel LED Indicators

**Top Panel Controls Keypad** - a combination keypad for alphanumeric data entry and shift key for quick function keys. Press **Shift**, release **Shift**, then press another key from **0** to **9** to select orange text on any key.



Figure 7 - Keypad

The keypad offers alphanumeric data entry and the following options.

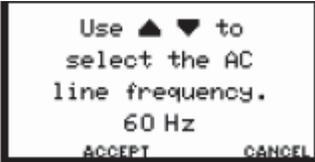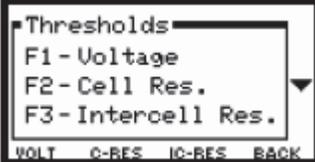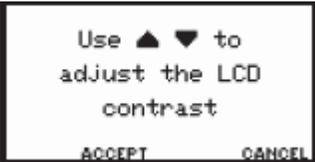Button	Display	Description
To start, press <b>Shift</b> then 1	Main start LCD window	Displays the main menu. 
To set date and time, press <b>Shift</b> then 2	Data and Time LCD window	Sets the date format and time. 
To clear or save stored data, press <b>Shift</b> then 3	Mem/memory LCD window	Clears stored data and saves readings to USB. 
To select AC line frequency, press <b>Shift</b> then 4	Hz/frequency LCD window	Selects line frequency; 0/60Hz. 
To set threshold levels for alarms, press <b>Shift</b> then 5	Alrm/alarms LCD window	Sets alarms threshold levels. 
To adjust LCD contrast display, press <b>Shift</b> then 6	disp/display LCD window	Adjusts LCD contrast display. 
To access calibration, default and password settings, press <b>Shift</b> then 7	Serv/service LCD window	Accesses calibration and password settings. 

Button	Display	Description
To mute beeper, press <b>Shift</b> then <b>8</b>	Mute LCD window	Sets the internal beeper to either on or off. 
To access diagnostics, press <b>Shift</b> then <b>9</b> .	Diag/diagnostics LCD window	Accesses diagnostics, menu. 

**Trans-reflective LCD**

The high contrast, 128 x 64 pixel backlit graphical display shows menus, warnings, and test results. The display makes it easy to navigate through the menus. On power up the LCD window displays the Alber logo, the firmware version, and the main menu.

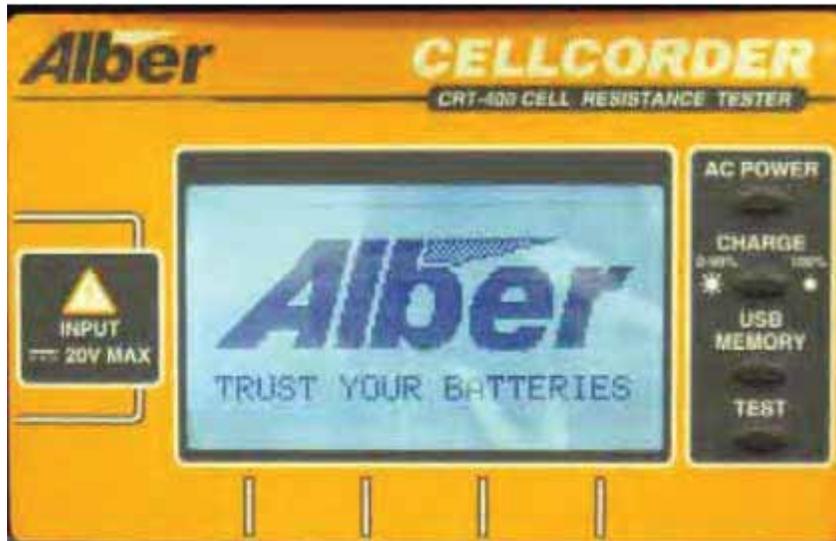


Figure 8 - Trans-reflective LCD Display

**F1, F2, F3, and F4 Buttons**

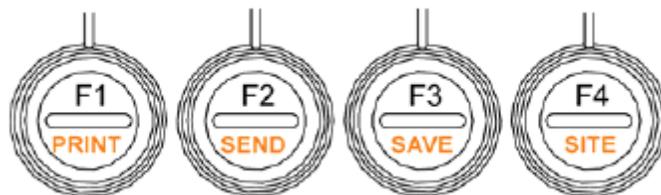



Figure 9 - Top Panel Controls, F1, F2, F3, and F4

The F1, F2, F3 and F4 buttons select the functions that display on the LCD Display directly above. These buttons also have the following options.

**Note:** Press **Shift** on the keypad, then release SHIFT, then press F1, F2, F3 and F4 to select the orange text on any key.

Button	Function	Description
SHIFT F1	Print	Sends data to the printer via IR/ <i>Bluetooth</i> .
SHIFT F2	Send	Sends data to the computer via IR/ <i>Bluetooth</i> .
SHIFT F3	Save	Saves data to the USB flash hard drive.
SHIFT F4	Site	Displays the site selected.

F1/F2 Yes/No - When possible, F1 is used for Yes and F2 is used for No.

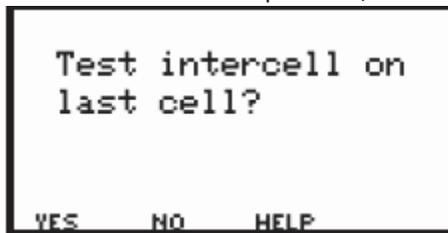

F3/F4 Back/ Cancel - When possible, F3 is used for Back and F4 is used for Cancel.



**Power** - Press and release Power to power on the CRT. Press and hold Power to power off. The CRT-400 is powered by a lithium ion rechargeable battery.



**Enter/Arrows** functions - Enter plus arrow keys. Press Enter after typing data, such as password. Press Up, Down, Left or Right arrows to navigate LCD windows.

**Test** - The Test key initiates the test sequence. Press and hold for approximately ½ second to initiate cell testing.

**ESC/Escape** - press the ESC key to exit certain LCD windows. Hold and press Power + ESC to start in firmware upgrade mode.

Press Test and Enter key simultaneously to reset the CRT. If the keys on the CRT lock-up, pressing these buttons simultaneously will reset the unit.



### Bottom Panel Connectors/Accessory Compartment

**TELCO** - A modular RJ-11 jack for communicating with a remote computer via telephone not supported at this time.

**AC Power** - A 5VDC input jack for connecting the CRT battery charger module.



Figure 10 - Back Panel/Telco/Reset Switch/Power

### Help LCD windows and Menu Selections

The CRT-400 has easy-to-use LCD windows, offering Help pages that provide details about options on the LCD window. Descriptions of Menu items on the LCD display are in the sections of the manual where Menu items appear. In addition, use F1 to F4 function buttons. To speed up the selection process, function locations are standardized.

### 3.6. Specifications

#### Physical

- Dimensions - 12"Height x 7"Width x 3"Diameter or metric 305mm Height x 178mm Width x 76mm Diameter
- Weight - 3.4 pounds or metric 1.5Kg
- Keypad - Rubber keys with polyurethane coating

#### Display

- Type LCD - STN Reflective
- Viewing Area - 2.619" x 1.309"
- Resolution - Graphics LCD 128 x 64
- Viewing Angle - 40°
- Backlight White LED

#### Memory

- Type - USB flash hard drive
- Size - 256MB
- Storage Capability - 71 strings of 256 cells per megabyte MB of size. (256MB USB flash drive can store up to 18176 strings.)
- Data Retention - 10 years

#### Communication

- Infrared - Fully IrDA compliant for PC interface. Physical IrDA compliant for printer interface.
- *Bluetooth* - PC Interface for data transfer Earpiece interface for voice test status

#### Battery

- Type - 4 cell, 8800mAh lithium ion
- Voltage - 3.7V nominal
- Charge Time - 8 hours

AC Adaptor - The Power Supply is part number KIT-4000-034 w/6003-015/16/17

- Input Voltage - 90 to 264VAC
- Output Voltage - 5VDC
- Output Current - 4.0A
- Frequency - 47 to 63Hz

#### Environmental Temperature Range

Operating - 32° to 104°F, 0° to 40°C

Storage - -20° to 140°F, -29° to 60°C. For extended periods: <77°F /<25°C

Humidity - Range 0% to 80%RH (non-condensing) at 0°C to 31°C, 0% to 50%RH (non-condensing) at 32°C to 40°C.

Insulation Category - II

Pollution Degree - 2

Altitude - 0 to 2000 meters above sea level

#### Accuracy

Input	Test Current	Resistance Resolution ±0.1% of reading	Voltage Resolution ±0.1% of reading	Intercell Range/ Resolution ±1% of reading
2V	50A	±5μΩ	±1mV	2mΩ±2μΩ
4V to 6V	25A to 35A	±25μΩ	±3mV	3.3mΩ±5μΩ
8V to 12V	30A to 35A	±75μΩ	±6mV	5mΩ±10μΩ
16V	5A	±400μΩ	±10mV	20mΩ±20μΩ

Table 1 - Back Panel/Telco/Reset Switch/Power

Note: Specifications are subject to change without notice.

### Voltage and Current Protection

An internal circuit helps protect the Cellcorder if inadvertently placed across a high voltage. Circuitry senses the input voltage across the current carrying leads and, if the input voltage exceeds 20 volts, a beep sounds and the test current relays are disabled.



**WARNING:** It is potentially hazardous to exceed the rated voltage of the Cellcorder, 20 volts.

## 4. Before Using The CRT-400

### 4.1. Highly Recommended Reading

Please read the following sections of this manual as well as the other manuals mentioned in this list:

- The Safety, Legal Warranty and user sections of this manual
- Battery Analysis System User's Guide, 4200-002
- USB Flash Drive manufacturer's instructions
- If a Hydrometer is used, its instructions as well as the Data Logger Module instructions for data transfer from the Hydrometer.
- For *Bluetooth* option: *Bluetooth* compatible computer manual, to send CRT-400 test data to the computer via the RF option. *Bluetooth* compatible headset manufacturer's instructions.

Please refer to the following if more information is needed.

IEEE 450-2002 -IEEE Recommended Practice for Maintenance, Testing, and Replacement of Vented Lead-Acid Batteries for Stationary Applications.

IEEE 1188-2005 - IEEE Recommended Practice for Maintenance, Testing, and Replacement of Valve-Regulated Lead- Acid (VRLA) Batteries for Stationary Applications.

### 4.2. Charging the Cellcorder Battery

Prior to testing, charge the CRT-400 using the charger module until the green Charge LED goes out. This illuminated green Charge LED indicates the battery level only when the charger is connected. Charging may take several hours.

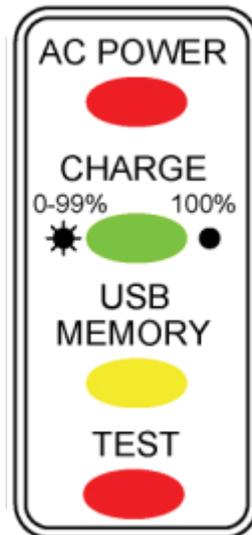


Figure 11 - Green LED Charge Indicator

**Note:** A discharged battery does not affect data readings in temporary storage.

### Before Charging, Disconnect Any Test Leads

Before charging the battery, disconnect any test leads. Open the accessory compartment cover by loosening the two slotted screws. Connect the charger to the power connector inside the accessory compartment located on the back of the CRT, then plug in the charger. When charging is complete, the green LED will turn off.

### Charge Complete

When the battery is fully charged, the green LED goes off upon charging completion, unplug the charger from the power source and then unplug it from the CRT-400. Replace the accessory compartment cover before beginning test.

**Note:** The life of the battery depends on how well it is charged. Please refrain from leaving the CRT in extreme cold or hot temperatures. Subjecting the CRT to extreme temperature conditions will shorten the life of the battery.



**CAUTION:** Never store the CRT-400 in a discharged condition. If you use a unit needing recharge, it will shut down without warning.

### Low Battery

When the battery is low, warnings indicate remaining test time. At full discharge, the unit turns off. You can access data in temporary storage after recharging.

**Note:** The CRT-400 shuts down if inactive for ten minutes to prolong battery life.




**WARNING:** If the battery wears down during testing, do not use the charger for power when testing cells.



**WARNING:** Injury to personnel or damage to equipment could result.

CRT-400 low battery warning messages:

- Low Battery Detected

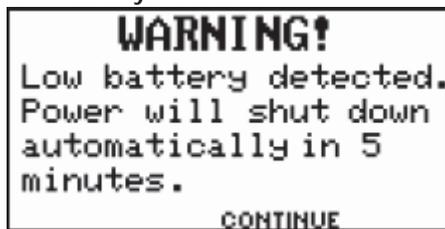

- One Hour Remaining



### 4.3. Test Lead Connection Practices

This section summarizes good test lead connection practices to help ensure the accuracy of readings. For actual test lead connection, refer to “Connecting Resistance Test Leads” section. Always be consistent in how test leads are connected once testing has started on a battery. Changing the technique of how leads are actually connected to the measurement point, can result in different reading results. Being consistent is very important when measuring large high amp hour batteries where the internal resistance is very low and any change in the lead connections can alter the reading results. If the post is accessible underneath the strap, then alternate types of jaws that are available for the test leads. These jaws are constructed so that they extend their reach underneath the strap for direct connection to the battery post.

**Note:** For detailed information refer to “Cellcorder Jaw Options” section.

On some batteries (typically VRLA), the posts are inaccessible because they are covered by the intercell connector. For valve regulated batteries, where only the intercell and the mounting bolt are accessible, connect the current lead to the bolt head and the voltage sensing lead to the intercell.

Measuring from bolt head to bolt head is not a true measure of the connection between the post and intercell bar; in most cases, the reading will be high because of the high resistance of the bolt itself. Refer to “Application Note CC-002-A beginning”, for connection diagrams. Most battery terminal posts have a layer of lead peroxide, lead sulfate, copper sulfate, lead hydrate, copper oxide or dirt mixed with No-Ox grease.

All are high in resistance, so make sure the test leads have good connection to the metal surfaces.

Where possible, always try and connect the test lead connections directly to the post while not making any connection to the intercell or hardware.



**WARNING:** Do not attempt to read internal resistance of an open cell/module while the battery is on-line. An open cell can be determined by the unusually high voltage across it and the lower nominal voltage across all other cells/modules.

### 4.4. Understanding the USB Port and Flash Hard Drive

Data can be stored on a USB flash hard drive via the USB port. Use the USB flash hard drive to transfer test data recorded by the CRT to a computer for analysis, transfer firmware upgrades from computer to CRT, backup and restore calibration constants, and store site setup.

### Computer System Requirements for USB

Windows XP, 2000 Available USB port (USB 2.0 recommended)

**Important Note!** The Portable USB flash drive should not be connected to the CRT-400 when the power cord is plugged into the CRT-400.

### Accessing Stored Data on the USB Device From PC

Insert the USB flash hard drive into the computer's USB port on the PC.

Use Windows Explorer to access the USB flash hard drive and stored data.



Figure 12 - USB Device

### Recommended Removal (From PC) Practice

1. When using Windows, we recommend the following steps to remove the USB device from the PC. Double-click the **My Computer** icon on the Windows desktop. Right click on **Removable Disk** drive, in this case (E) and select **Eject** from the menu. Or double-click the **safely remove device** icon, that is located in the toolbar.

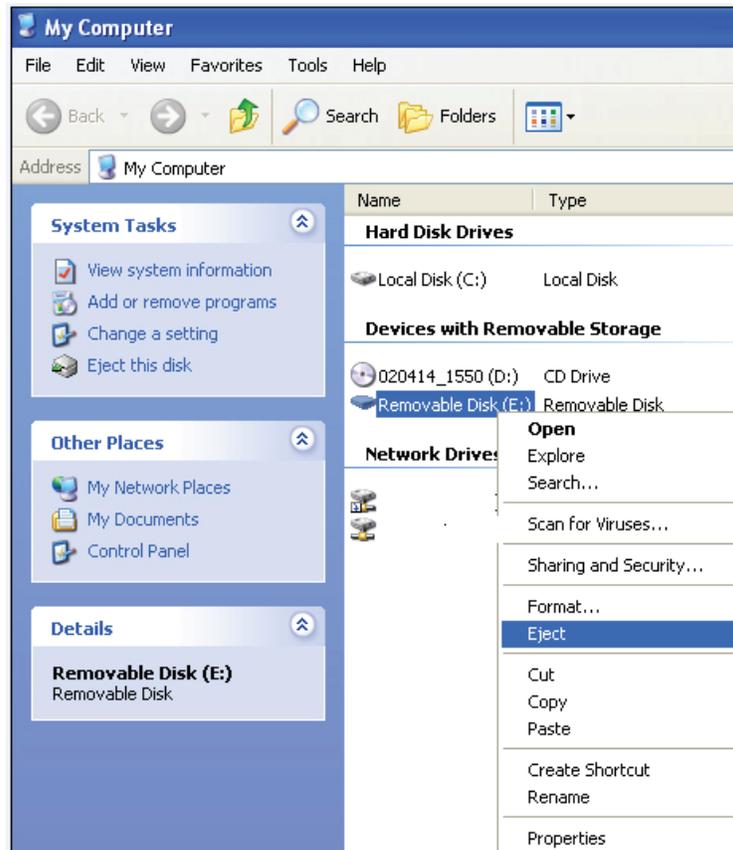


Figure 13 - My Computer/Eject

2. The Safely Remove Hardware window displays. Highlight the **USB Mass Storage Device** and click **Stop**.



Figure 14 - Safely Remove Hardware Window

3. A confirmation window displays. Scroll down with the mouse and select the device to be removed and click **OK**.



Figure 15 - Confirmation To Stop Hardware Device

4. Wait until the message, **Safe to Remove Hardware** appears, then remove the USB flash hard drive.



**CAUTION:** Make sure the light on the USB is off before removing the USB device from the PC. Failure to follow the Safe Hardware Removal steps could result in lost data.

#### Using the USB Device with the CRT

Insert the USB flash hard drive into the CRT's USB port to read or write data.

**Important Note!:** The Portable USB flash drive should not be connected to the CRT-400 when the power cord is plugged into the CRT-400.

#### Recommended Removal (from CRT) Practice



**CAUTION:** You may insert or remove the flash hard drive from the CRT-400 with POWER On or Off, but do not remove the USB flash hard drive when the Cellcorder USB Memory LED is lit as the LED indicates the USB memory is engaged.


### 4.5. Understanding *Bluetooth*<sup>®</sup>

*Bluetooth* wireless technology is a short-range communications technology intended to replace the cables connecting portable and/or fixed devices while maintaining high levels of security. When a *Bluetooth* device comes within range of another, an electronic conversation takes place to determine if they have data to share or if one device needs to control the other. This electronic conversation/connection happens automatically when the *Bluetooth* device is on and the two devices have been paired or in contact before.

## 5. Getting Ready to Test Batteries with the CRT-400

### 5.1. Power

To turn on the CRT-400, press the green Power button. To turn off, press and hold the green Power button until the message, Release power button appears on the LCD. The main menu window appears.

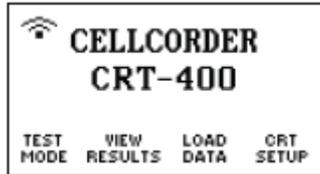

### 5.2. Basic Main Menu Functions

The main menu options are Test Mode/F1, View Results/F2, Load Data/F3, and CRT Setup/F4. Press the F1, F2, F3 and F4 buttons below these main menu options to select a function.

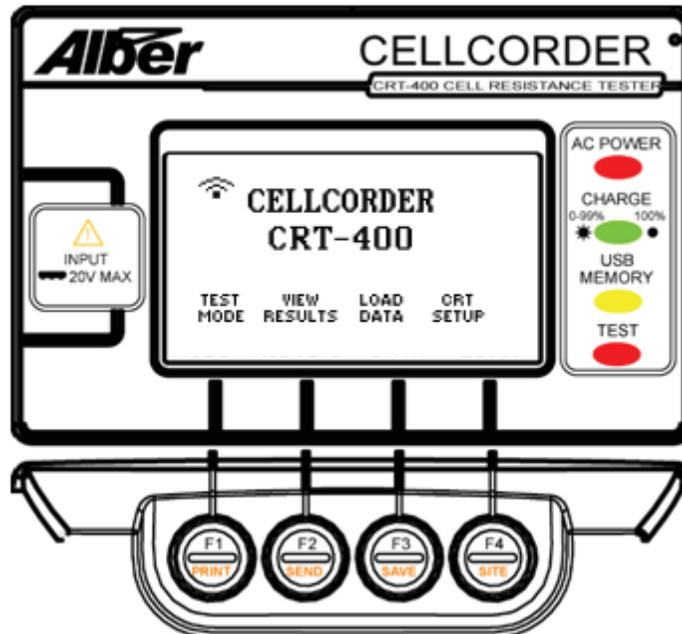


Figure 16 - CRT-400 Main Menu on LCD with F1, F2, F3 and F4 buttons

Button	Function	Description
F1	Print	Test Mode
F2	Send	View Results
F3	Save	Load data
F4	Site	CRT setup

Table 2 - Function Buttons


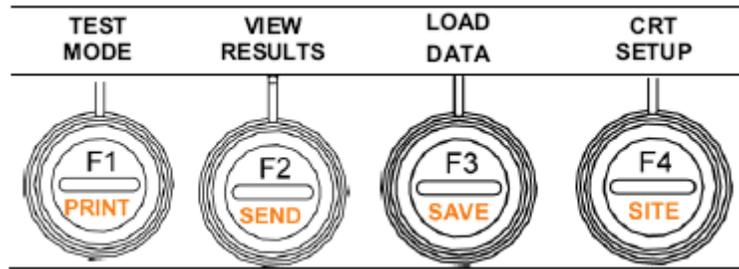


Figure 17 - CRT-400 F1, F2, F3 and F4 buttons

**Test Mode/F1**


Displays menus to measure voltage, determine resistance or add Specific Gravity SG and temperature readings.

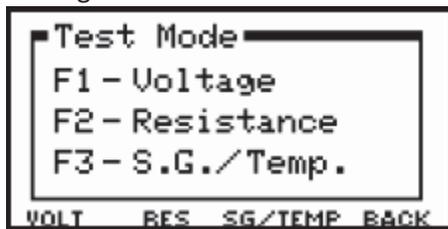


Note: Specific Gravity/Temperature are imported from a separate instrument.

**View Results/F2**

Summarizes the Overall Voltage OV, cell voltage, cell resistance, and intercell resistance readings as averages, min/max lists, or threshold violations. This will help to determine if retesting is needed.

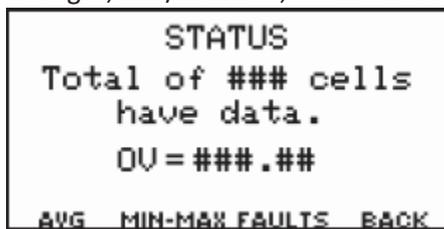**Load Data/F3**

Accesses Site Setup/F1 and Cell Data/F2 .CDF files.

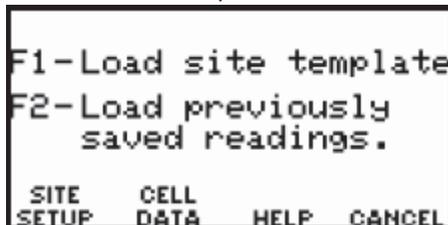**CRT Setup/F4**

Displays menus for voltage, resistance, and SG/Temperature threshold limits, memory, LCD settings, sound, ripple frequency, date/time, and RF communication.




### 5.3. Navigation

To scroll through LCD windows or lists, use the arrow keys.



Figure 18 - CRT-400 Power and Arrow buttons

To go back a LCD window, exit a function, or return to the main menu, press **Back/F3**, **Cancel/F4** or **ESC**

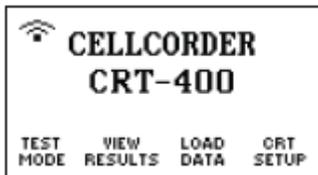


### 5.4. The Baseline Resistance Data File on USB

The BLF file has been placed on the USB flash hard drive for your convenience for first time users. This file contains Baseline Resistance Data for various well known batteries to help first time users get started. More information on the BLF file will be found in the “How To Work With Files” section. If you are an advanced user, please review the “How To Work With Files” section and proceed with testing.

### 5.5. Insert the USB Device Into the CRT

Turn on the CRT-400 by pressing the green Power button to view the main menu.

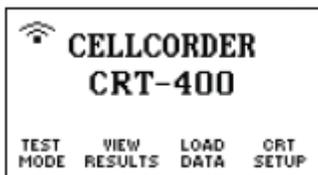

Insert the USB flash hard drive into the CRT’s USB port.

**Important Note!:** The Portable USB flash drive should not be connected to the CRT-400 when the power cord is plugged into the CRT-400.



Figure 19 - CRT-400 with USB Flash Hard Drive

## 5.6. How to Edit Items within the Site Template

This section is placed here to make it easy for beginners and first time users. Most alphanumeric keypad key types four characters: a number and three letters. The blank space character is on the 9 key.

**Note:** The cursor advances two seconds after pressing an alphanumeric key, or you may use the Right Arrow. For example to type a name, press a key then wait or press the Right Arrow. Location, battery, and string names have a limited number of characters, and other parameters have minimum/maximum values.

When Temperature and Specific Gravity summary thresholds are exceeded, the Cellcorder beeps twice, displays reverse video, and prints out in the Thresholds section.

```
CELL - ###
S.G.    Temp.
1.207   19.8F
IMPORT  CANCEL
```

Press 9 on the keypad to type spaces in location, battery, string or model names.

To delete characters, highlight the character and press F1/Delete Char.

**Note:** You cannot use the space key with file names.

Using the keypad, type the location name at the blinking cursor.



Figure 20 - CRT-400 Keypad Buttons

Press F3/Load Data Functions


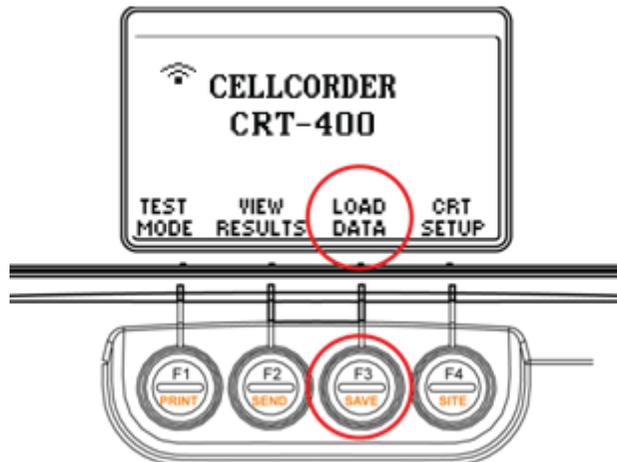



Figure 21 - CRT-400 Load Data Functions

At the main menu, select Load Data/F3 to obtain this LCD window:

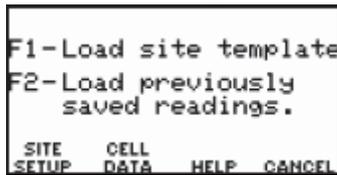

Note: Using arrows allow access to the specifics of the site, such as LOCation, BATtery, etc.

Press F1/SITE SETUP To load the site template

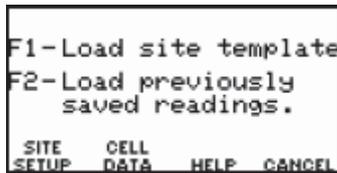


When the USB flash hard drive has no sites stored, then the New Site LCD window appears.



### Highlight LOCation

To begin, make sure LOC is highlighted by using the arrow keys.

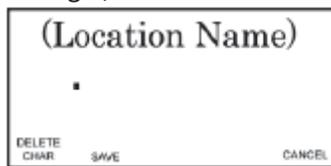

Type the location name.

### Press F1/Change

Press Save/F2. Site ### of ### appears. The first set of ### is the new site number created. The second set of ### is the number of sites on the USB flash hard drive or sites entered. For this first case, the message should read, "Site 001 of 001."



### Highlight Battery

Press the down arrow key to highlight the next information item, BAT.

- Press F1/Change
- Press Save/F2
- Highlight STG For String Name

Press the down arrow to highlight the next information item, STG.

- Press F1/Change
- Press Save/F2

The following table lists all editable items and the keys to use arrows and the alphanumeric keypad.

**Note:** Location, battery and string name are what is the minimum entry needed to begin testing.

Item	Description	Edit Text Using
LOC	Location name. 39 characters max.	Left and right arrows and keypad
BAT	Battery name. 18 characters max.	Left and right arrows and keypad
STG	String name. 15 characters max.	Left and right arrows and keypad
MOD	Model number of battery. 39 characters max.	Left and right arrows and keypad
S#	Total number of strings. Defaults to 01	Left, right, up, and down arrows
C#	Total number of cells. Defaults to 24	Left, right, up, and down arrows
DAT	Battery installation date.	Left, right, up, and down arrows
OPT	Options. Sets the ripple filter (AC line) Frequency. Defaults to 60 Hz	Up and down arrows
HV,	LV High/low cell voltage. Sets limits.*	Up and down arrows
HR,	High/low internal cell resistance. Sets limits.*	Up and down arrows
LR	High/low internal cell resistance. Sets limits.*	Up and down arrows
HI1	High intercell resistance 1, 2, 3, 4. Sets limits.*	Left, right, up, and down arrows
HI2	High intercell resistance 1, 2, 3, 4. Sets limits.*	Left, right, up, and down arrows
HI3	High intercell resistance 1, 2, 3, 4. Sets limits.*	Left, right, up, and down arrows
HI4	High intercell resistance 1, 2, 3, 4. Sets limits.*	Left, right, up, and down arrows
HT	High/low cell temperature. Sets limits.*	Left, right, up, and down arrows
LT	High/low cell temperature. Sets limits.*	Left, right, up, and down arrows
HSG	High/low specific gravity. Sets limits.*	Left, right, up, and down arrows
LSG	Sets Amp hours for load test and TST intercell type. F2 and F3 keys	F2 and F3 buttons
TST	Sets Amp hours for load test and intercell type.	F2 and F3 buttons
VLT	Sets the high and low cell voltage range.	F2 and F3 buttons

Table 3 - CRT-400 Keypad Buttons

\*During testing, two beeps and reverse video indicate limits are exceeded. max = maximum.

**Note:** A site template is not required for testing, but is useful for managing many sites.

When a site is selected before testing, both the readings and site information will be saved in a \*.CDF file. Confirm Site selection by pressing **Shift/F4 Site**.

## 5.7. Deselecting a Site

Press Shift/F4 Site then Shift F3 Save.

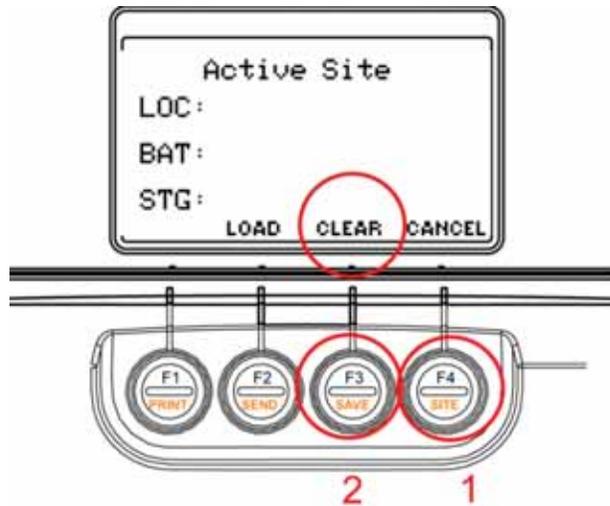


Figure 22 - Deselecting a Site

When a site is selected and you want to take readings with no site selected, press Clear/F3 to clear. Confirm the change. To Unlink A File And To Clear Thresholds refer to the “Unlink a file and to Clear Thresholds” section. To select a different site, press Load/F2, and use the arrow keys to find the desired site and then Select/F1.

**Note:** To determine at any time what site is selected, press F4 Site.



**WARNING:** Do not test any cells when the Cellcorder AC Power indicator is lit. Injury to personnel or damage to equipment could result.

## 5.8. Next Steps, Battery Selection

CRT Setup/F4

Now, select CRT Setup by pressing F4.

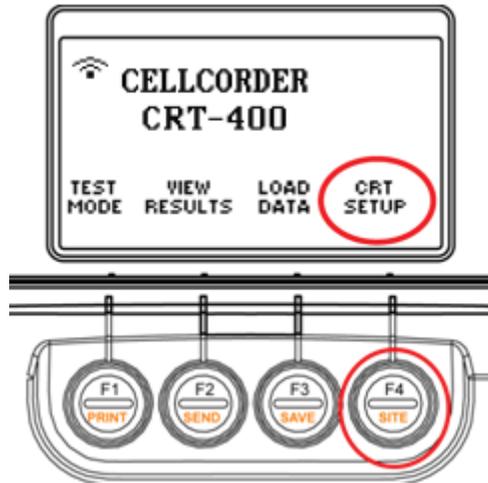


Figure 23 - CRT Set up

### CRT Setup/F4

Press F1/Battery Select

Press F1 to access the Baseline Resistance Data File containing battery models that automatically set certain threshold parameters.

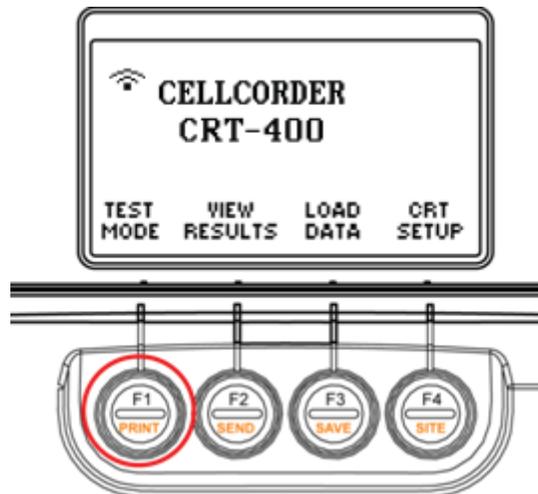



Figure 24 - CRT Test Mode

### Reading USB

**Note:** The USB flash hard drive must be inserted to accomplish this Battery Select function. The BattList.blf file has been placed on the USB device at the factory to aid first time users.

For consistency in data capture, always use the same USB flash hard drive.

Wait for the USB device to be read to populate the Manufacturers and Models lists.

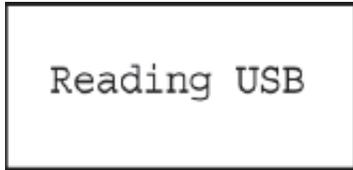


### Selecting a Manufacturer

To select a manufacturer, press F2/Accept.



### Selecting a Model

Select a battery model and press F2/Accept.

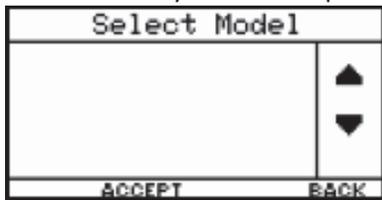

**WARNING:** Do not test any cells when the Cellcorder AC Power indicator is lit. Injury to personnel or damage to equipment could result.

## 6. Taking Float Voltage Readings First



**WARNING:** Do not test any cells when the CRT AC Power indicator is lit. Injury to personnel or damage to equipment could result. The maximum voltage the CRT can read is 20V. Do not attempt to read Overall Volts OV. The CRT calculates OV based on cell voltage readings.

**Note:** Albér highly recommends that you take cell voltage measurements first to eliminate possible voltage skewing effects, then move on to cell/connection resistance.

To take float voltage readings, connect the voltage test leads to the Cellcorder as shown in the figure below.



Figure 25 - Connect Voltage Test Leads

Make sure the CRT is powered on. You have already set up a new site template to begin your first test.


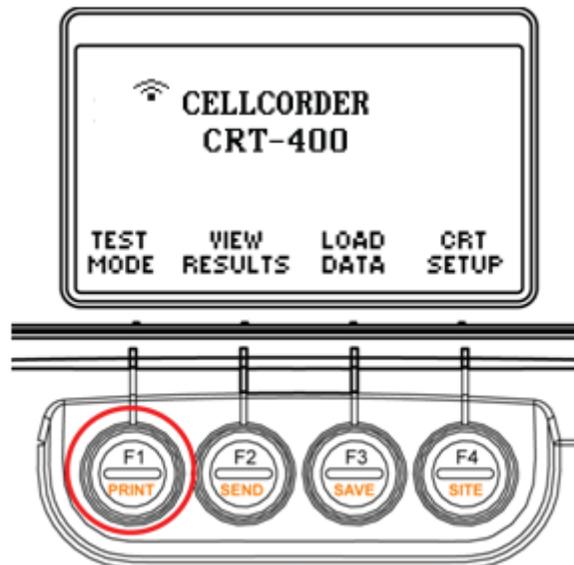



Figure 26 - CRT - Test Mode

CRT-Test Mode/F1

- Press F1/Test Mode
- Press F1 - Voltage

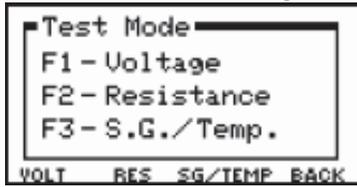

The LCD displays the CELL ### and Volts and either Resume Testing or Stored in Memory.

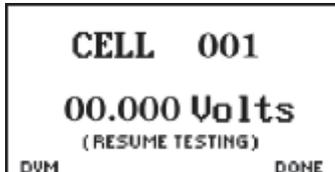

Note: The CRT ignores polarity in Voltage mode only, so that you may connect the leads either way.

When the probes/test leads contact a cell, the CRT displays the voltage and beeps to indicate the reading is stored in temporary storage.

When the probes/test leads are lifted off the cell, the CRT steps to the next cell. Continue taking readings by placing the probes/test leads on each cell. Probes are being used in the figure below.



Figure 27 - Placement of Probes on Cells

### 6.1. F4/Done Voltage Testing

When testing is completed, remove the leads from the last cell under test and press **Done/F4**.


Note: When the *Bluetooth* headset is worn, verbal instructions that the cell has been tested and is now “Stored in Memory,” indicates to move the probes to the next cell. Best practice for accurate results is to place the probes on each cell precisely as placed on the first cell, until finished with the last cell.

### 6.2. Stored In Memory Explained

Stored in Memory indicates the cell number was previously read. During testing, you may review or retest previously read cells.

**Note:** To display another cell number and/or retest a cell, type the number then press Enter, or use the arrows.

To test again, press Retest/F3, place the probes onto the cell, and wait for the beep. Lift the leads; the next cell number appears. If the next cell number was also previously read, you can either retest or change the number using the arrows or keypad.

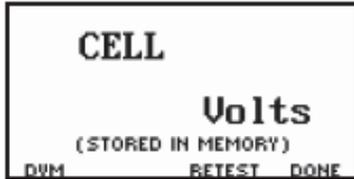

### 6.3. Resume Testing Explained

Resume Testing means no reading exists for the cell number. Place the voltage probes onto the cell. The Cellcorder reads the voltage and beeps. Move the leads to the next cell; the LCD displays the next cell.

## 7. Setting Up To Take Resistance Readings



**WARNING:** Do not test any cells when the Cellcorder AC Power indicator is lit. Injury to personnel or damage to equipment could result.

Prior to performing the resistance test, the CRT must be setup to match the type of battery to be tested. Since you have setup your first site template, some batteries require non-standard test leads or jaw options, please refer to “Cellcorder Jaw Options” section to obtain optimal results, use the appropriate jaws/leads for the batteries to be tested.



Figure 28 - Resistance Test Lead Assembly Clamps



Figure 29 - Insert Resistance Test Leads Left Side CRT

Select the 3 clip resistance test leads pn 1100-221 and insert into the CRT, left side.

**Note:** The standard jaws or test lead set may not provide the best connection to some cell posts. If you encounter poor post connection, contact Alber for a current list at 954-377-7101 or visit the website at [www.alber.com](http://www.alber.com).

Once the leads are connected, make sure the CRT is charged and powered on.

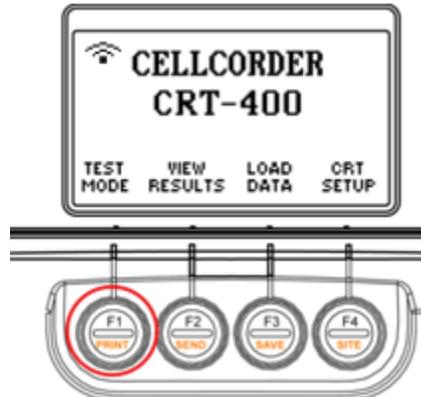


Figure 30 - CRT-Test Mode/F1


You have already set up a new site template to begin your first resistance test.

- Press F1/Test Mode




**WARNING:** Do not attempt to read internal resistance of an open cell/module while the battery is on-line. An open cell can be determined by the unusually high voltage across it and the lower (nominal) voltage across all other cells/modules.

Press F2/Resistance, the Beginning Resistance test LCD window appears.

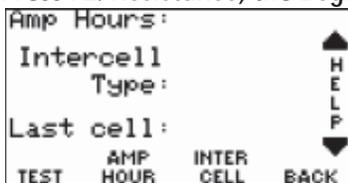

Press F1/Test the Select Normal Cell Voltage LCD window appears. Use the arrows to select the desired voltage of the cells to be tested.

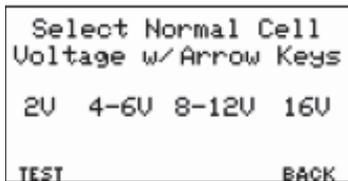

Note: You can choose to go back to the previous LCD window by selecting F4/Back.

Press F1/Test

Based on cell voltage, the CRT determines the correct range, connects a fixed resistance across the cell and intercell under test, and briefly applies 60 Amps on 2V cells. Test current changes from 5 to 60 Amps depending upon cell/module voltage; 16V to 1V.

During load condition, the unit reads cell voltage, current, and intercell voltage drop and calculates internal cell and intercell resistances. At completion, the internal cell resistance (Rc) and the intercell resistance (Ric) are displayed.

## 7.1. Check/Set Amp Hours


Check the battery and select whether Amp Hours needs to be smaller or larger than 1000 AH (default)/ <1000AH or >1000 AH. Make sure the CRT is charged and powered on. Make sure the resistance test leads are connected to the CRT, but not to the cell under test.

Press AMP Hour/F2 to Toggle < or > 1000 AH

This sets the length of time the Cellcorder applies a load.

## 7.2. Set Intercell Connections

To select how many Intercell Connections IC per cell will be read, one to four.

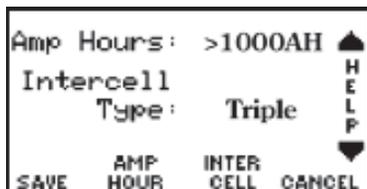

Press F3/Intercell

- Single
- Dual
- Triple
- Quad
- Combined
- Computed

**Note:** The arrow keys may also be used to display Single, Dual, Triple, Quad, Combined or Computed information.

### Single Testing

If you are testing batteries with two (2) terminals and they are connected in series. Please refer to Single Intercell Connectors figure on the following pages.

### Dual Testing

If you are testing batteries with four (4) terminals and they are connected in series. Please refer to Connections for Dual Post Cells - Example One figure and Connections For Dual Post Cells – Example Two figure on the following pages.

### Triple Testing

If you are testing batteries with six (6) terminals and they are connected in series or if three (3) positive terminals are connected together and the three (3) negatives are connected together. Please refer to Connections for Trip Post Cell – One figure, Connections for Trip Post Cell - Two figure and Connections for Trip Post Cell – Three figure on the following pages.

### Quad Testing

If you are testing batteries when each negative of (3) negative terminals are connected to each positive of the (3) positive terminals of the next battery.

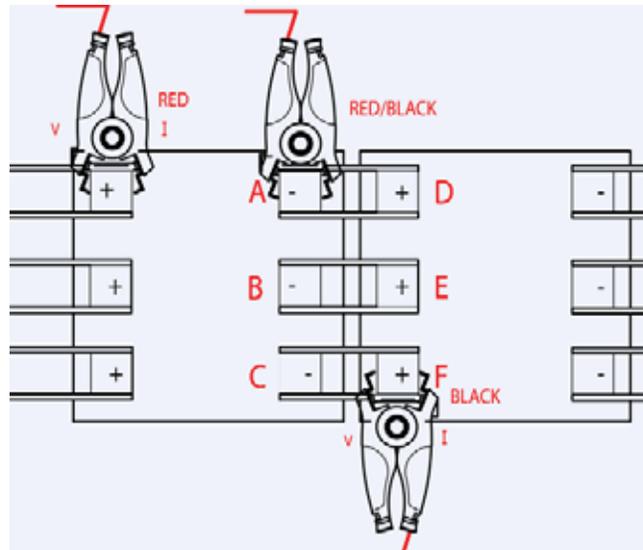


Figure 31 - Quad Testing

### Combined Testing

Combined testing is done in one step using only two leads and does not require the use of the third intercell lead. Connect the positive lead to the positive post of the cell being tested. Connect the negative lead to the positive post of the next cell. The reading combines the cell resistance/ $R_c$  plus the intercell resistance/ $R_{ic}$ . Using Combined, no  $\mu\Omega$  values are displayed for  $R_{ic1}$  to  $R_{ic4}$ . Combined is faster than computed, but does not separately indicate cell and intercell resistance values, whereas computed does. This mode of testing can be used on the last cell of a series.

### Computed Testing

Computed testing requires two steps using two leads. First, attach the leads to the positive and negative terminals of a jar connected to a second jar via an intercell connection, then perform the resistance test. Then, move the negative lead to the positive terminal (with the intercell connection) of the second jar and perform the resistance test. The CRT-400 subtracts the lower  $R_c$  and displays two resistance readings: the cell  $R_c$  and the computed intercell  $R_{ic}$ . Use Computed to determine if a problem is in the cell or in the intercell connection. This mode of testing can be used on the last cell of a series.

## 8. Taking Resistance Readings

### 8.1. Resistance Readings

When taking a resistance reading, it is possible that the CRT is still on after you have completed the previous set up section.


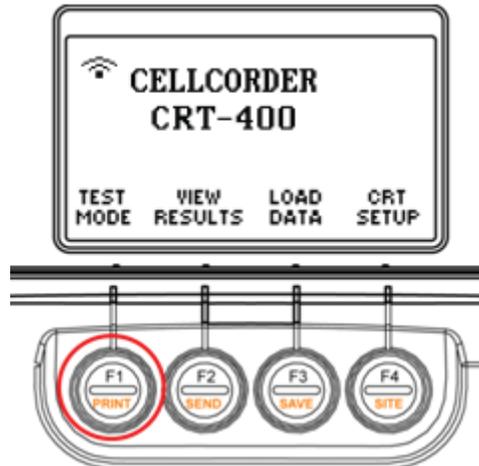



Figure 32 - CRT-Test Mode/F1

Turn on the CRT and select Test Mode/F1. The Test Mode menu displays.

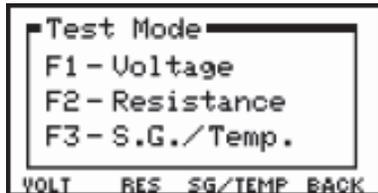

Press F2/Resistance

Note: You have already set up Amp Hours, Intercell Type and Battery Voltage.

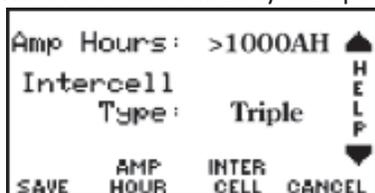

The CRT-400 is ready for testing.

Note: Help is always available via the arrow keys.

Taking float voltage readings before resistance readings, rather than concurrently, to avoid any voltage skewing effect. Please refer to “Understanding the Voltage Skewing Effect” section.

Press F1/Test to begin testing. Or press the Orange Test button on the keypad.

## 9. Connecting Resistance Test Leads

When Ready to Test is flashing, depending on what type of intercell measurement is selected, connect the three clip resistance test leads to the cell and intercell under test. If using spike probes, refer to the manual that accompanied the spike probes.

### 9.1. Connection for Single Intercell Connectors

Connect the probes as follows:

1. Red clip goes to the positive post of the cell being tested.
2. Red/Black clip goes to the negative post of the cell being tested.
3. Black clip goes to the positive post of the next cell.

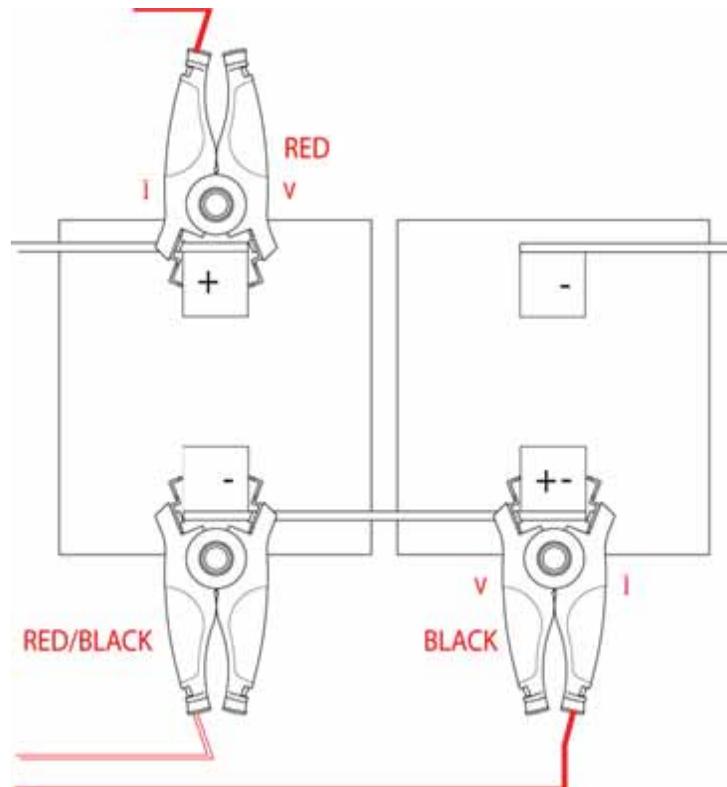


Figure 33 - Single Intercell Connectors

## 9.2. Connection for Dual Post Cells – Example One

There are many types of dual intercell connection schemes. Here are two examples that are commonly used. No matter what type, being consistent in how the leads are attached is the most important aspect of testing and taking readings.

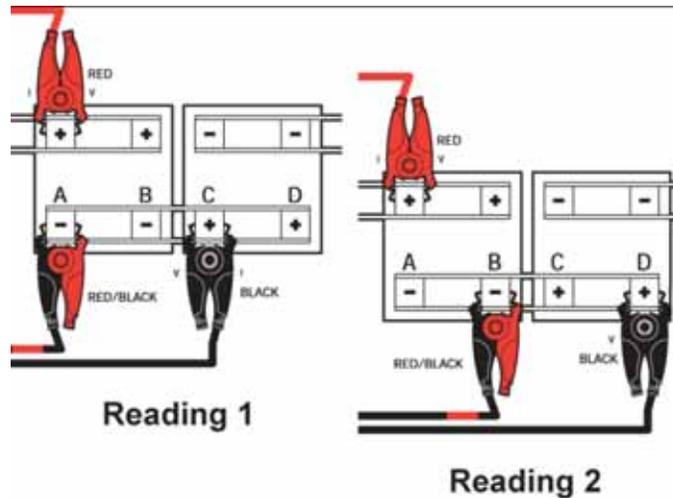


Figure 34 - Connections For Dual Post Cells – Example One

### Take Two Readings

Two readings are required and the CRT will prompt the user to move the leads after each reading.

- The first reading occurs upon the initial press of the Orange Test button and measure terminal posts A to C.
- When prompted to move the leads, the second time the Orange Test button is pushed, the measurement will be from terminal posts B to D.

### 9.3. Connection for Dual Post Cells – Example Two

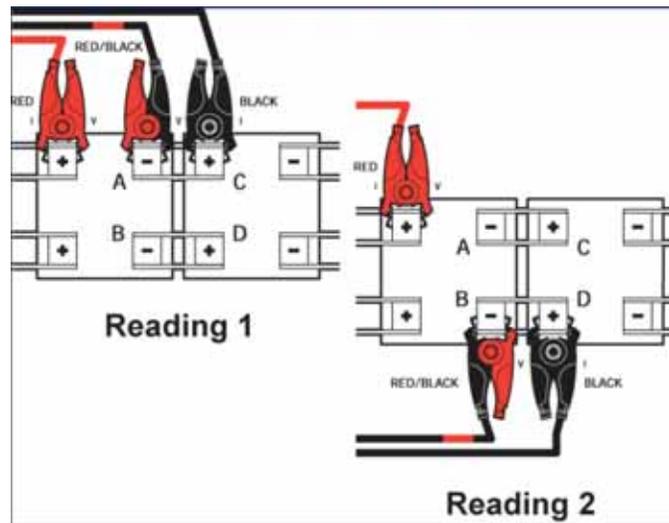


Figure 35 - Connections for Dual Post Cells – Example Two

#### Take Two Readings

Two readings are required, and the CRT will prompt the user to move the leads after each reading.

- The first reading will occur upon the initial press of the **Orange Test** button and will measure terminal posts A to C.
- When prompted to move the leads, the second time the **Orange Test** button is pushed, the measurement will be from terminal posts B to D.

### 9.4. Connections for Triple Post Cells

#### Take Three Readings

- ☐ Reading with the intercell leads connected from terminal posts A to D.

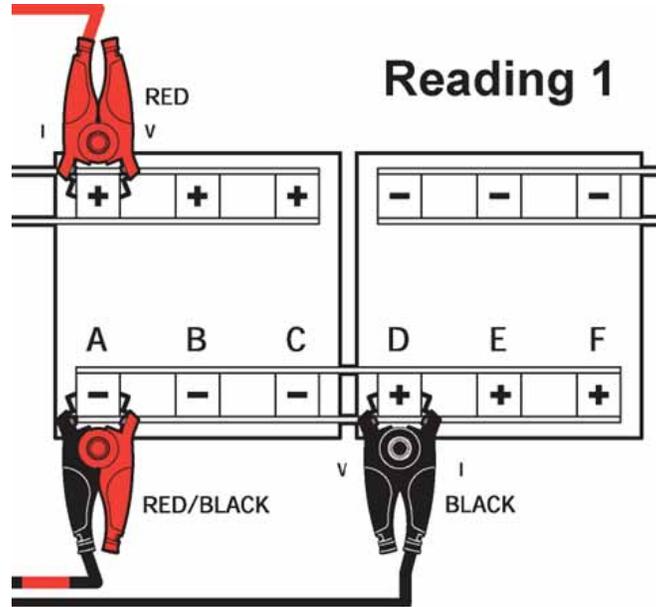


Figure 36 - Connections For Trip Post Cells – One

Readings with the intercell leads connected from terminal posts B to E.

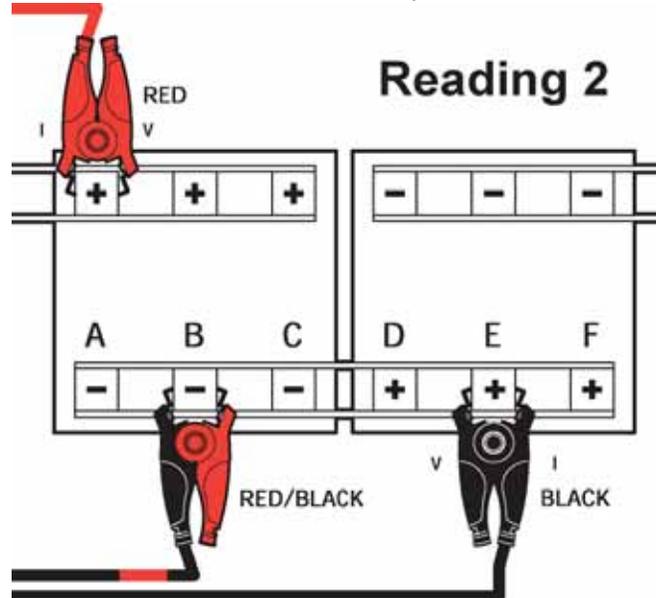


Figure 37 - Connections for Trip Post Cells – Two

Readings with the intercell leads connected from terminal posts C to F.

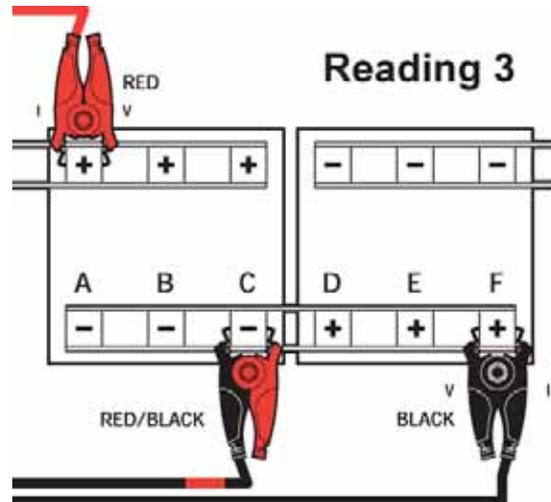


Figure 38 - Connections for Trip Post Cells – Three

### 9.5. Performing a Resistance Test


Since float voltage readings exist, the Resistance LCD window flashes **Ready to Test**. Press the **Orange Test** button.

The Resistance LCD window displays  $V_c(\text{act})$  or  $V_c(\text{mem})$ .  $V_c(\text{act})$  shows the actual cell voltage being read.  $V_c(\text{mem})$  means the cell voltage was read earlier and is in memory.

S#: C#-##:### U <sub>c</sub> ( )	
##.### U <sub>c</sub>	R <sub>ic1</sub> )----- μΩ
R <sub>c</sub>	R <sub>ic2</sub> )----- μΩ
##### μΩ	R <sub>ic3</sub> )----- μΩ
	R <sub>ic4</sub> )----- μΩ
<b>Ready to test</b>	DONE

Note: The figure above shows the window for multiple strings. If only one string is present then the S# will not display; Cell# only will display.

While testing is in progress, the LCD will display the Test Progress LCD window.

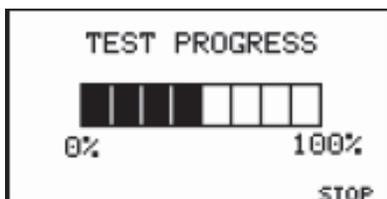

## 9.6. Moving Probes from Cell to Cell

After the cell or Ric1 intercell resistance appears, move the probes to the next cell or intercell and press the **Orange Test** button. The cell or intercell number advances when the leads are moved.

If the cell requires two or more intercell Ric resistance readings, move the black/red and black leads to the next Ric connection, then press the **Orange Test** button for each Ric measurement.

The first Ric reading displays when **Test** is initially pressed; the next one displays after the leads are moved and **Test** is pressed again. In this case, the cell number does not increment until the last intercell is read.

**Note:** If you are using a *Bluetooth* headset, the instructions will dictate when you can move to the next cell. You can step to the next cell number using the up arrow, but then you may have unread cell or intercell numbers. Use arrows primarily to review readings upon test completion.

If you press the **Orange Test** button before moving the probes to the next cell, then a **WARNING** message, "Reading exists. Overwrite?" appears.

To read the same cell/intercells, select YES/F1. Select NO/F2 to move to the next cell.




**Note:** If you press the **Orange Test** button too soon, 'Initializing' appears while internal components cool down. Testing may halt if components get too hot.

### Continue Measuring All Cells until Testing Is Complete

Remove the leads from the cell under test and press **DONE/F4**. You may save the readings from the next LCD window.

### To Stop a Resistance Test

Press **Stop/F4**, the stop LCD window appears.

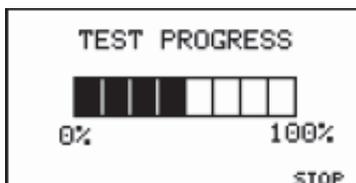

## 9.7. When No Float Voltages Exist

When no float voltage readings exist, a message appears; select Yes/F1 to switch to Voltage mode, insert the voltage leads, and select the cell number to read voltage. Resume resistance testing when finished.

```
No Ufloat readings
exist. Are you
sure you want
to continue?
YES  NO  HELP
```

If No/F2, is selected the Cellcorder concurrently reads voltage and resistance for each cell.

**Note:** Allowing the CRT to do this will result in an error in the voltage recorded. Refer to section for a better understanding.

## 10. Understanding Voltage Skewing Effect

The Cellcorder has the ability to read and record voltages at the same time resistance readings are taken. However, when doing so, a small error in the actual float voltage, results. This derivation manifests into a skewing effect of the voltage readings. As the resistance test starts, the beginning of the skewing affect will be seen as a gradual increase in voltage as the end of the string is approached. This is caused by the constant voltage charger wanting to maintain a fixed overall voltage and will increase the voltage of untested cells to make up the difference. The string each cell is lightly loaded causing the connection of overall voltage to occur on the cells further down the string that have not been tested.

To avoid voltage skewing be sure to take all voltage readings before you take resistance readings.

## 11. Using the CRT-400 as a Digital Voltmeter

Note: These readings cannot be saved and the unit does not beep once the voltage of a cell is checked.



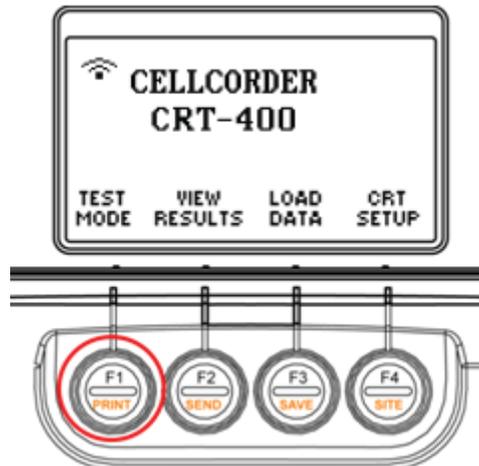


Figure 39 - CRT-Test Mode/F1

Make sure the CRT is powered on and the voltage test leads are connected. To use the Cellcorder as a digital DC voltmeter, select Test Mode/F1. Select F1- Voltage/Volt to obtain the voltage LCD window.

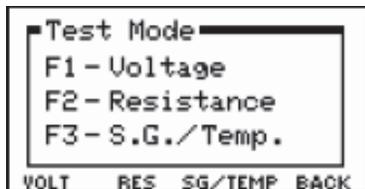

Select DVM/F1. The LCD window displays voltage readings as they are taken.

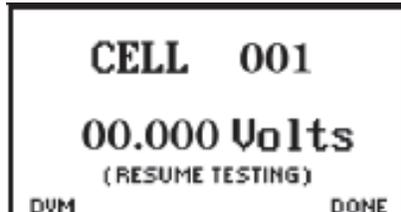

**WARNING:** Do not measure any voltage higher than 20VDC.

To leave the voltmeter mode and return to a previous LCD window, press Cancel.

## 12. The Hydrometer and the Data Logger

The optional hydrometer reads Specific Gravity SG and Temperature. The data storage logger that holds data for up to eight strings A to H, 256 readings for each string, is a separate module that mounts on the hydrometer. You may transfer Specific Gravity and temperature readings from the data storage logger in three ways:

1. To cellcorder via IR
2. To computer via IR
3. To computer via RS-232

The hydrometer data module's IR port interfaces with the Hydrometer first and then either the Cellcorder or computer; the RS-232 port transfers data from the data logger directly to the computer.

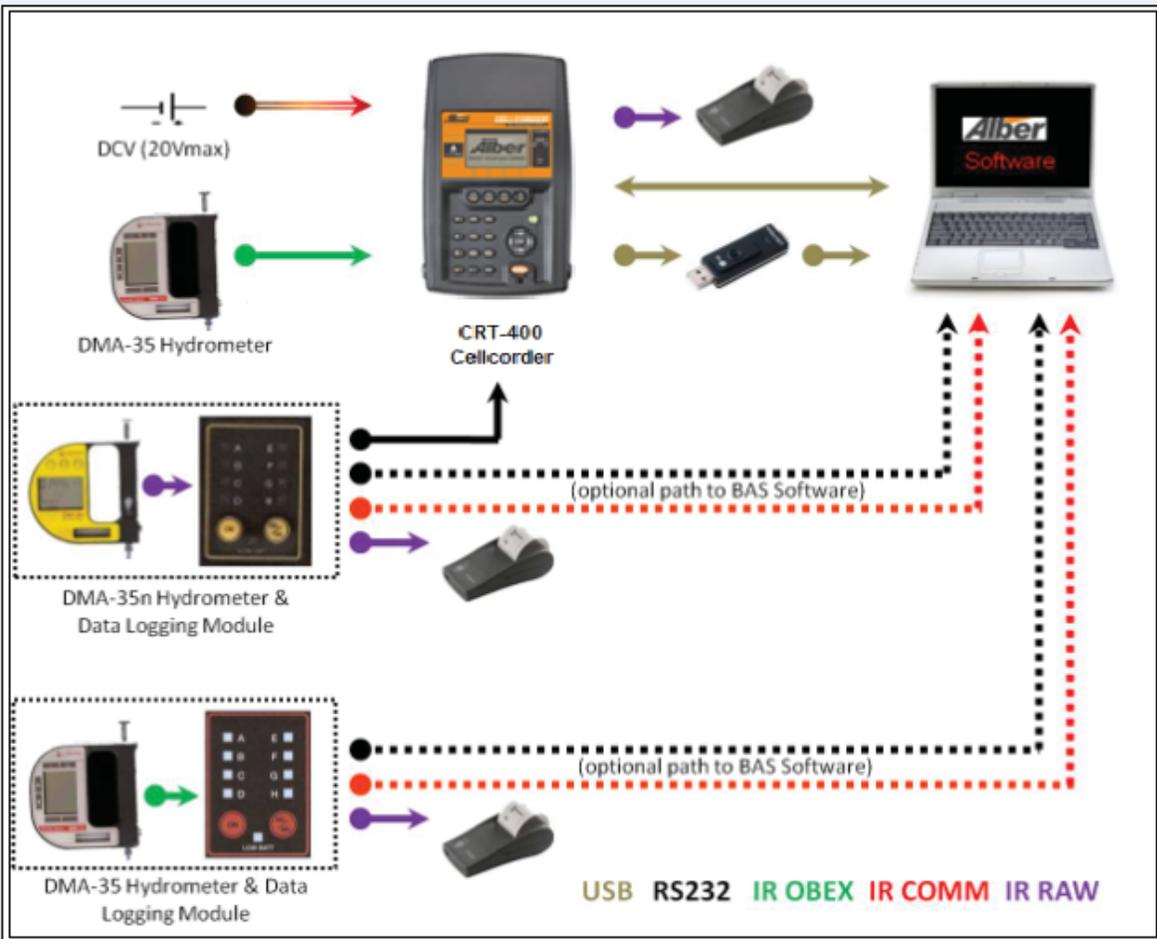


Figure 40 - Hydrometer, Data Logger, PC, CRT, USB Interaction

**Note:** When using RS-232, refer to the Battery Analysis System User's Guide. If both the Cellcorder and hydrometer have data for the same parameters, it's important to know which data is to be captured first as data captured last overwrites data captured first. e.g. if you capture Specific Gravity and temperature data from the Cellcorder and then the hydrometer, the hydrometer data will overwrite the already captured Cellcorder's data.

## 12.1. Setting Up the CRT for Hydrometer Usage

To Setup the CRT for Hydrometer Usage

Press F4/CRT Setup or select CRT Setup by pressing F4. Before transferring specific gravity and temperature data to the CRT – the CRT must know the specific temperature units that the hydrometer is set to, either Fahrenheit °F or Celsius °C. By default the Cellcorder is set to Fahrenheit °F.

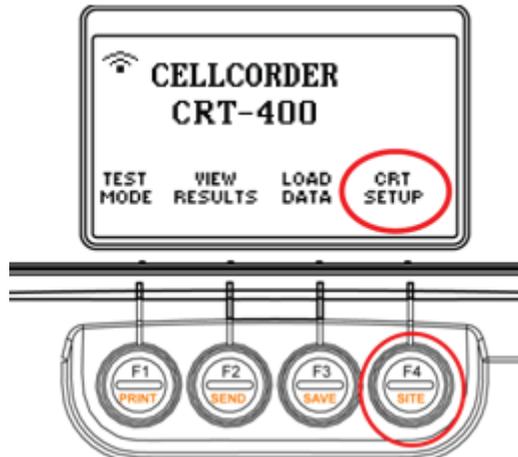


Figure 41 - CRT–CRT Setup/F4

Press F2/Thresholds to check for Fahrenheit °F or Celsius °C on the CRT, press F2 for Thresholds.


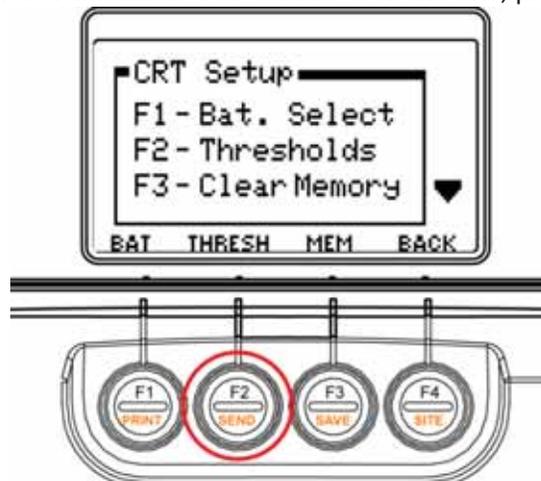


Figure 42 - CRT–Thresholds F4/F2


Note: Press Shift/ 5 to access Thresholds. Press the down arrow to access F2/Temperature.

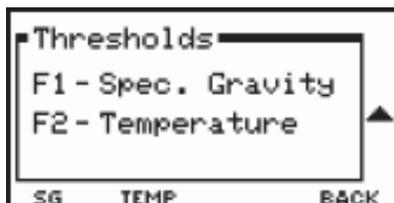

**Note:** Both the CRT and Hydrometer must be set to Fahrenheit °F or both the CRT and Hydrometer must be set to Celsius °C.

Press F2/TEMP

Change to Fahrenheit °F or Celsius °C by depressing F3-C/F. The temperature will need to be entered for the High Threshold by using the arrow keys. Then press F2/Accept.

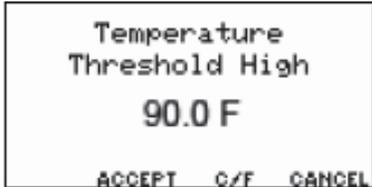


### Threshold Temperatures

The temperature will need to be entered for the Low Threshold by using the arrow keys. Then press F2/Accept.




### Specific Gravity Thresholds High

Press F1/Specific Gravity. The specific gravity threshold will need to be entered for High by using the arrow keys. Then press F2/Accept.

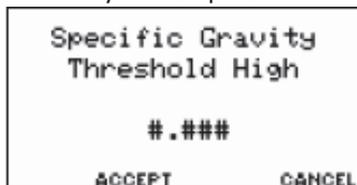


### Specific Gravity Thresholds Low

Press F1/Specific Gravity. The specific gravity threshold will need to be entered for Low by using the arrow keys. Then press F2/Accept.

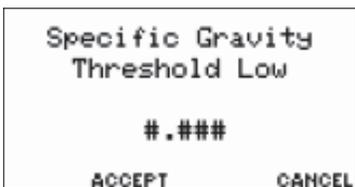


Once the highs and lows are entered, press F4/Back.

The up arrow key can access the other thresholds if necessary.

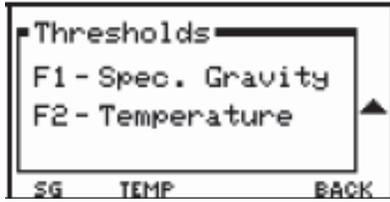

Or press F4/Back may be selected again to go back to the main menu.

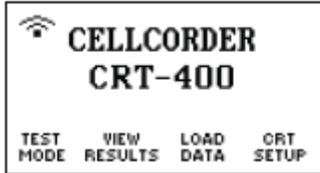

## 12.2. Taking Readings with the Hydrometer

Once both the CRT and Hydrometer settings are 'synchronized' use the hydrometer as instructed in its manual.

To Transfer Hydrometer Data to CRT Via IR


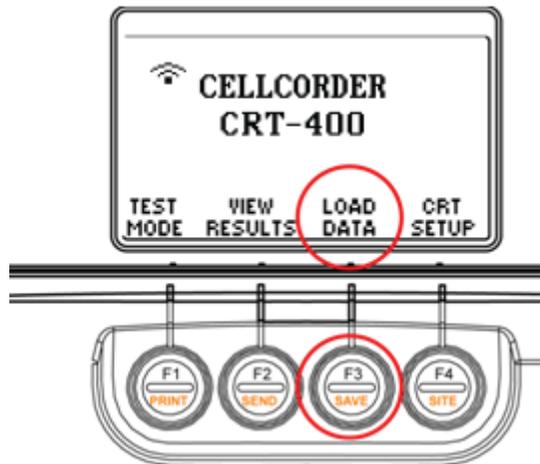


Figure 43 - CRT–Main Menu/Load Data/F3

**Note:** The USB flash hard drive must be inserted to accomplish this Load Data function. The data logger must be attached to the hydrometer.

1. Press F3/Load Data.
2. Press F2/Cell Data
3. Select Cell Data by pressing F2.

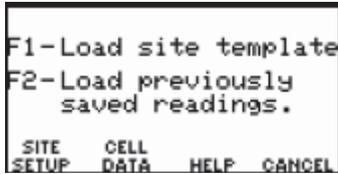

**Cell Data/F2**

Highlight a .CDF file name by using the arrow keys and press **Select/F1**.




A warning displays if data exists in the CRT’s memory. Press **F3** to **Continue** or **F1** to **Cancel**.




If **F3** is pressed to **Continue**, the CRT reads the USB and loads the cell information. The main menu appears once the file has been selected or if **Cancel/F1** is pressed.

Now, select **Test Mode/F1**.

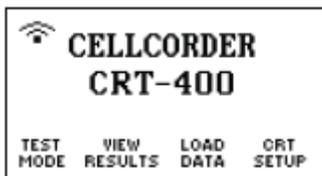

Select **SG/Temperature/F3**, then press **Import/F2**.

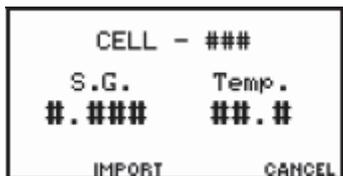

**Use The Hydrometer’s Data Logger to Transfer Data to your Previewer**

1. Turn the data logger on.
2. On the data logger, press **SEL** to select the channel (string) A through H from which data will be transferred to your previewer. The module LEDs indicate memory status as follows:
  - **Fast** - If the LED next to A through H is flashing fast, that channel has data and is selected.
  - **Steady** - If the LED is on, that channel has data but is not selected.

- **Slow** - If the LED is flashing slowly, the channel is selected but has no data.



Figure 44 - Data Logger

The CRT-400 calls the data logger a “Hydrometer Memory Module” in the LCD window.

```

On hydrometer
memory module,
select string (A-H)
and align IR ports.
CONTINUE      BACK
  
```

Align the data logger’s IR port with the IR port on the right side of the Cellcorder.

On the Cellcorder, press **Continue/F2**. The Cellcorder displays Receiving Data, and the data logger’s LED remains lit. When all readings have been loaded, the data module LEDs resume flashing, and the Cellcorder displays the SG/Temp for Cell 001.

```

CELL - ###
S.G.   Temp.
#.###  ##.#
IMPORT  CANCEL
  
```

To save the file with the SG/Temp data, press **Shift Save** type the file name, then press **Save/F3**.

**Note:** The data logger/memory module powers off after about one minute of inactivity.

To delete data on a data logger’s channel, select the channel and press **Del** until the flashing LED goes out. Refer to the data module and hydrometer manuals for additional instructions.

### 12.3. Transferring Hydrometer Data to Computer

Use the CRT-400 Previewer or BAS program to transfer Specific Gravity/temperature from the hydrometer’s data logger to the computer via IR or RS-232 serial cable. To transfer data, refer to the CRT-400 Previewer User's Guide or the Battery Analysis System User's Guide.

# 13. Setting Up the CRT

Once you select CRT Setup by depressing F4, the setup options display in the figure below.

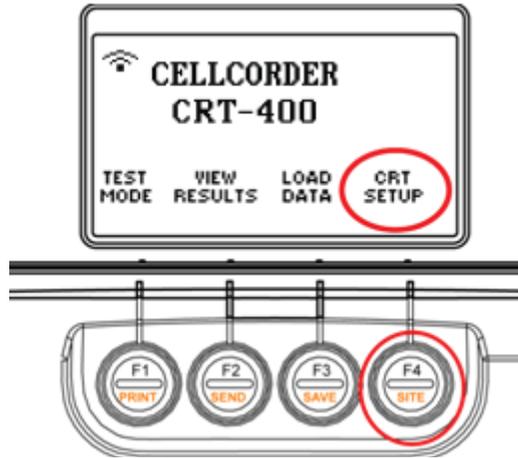


Figure 45 - CRT–Main Menu with F Buttons for CRT Setup/F4


CRT Setup/F4:



- F1–Bat. Select/
- F2–Thresholds/
- F3–Clear Memory



- F1–Display/
- F2–Sounds/
- F3–Frequency

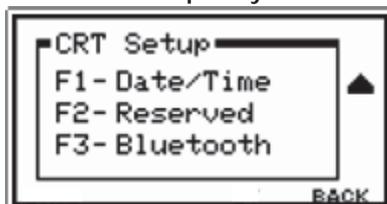

- F1–Date/Time/
- F2–Reserved/
- F3–*Bluetooth*

### 13.1. Selecting a Battery

This section accesses the USB flash hard drive to open a file called Battlist.blf, a baseline resistance data file that contains a list of common battery information. If the file is not loaded on the USB device, then it will need to be placed on the USB device to help select battery data information.

Press F1 to access the Baseline Resistance Data File containing battery models that automatically set certain threshold parameters.


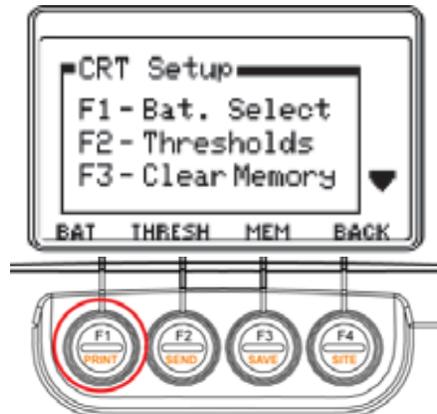


Figure 46 - CRT- Setup/Bat. Select-F4/

Note: The USB flash hard drive must be inserted to accomplish this Battery Select function.

### 13.2. Reading USB

Wait for the USB device to be read to populate the Manufacturers and Models lists.

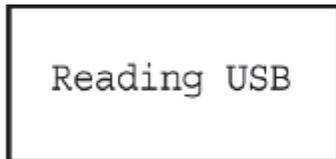


### 13.3. Selecting a Manufacturer

To select a manufacturer, press F2/ACCEPT.



### 13.4. Selecting a Model

Select a battery model and press F2/Accept.

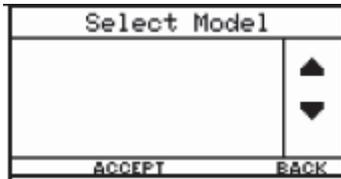

### 13.5. Setting Thresholds

To set thresholds press F2.

Note: Shift/5 also accesses Thresholds.

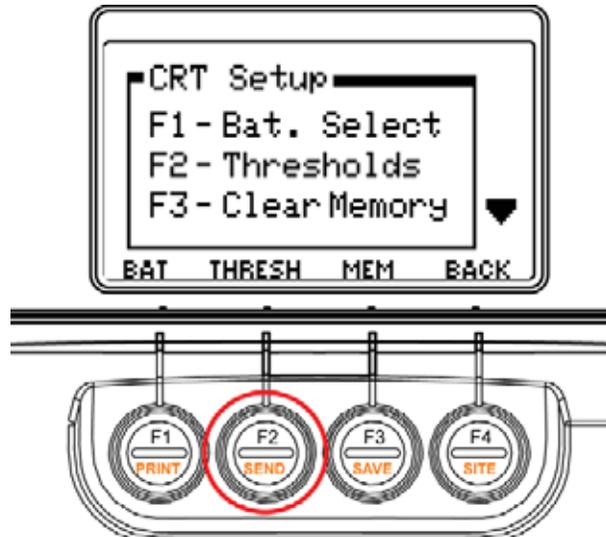


Figure 47 - CRT- Setup/Thresholds or F4/F2

Voltage and resistance thresholds can be set or changed outside of site setup. The Cellcorder indicates an out of tolerance reading by beeping twice and displaying the reading in reverse video.

#### Site Is Not Selected

If a site is not selected, you can set up thresholds using CRT Setup/Thresholds F4/F2. The settings remain in Cellcorder temporary storage until changed, cleared to default (zero) values or a site is selected.

#### Site Is Selected

If a site is selected, you can change the thresholds using CRT SETUP/Thresholds F4/F2, but the changes affect only the Cellcorder and not the site file. The settings remain in temporary storage until changed, cleared to default or another site is selected.

#### Default Thresholds


If a site is selected, you can quit the site settings and return to default thresholds for voltage, resistance, temperature, and Specific Gravity without affecting the site file.

#### To Clear Site Setup and Thresholds

To have no site associated with a file that has been linked, and to clear threshold settings, use the Clear button on the Active Site LCD window.

### 13.6. Setting Thresholds without a Site File


Select CRT Setup F4 then ThresholdsF2, then choose Voltage, Cell Resistance, Intercell Resistance, Specific Gravity or Temperature.

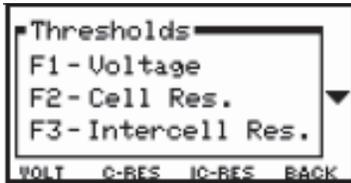

F1-Voltage

F2-Cell Res.

F3-Intercell Res.

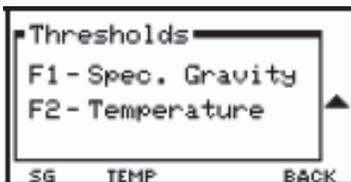

F1-Spec. Gravity


F2-Temperature

A series of LCD windows appears for parameters that may be set. Press the Arrows to change values. Press F2/Accept to accept the value displayed.

F1-Voltage High



F1-Voltage Low

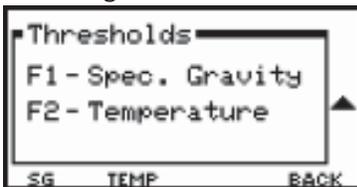

F2-Cell Resistance High

```
Cell Resistance
Threshold High

      μΩ

ACCEPT      CANCEL
```

F2-Cell Resistance Low

```
Cell Resistance
Threshold Low

      μΩ

ACCEPT      CANCEL
```

F3-Intercell Resistance Threshold High

```
Intercell Resistance
Threshold High

Rio 1 of 4  ####μΩ

ACCEPT      CANCEL
```

F1-Specific Gravity Threshold High

```
Specific Gravity
Threshold High

#.###

ACCEPT      CANCEL
```

F1-Specific Gravity Threshold Low

```
Specific Gravity
Threshold Low

#.###

ACCEPT      CANCEL
```

F2-Temperature Threshold High

```
Temperature
Threshold High

##.#

ACCEPT  C/F  CANCEL
```

F2-Temperature Threshold Low



### Temperature/Fahrenheit or Celsius

On the Temperature LCD windows, before setting the high/low temperatures, select °Celsius or °Fahrenheit by selecting C/F–F3.

### Disabling A Threshold

Setting any threshold value to zero (or 32°F / 0°C for temperature) disables the threshold. Use the arrows to enter threshold values. You cannot use the keypad to type numeric values. The following list shows the ranges for each programmable threshold limits.

#### Voltage Threshold

- High 00.000V to 19.999V
- Low 00.000V to 19.999V

#### Cell Resistance Threshold

- High 00000μΩ  to 64999μΩ
- Low 00000μΩ  to 64999μΩ

#### Intercell Resistance Threshold

- (Ric 1 of 4) High 00000μΩ  to 24999μΩ
- (Ric 2 of 4) High 00000μΩ  to 24999μΩ
- (Ric 3 of 4) High 00000μΩ  to 24999μΩ
- (Ric 4 of 4) High 00000μΩ  to 24999μΩ

#### Specific Gravity Threshold

- High 0.000 to 9.999
- Low 0.000 to 9.999

#### Temperature Threshold

- High 32.0°F (0°C) to 99.9°F (37.7°C)
- Low 32.0°F (0°C) to 99.9°F (37.7°C)

**Note:** **Shift** and an **Orange Button** opens the function in **Orange** text on the button. Press **Shift**, release **Shift**, then press an **Orange Button** to select an **Orange** text on a key.

## 13.7. Clearing Memory

To clear memory on the CRT-400, press F3.



**CAUTION:** After clearing CRT–400 temporary storage, data cannot be recovered unless it had been previously saved to the USB flash hard drive.


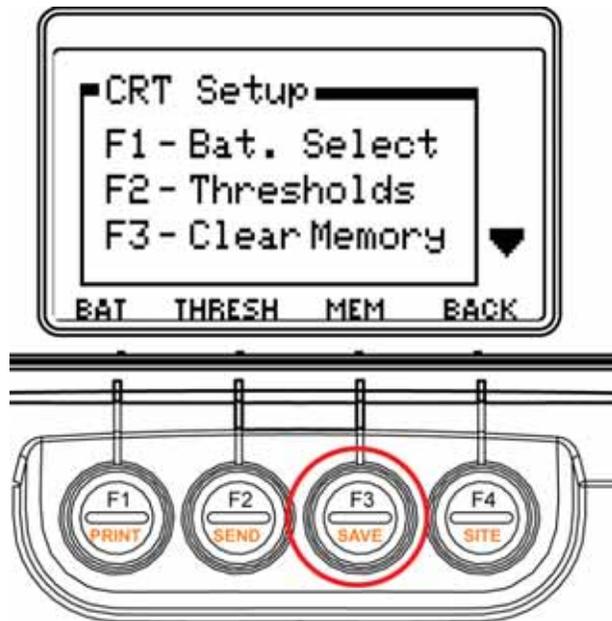


Figure 48 - CRT Setup/Clear Memory or F4/F3


**Note:** Also access Clear Memory. If you want to take readings on another battery, save the previous readings to the USB flash drive before clearing them from temporary storage.

This function is used to save to the USB flash drive and/or clear temporary storage. At power up and power down, if data is in temporary storage, messages to save and clear also appear.


To save the data, press Yes/F1 and refer to Saving to the USB flash drive.

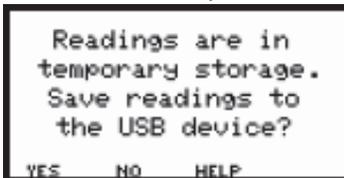

If you are certain you want to delete/erase the readings, press Yes/F1 To keep readings, press No/F2.

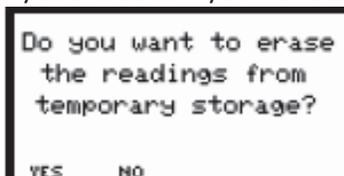

Confirm your decision, Yes/F1 to keep readings, press No/F2 to discard readings.

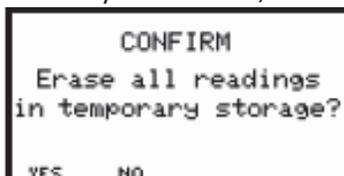

**Note:** Data will not clear until after you save it.

**Important:** Powering off does not remove readings from temporary storage. To prolong battery life, the CRT-400 shuts down if inactive for ten minutes. At power up or power down, a message may appear: Readings are in temporary storage. Save readings to the USB device?

To save cell readings to the USB flash drive, insert the drive and press Yes/F1. Whether you press Yes or No, data remains in Cellcorder temporary storage. To clear data from memory when the message, Do you want to erase the readings from temporary storage? appears, press Yes/F1; all readings in temporary storage will be deleted.

**Note:** To keep cell data, it must be saved before clearing temporary storage. Cleared data is lost but can be retrieved from the USB flash drive. If you back up USB flash drive data to a computer, you can use the BAS program to analyze cell readings.

### 13.8. Displaying Additional Functions

When in CRT Setup, use the down arrow to access the next set of functions, F1–Display, F2–Sound and F3– Frequency. Select F1 to adjust the CRT’s LCD display.

**Note:** Shift then 6 accesses the Display functions.


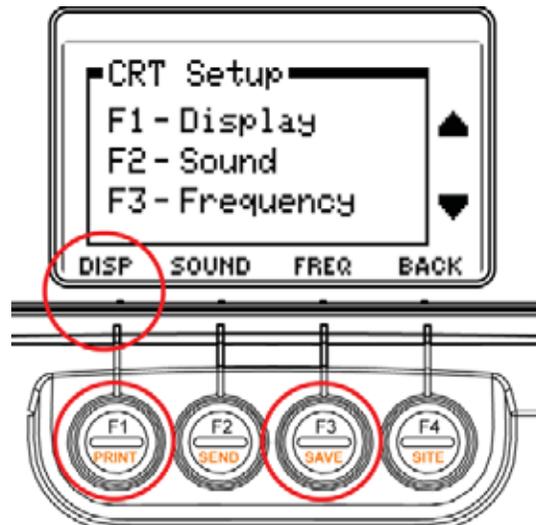


Figure 49 - CRT Setup/Display Functions

Adjust LCD Contrast

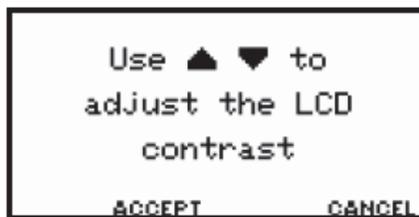

### 13.9. Sound Adjustment

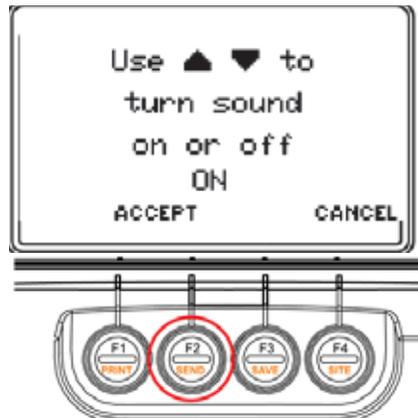


Figure 50 - CRT Sound Adjustment

Use Sound to turn the Cellcorder beeper off or on.

1. To adjust the sound, press F2 then Accept.
2. Use the up and down arrows to select off or on, and then press Accept.

Note: Shift then 8 will also access sound.

### 13.10. Frequency

Use Frequency to have the Cellcorder A/D circuitry filter out the AC line frequency noise. Use the up and down arrows to select 50Hz or 60Hz, then press Accept.

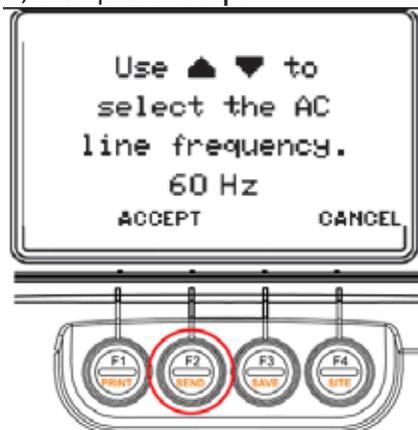


Figure 51 - CRT AC Line Frequency 50/60 Hz

Note: Shift then 4 will also access AC Line Frequency.

### 13.11. Adjusting Date and Time



Figure 52 - CRT Time and Date

Use Date to set the date, time, and date format. Use the up, down, left and right arrows to set the date and time, then press F2/Accept.

To select date format (MM:DD:YY or other), press the corresponding F key.


Note: Shift then 2 will also access Date/Time.

### 13.12. Reserved

Reserved F2 is for future use.

### 13.13. Setting Up Bluetooth Wireless Communication

On power up, if the *Bluetooth* wireless option is installed then the wireless symbol appears on the main menu. The first LCD window shows the wireless disconnected and the second LCD window shows the wireless connected.

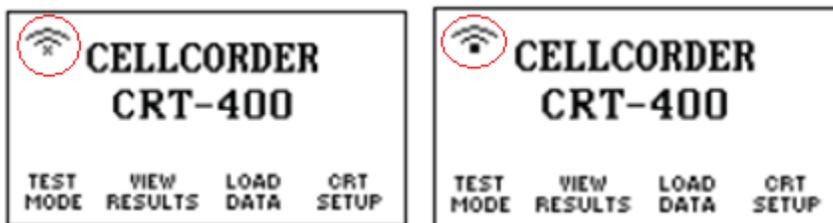


#### Choose a New *Bluetooth* Device

Power up the CRT-400, press CRT Setup/F4 on the main menu and use the arrow key to scroll down, press the down arrow twice, and press F3-Bluetooth.




The message “Checking for *Bluetooth* Option” is displayed. Please Wait appears.

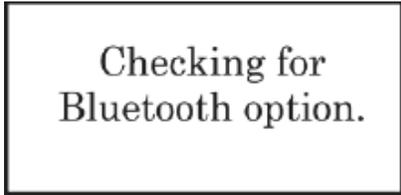

Checking for  
Bluetooth option.

Initially, the message “No devices paired.” indicates no *Bluetooth* device is stored in memory.

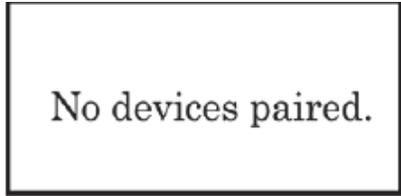

No devices paired.

Select New/F1. Then F1-Headset.



New Device  
F1 - Headset


**Note:** Use the corresponding F key to select the desired device type.

The message *Configuring Bluetooth* appears.



Configuring  
Bluetooth

The next message on the LCD window prompts you to **Turn on the device and place it in discovery mode**. Place the *Bluetooth* device in discovery mode according to the devices manufacturer’s directions. Select **Continue/F2**.

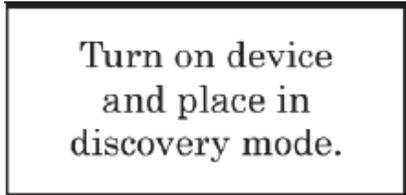

Turn on device  
and place in  
discovery mode.

When searching devices is complete, the Cellcorder lists all discovered devices.




The device Address and Name will display. Use the arrow keys to scroll to the desired device and press Select/F1 to connect to it.




The LCD display flashes Connecting...



Turn the wireless device on. Select Connect/F2.

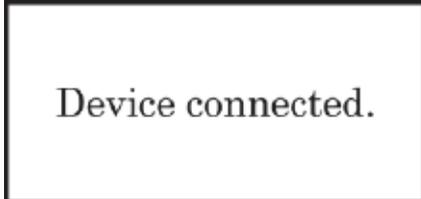


The connection is confirmed by the devices connection message. The LCD displays the wireless connected symbol on the main menu.

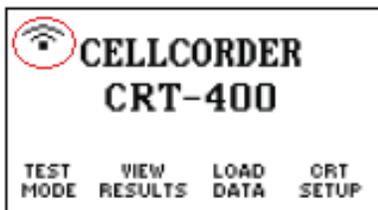


#### Reconnect *Bluetooth* Device That Fails To Connect

The message Failed to Connect indicates that the last device or previously connected device could not be accessed.

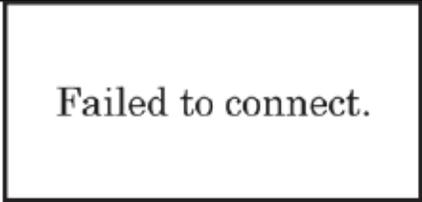

Failed to connect.


To connect, choose CRT Setup F4, use the down arrow to scroll to F3–*Bluetooth* and press F3.

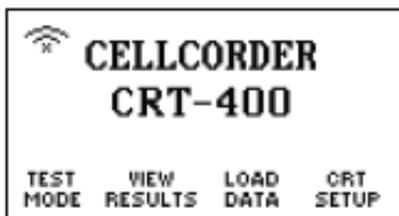

CELLCORDER  
CRT-400

TEST VIEW LOAD CRT  
MODE RESULTS DATA SETUP

The message Checking for *Bluetooth* option appears.

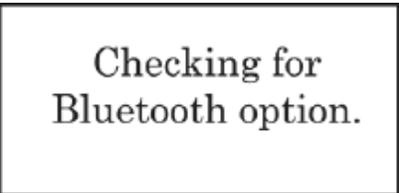

Checking for  
Bluetooth option.

The last connected *Bluetooth* device will display. Decide if a new connection to a different device is needed or the established connection is desired.




Headset  
xjhdfeifooa  
Model xyzxyx

NEW CONNECT DELETE CANCEL

Connecting to a Previously Established *Bluetooth* Device


To connect, choose CRT Setup/F4, use the down arrow to scroll to F3– *Bluetooth* and press F3.

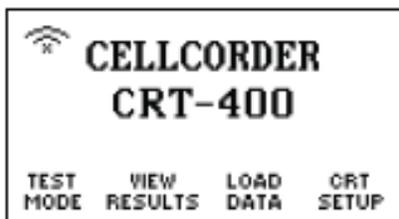

CELLCORDER  
CRT-400

TEST VIEW LOAD CRT  
MODE RESULTS DATA SETUP

The message “Checking for *Bluetooth* option” appears.

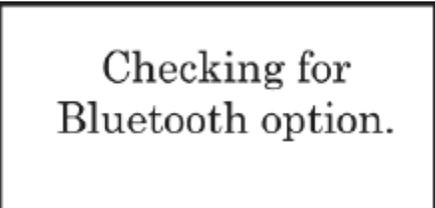


Checking for  
Bluetooth option.


The last connected *Bluetooth* device will display.



Turn the wireless device on. Select **Connect/F2**.

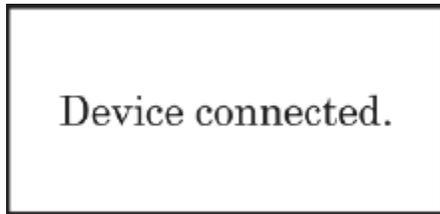


The connection is confirmed by the devices connection message. The LCD displays the wireless connected symbol on the main menu.

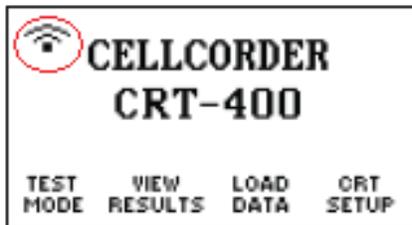


#### Deleting a *Bluetooth* Device That Is Not Connected

Choose **CRT Setup F4**, use the down arrow to scroll to **F3– Bluetooth** and press **F3**.

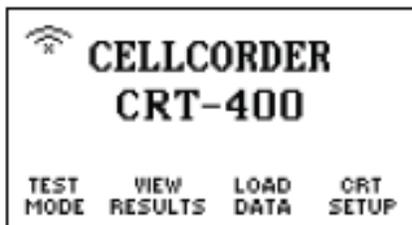

**Note:** In this example, the wireless symbol with an “x” indicates no device is connected.

The message **Checking for Bluetooth** option appears.

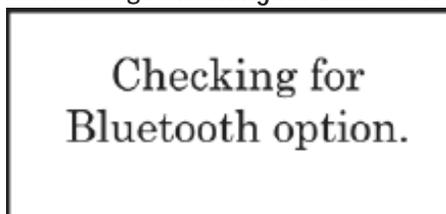


The last connected *Bluetooth* device(s) will display.



Select DELETE/F3 and a warning message appears: “WARNING! Are you sure you want to delete *Bluetooth* device?”




To delete, select Delete/ F1. The message No device paired appears. Select New if you would like to setup a new *Bluetooth* device, or press Cancel to go out of the *Bluetooth* setup function.

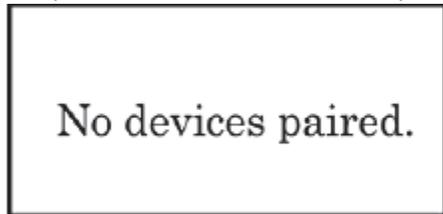


#### Deleting a *Bluetooth* Device That Is Connected

Choose CRT Setup F4, use the down arrow to scroll to F3–*Bluetooth* and press F3.

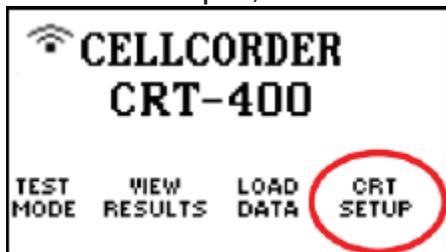


Note: In this example, the wireless symbol with a shaded square indicates the CRT is connected to a *Bluetooth* device.

The CRT displays this message. Choose Disconnect F1.

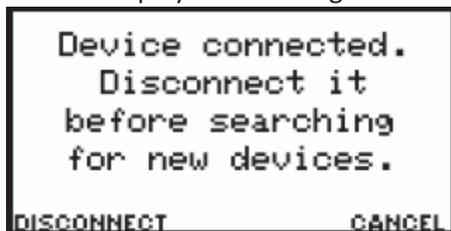

The main menu will display and the square will be an x underneath the symbol.

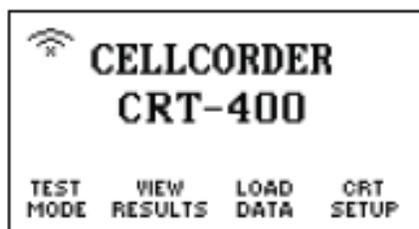

The device can now be deleted by following the instructions in “Deleting a *Bluetooth* device that is not connected”.

#### Selecting a Different *Bluetooth* Device

If a device name appears and you want a different device, press **New** and follow the instructions in “Discover and/or Choose A New *Bluetooth* Device” in this guide.



**CAUTION:** Do not use the CRT-400 menu to connect to a *Bluetooth* equipped computer for data transfer. Use the BAS program for connection.

## 14. Setting Up and Editing a Site Template

Sites let you record details for locations remotely and use the same information for future testing. This section describes site LCD windows and setting up, linking, editing, and deleting sites.

**Note:** To display the main menu from any LCD window, press and release **Shift**, then press **1**.

To create a new site, press **Load Data/F3**:


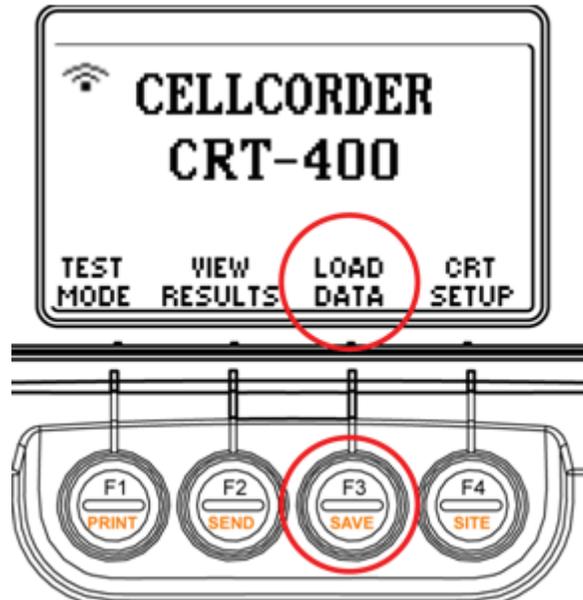


Figure 53 - CRT Load Data Main Menu

**Note:** The USB flash hard drive must be inserted to accomplish this Load Data function.


Before reading voltage or resistance, select a site for best practice. A site setup is not required for testing, but is useful for managing many sites. If a site is selected before testing, both the readings and site setup will be saved in the .CDF file.

To select a site template, at the main menu, select **Load Data/F3** to obtain this LCD window and select **Site Setup/F1**.

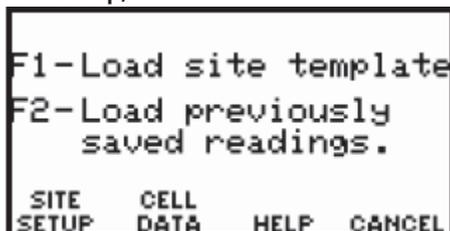

Press the right and left arrows to step to a site so that it is highlighted within the list, then press **Select/F1**.

**Note:** The keypad may also be used to enter site information.

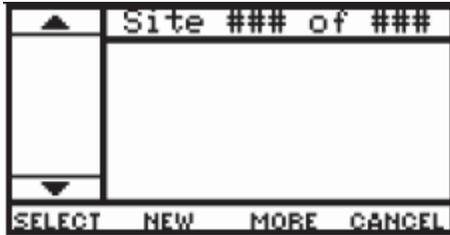


If the USB flash hard drive has no sites stored, then the New Site LCD window appears. If sites exist, press New to display New Site.



To begin site setup for a new site location, make sure LOC is highlighted by using the arrow keys. Press Change/F1.



Using the keypad, type the location name at the blinking cursor and press Save/F2. To correct a mistyped entry, use the arrow keys to highlight the character and retype or press F1/Delete Char.

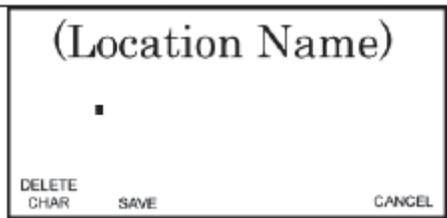

Press the arrow to highlight the next information item, BAT, press Change/F1, type, then Save/F2. Complete all items in the list. The following table lists all editable items and the keys to use arrows and the alphanumeric keypad.

**Note:** Location, battery and string name are what is the minimum entry needed to begin testing.

Item	Description	Edit Text Using
LOC	Location name. 39 characters max.	Left and right arrows and keypad
BAT	Battery name. 18 characters max.	Left and right arrows and keypad
STG	String name. 15 characters max.	Left and right arrows and keypad
MOD	Model number of battery. 39 characters max.	Left and right arrows and keypad
S#	Total number of strings. Defaults to 01	Left, right, up, and down arrows
C#	Total number of cells. Defaults to 24	Left, right, up, and down arrows
DAT	Battery installation date.	Left, right, up, and down arrows
OPT	Options. Sets the ripple filter (AC line) Frequency. Defaults to 60 Hz	Up and down arrows
HV,	LV High/low cell voltage. Sets limits.*	Up and down arrows
HR,	High/low internal cell resistance. Sets limits.*	Up and down arrows
LR	High/low internal cell resistance. Sets limits.*	Up and down arrows
HI1	High intercell resistance 1, 2, 3, 4. Sets limits.*	Left, right, up, and down arrows
HI2	High intercell resistance 1, 2, 3, 4. Sets limits.*	Left, right, up, and down arrows
HI3	High intercell resistance 1, 2, 3, 4. Sets limits.*	Left, right, up, and down arrows
HI4	High intercell resistance 1, 2, 3, 4. Sets limits.*	Left, right, up, and down arrows
HT	High/low cell temperature. Sets limits.*	Left, right, up, and down arrows
LT	High/low cell temperature. Sets limits.*	Left, right, up, and down arrows
HSG	High/low specific gravity. Sets limits.*	Left, right, up, and down arrows
LSG	Sets Amp hours for load test and TST intercell type. F2 and F3 keys	F2 and F3 buttons
TST	Sets Amp hours for load test and intercell type.	F2 and F3 buttons
VLT	Sets the high and low cell voltage range.	F2 and F3 buttons

Table 4 - Editing a Site Template

\*During testing, two beeps and reverse video indicate limits are exceeded. max = maximum.

**Note:** The blank space character is on the 9 key. The cursor advances two seconds after pressing an alphanumeric key, or you may use the Right Arrow. To type a name, for example, press a key then wait or press the Right Arrow.

Some items use Accept instead of Save.

After assigning all values, press **Save/F2** on the New Site LCD window. Site NNN of ### appears. NNN is this site number; ### is the number of sites on the USB flash hard drive.

### To Select/Work With A Site Template

To select a site template, at the main menu, select **Load Data/F3**.

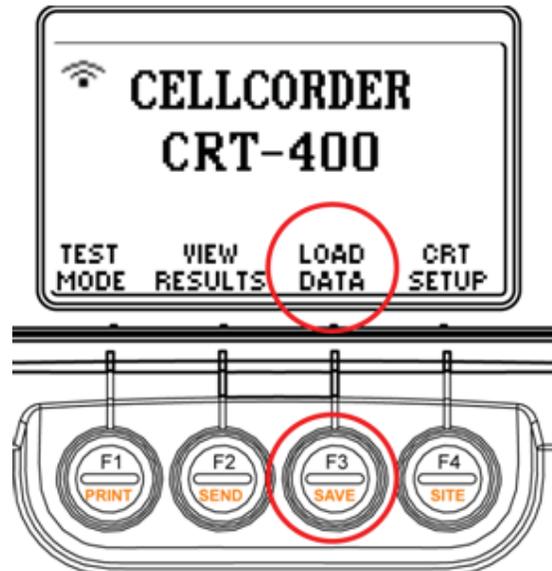



Figure 54 - CRT Load Data Main Menu

Site templates are useful because a field representative can set up a new location in the field when a pc and BAS software are not available. A site template can be set up before any testing is done with all the right thresholds etc. and can be used over and over again to set up additional sites that may need exactly the same information or similar information.

The site can be edited at any time after the testing but this preparation saves time and helps keep data readings consistent.


**Note:** The USB flash hard drive must be inserted to accomplish this Load Data function.

This LCD window displays, now press F1/Site Setup to load a site template.

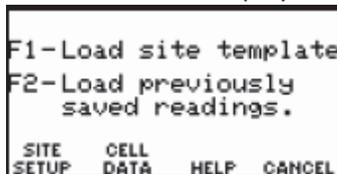

Press the right and left arrows to step to a site.


To select a site, press Select/F1. To go back a LCD window, exit a function, or return to the main menu, press Cancel/F4

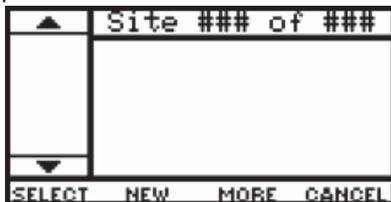

**Note:** You may also press Shift then 1.

When sites have been stored previously, then Site 001 of ### appears, where ### is the number of sites on the USB flash hard drive. Available options are **Select/F1**, **New/F2**, **More/F3**, and **Cancel/F4**.

Pressing **More/F3** displays a new LCD window with options **Change/F1**, **Delete/F2**, and **Back/F4**.

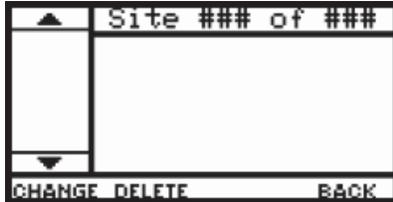

**To Deselect a Selected Site**

Press **Shift** then press **Site/F4**. Press **Clear/F3** to clear so that you may take readings with no site selected.

You are prompted to confirm your decision.

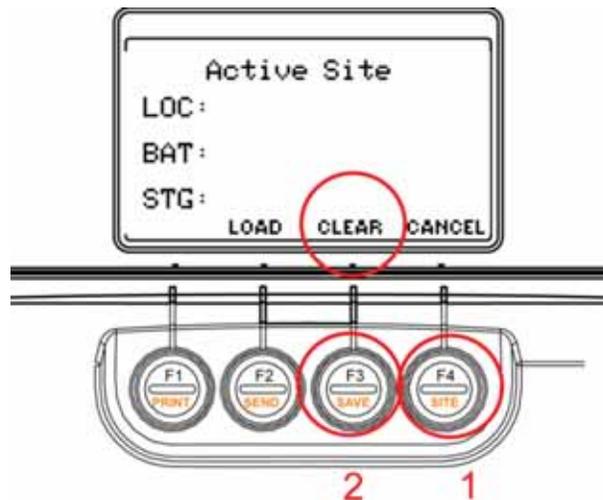


Figure 55 - CRT Clear/F3/Deselect a Site

**Note:** To determine at any time what site is selected, press **Shift/F4 Site**.

**To Select A Different Site**

Press **Load/F2**, use the arrow keys to find the desired site and then press **Select/F1**.

**To Access Any Site LCD window**

Insert a USB flash drive into the Cellcorder, then select **Load Data/F3** at the main menu and then press **Select/F1**.

If the USB flash drive has no sites, the New Site LCD window appears with **Change/F1**, **Save/F2**, and **Cancel/F3** options.

You can assign values to the items in the left column. Descriptions appear when an item is highlighted.



To Edit an Existing Site


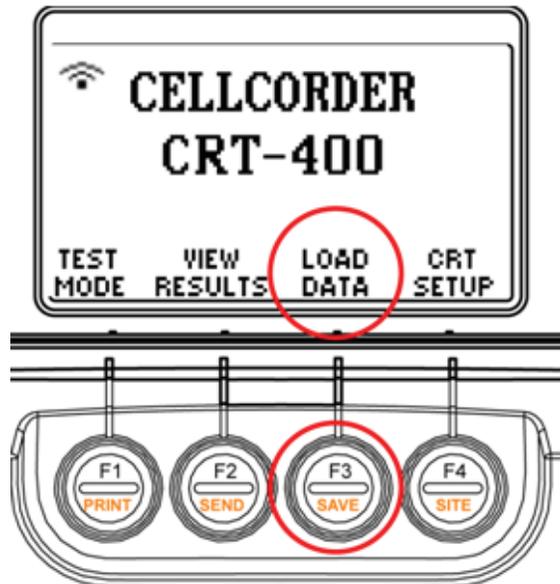



Figure 56 - CRT Main Menu on LCD/Load Data

To edit a site, at the main menu, select Load Data/F3 to obtain this LCD window. Press F1/Site Setup.

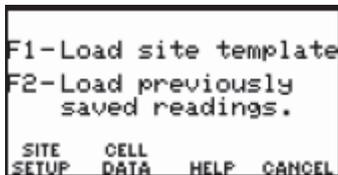


Note: The USB flash hard drive must be inserted to accomplish this Load Data function.

Press the Right/Left Arrows to step to choose a site. In this case we chose Boca Raton. Press More/F3.

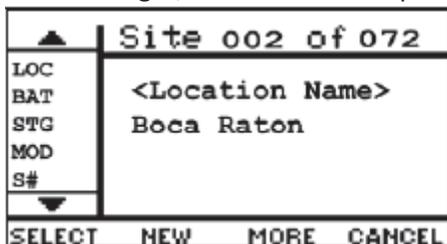

Using the keypad or arrows, choose the item within the site that needs to be edited, Battery, String etc. Press F1/Change. Type the new data and press Save/Accept/F2.

To edit another item, repeat the process. When editing is done, you may select the site by pressing Back/F4 then Select/F1.

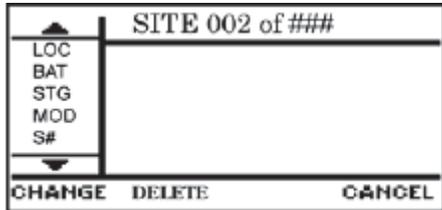

Note: Editing is not dependent on whether a .CDF data file is or is not associated with the site to be edited.

**To Set Up a Site Before Test**

For best results set up a site before reading voltage or resistance, a site setup is not required for testing, but is useful for managing many sites. If a site is selected before/after testing, both the readings and site setup will be saved in the .CDF file.


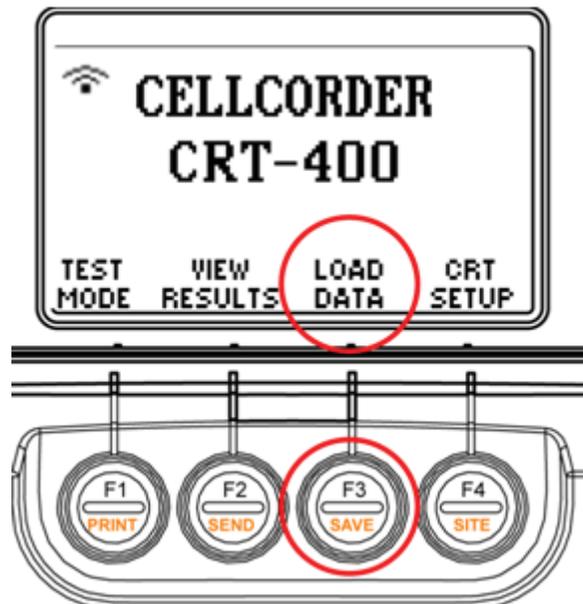


Figure 57 - CRT Main Menu on LCD/Load Data

Note: The USB flash hard drive must be inserted to accomplish this Load Data function.

Press the right and left arrows to step to a site, then press Select/F1.

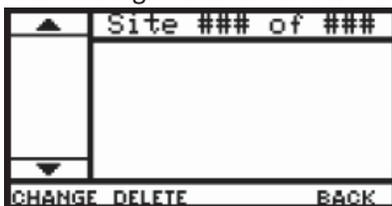

### To Link a File to a Site after Test

**Note:** The USB flash hard drive must be inserted to accomplish this Load Data function. If the readings are only in the CRT's temporary storage, first save them to the USB flash hard drive.

Linking a .CDF file or an existing set of readings that are in the CRT's memory to a site embeds Site Setup information. When transferring data to the computer, this lets the BAS program set up a new .ADF battery file with predefined information e.g. location, site name, string name, location etc. if one does not exist.

If cell readings were taken with no site selected, or saved to a .CDF file not associated with a site, you can link the file to a defined site or create a new site, then link the file.


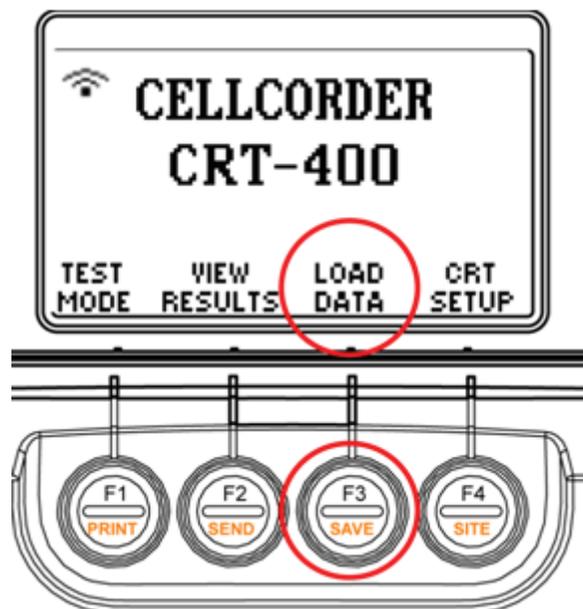


Figure 58 - CRT Main Menu on LCD/Load Data


To link a file to a site, at the main menu, select Load Data/F3 to obtain this LCD window and then press F2/Cell Data.



To open the data file you want to link to a site, select Load Data/F3, then Cell Data/F2. Use the arrow keys to move through the list to highlight the desired .CDF file, then press Select/F1.

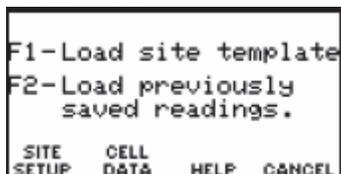

After the data loads into memory, the main menu appears.

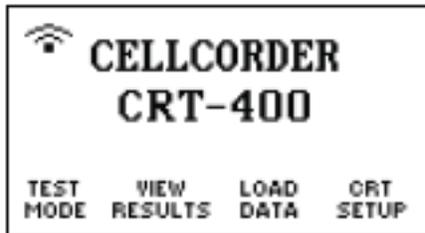


To confirm that the file is not already linked to a site, press **Shift/F4 Site**.

The Active Site LCD window should be empty of data and nothing should display in location, battery or string names. To return to the main menu, press **Cancel/F4**.



**Note:** If Active Site displays names, you can link the .CDF file to a different site by loading the new site and saving the file.

To select the site you want linked to the .CDF data file, select **Load Data/F3**, then **Site Setup/F1**, press the right, left arrows to step to the desired site, then press **Select/F1**. After the data loads into memory, the main menu appears.

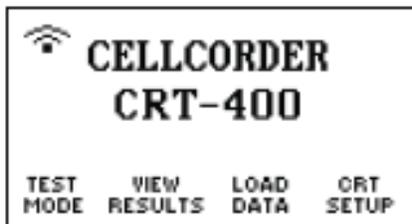

**Note:** You may also press **Load/F2** from the Active Site LCD window, then select a site. To save the linked data file to the USB flash hard drive, press and release **Shift** and then press **F3/Save**.

Using the keypad, type the file name at the blinking cursor and press **Save/F2**. To correct a mistyped entry, use the arrow keys to move to where the typo is located and type in the correct letter. Press **F2/Save**.



If the file name already exists then a warning window will appear: **WARNING!** Existing Data will be erased.


To cancel, press **F1**. To continue, press **F3** and a message will flash: Writing to USB. Notice the USB Memory LED will light up Yellow.




**Note:** The blank space character is on the 9 key. The cursor advances two seconds after pressing an alphanumeric key, or you may use the right arrow. To type a name, for example, press a key then wait or press the right arrow.

After the file is saved, you may confirm the site/file correlation by pressing **Shift/F4 Site**.

Now, the Active Site LCD window should display information in the location, battery and string name fields as it has just been entered.

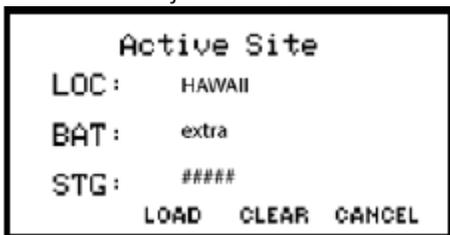

If Active Site displays the correct site information, then press **Cancel/F4** to go back to the main menu.

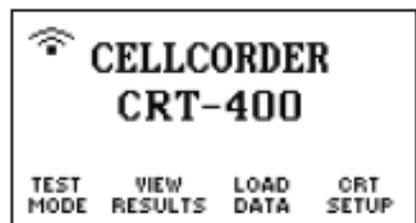

To select a different site, press **Load/F2** from the Active Site LCD window to begin again.

```
Active Site
LOC:  HAWAII
BAT:  extra
STG:  ####
      LOAD  CLEAR  CANCEL
```

**Note:** To determine at any time what site is selected, press **Shift/F4 Site**.

**To Unlink a File and To Clear Thresholds**

If you want to have no site associated with a file that has been linked, press **Shift/F4 Site** to display the Active Site LCD window with location, battery, and string names of the site currently selected.

```
Active Site
LOC:  HAWAII
BAT:  extra
STG:  ####
      LOAD  CLEAR  CANCEL
```

To unlink, press **Clear/F3** on the Active Site LCD window to return setup to default. The Confirm window unlinks the data file from the site. Select **Yes/F1**.

```
CONFIRM
Restore site setup
data to default?
YES  NO  HELP
```

Select **Continue/F2**. The Site setup data is restored to default

```
Site setup data
restored to default.

CONTINUE
```

Select **Yes/F1** to clear all threshold settings to default.

```
Do you want to
clear all threshold
settings to default?
YES  NO
```

To accept the changes on the Active Site LCD window, press Cancel/F4. Press Shift/F3 Save to save the file.



To Delete a Site


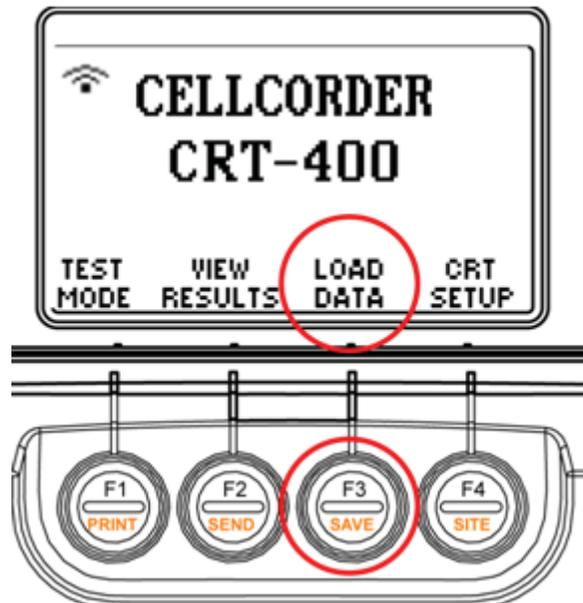



Figure 59 - CRT Main Menu on LCD/LOAD DATA

To delete a site, at the main menu, select Load Data/F3 to obtain this LCD window and select F1.

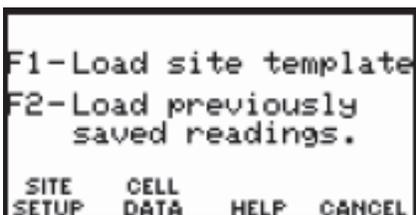

Note: The USB flash hard drive must be inserted to accomplish this Load Data function.

Press the right and left arrows to step to a site, then press Delete/F2.

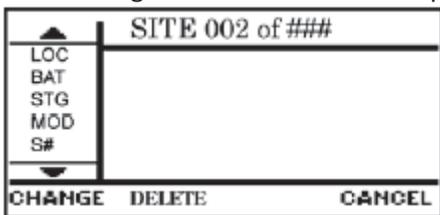


The Delete Site At confirm LCD window appears



At the confirm LCD window, press Yes/F1.

The site is now deleted.

If the deleted site was the currently selected site, press **Shift/F4** to display the Active Site LCD window to load or clear.

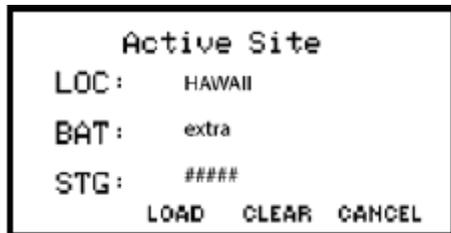

Press **Load/F2** and select a new site or press **Clear/F3** to have no site selected.

**Note:** When a site is deleted, the last site shifts to fill the deleted site. For example, if site 003 of 006 is deleted, site 006 becomes 003 of 005. You may use the BAS program or CRT-400 Previewer to sort the sites on location, battery or string name.


## 15. Working with Files

### 15.1. Saving Readings and Files to the USB Flash Hard Drive

Insert the USB flash hard drive into the CRT and turn on.

To save readings, press Shift then F3.

Enter File Name, type a name, up to eight characters, no spaces. Or press Select Names/F3 to select an existing file name.

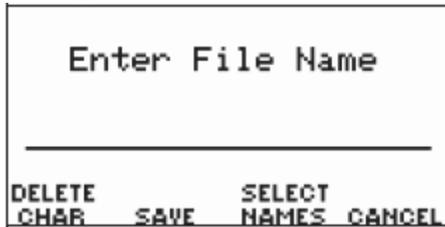

Press Select/F2. To save to the USB flash hard drive, press Save/F2.



Press F3/Continue.

Press F1/Cancel when you wish to cancel saving the readings to the file chosen.



If the file exists, another warning will alert you and ask to confirm saving the file name typed or chosen.

For Yes press F1, for No press F2.



**Note:** Readings in temporary storage can also be sent to a computer via IR. A space cannot be inserted in a file name.

Saving readings to the USB flash hard drive does not delete them from the CRT's temporary storage. After saving cell readings to the USB flash hard drive, you may clear the CRT's temporary storage and take readings on another battery.

You may also use Microsoft Explorer to transfer files from the USB device to a computer.

## 15.2. File Types Located on the USB Flash Hard Drive

There are many file types used with the Cellcorder and BAS program, this section describes the most common.

### .CCF Configuration File

The CLC400.CCF configuration file holds setup data for all sites on a USB flash hard drive and is accessed when reading or saving site setup information.

### .CCF Configuration File

The .CCF configuration file holds setup data for all sites on a USB flash hard drive and is accessed when reading or saving site setup information. Site setup defines site names, thresholds, and other parameters. During testing, the Cellcorder uses site settings for voltage and resistance thresholds. A site setup is not required for testing, but is useful for managing many sites. This is especially also useful for managing multiple sites. This file is created by the Battery Analysis System (BAS) program for importing into a CRT-400. The .CCF can also be created on the CRT-400 unit.

### Creating and using a .CCF file for Loading Battery Readings from CRT-400 to BAS

To Load readings from the CRT-400 to the BAS:

1. Insert the USB device into your computer where BAS is installed. From the main menu of the BAS application click, **File** then **Configuration Editor**. In the Configuration File Editor window enter the site information and click **Save**. The site information will be saved to your USB device.
2. Remove the USB device from the computer and insert it into the CRT-400 and press **F3** to load data. Then press **F1** to load site template.
3. Use the arrow keys to navigate to the new site template and press **F1** to select the site.
4. Press **F1** and the main menu appears for you to take your battery readings for your site.
5. After the readings are taken, insert the USB device into the CRT-400 and save the readings to your USB device.
6. Remove the USB device from the CRT-400 to transport the readings to the BAS software to store and view your readings.

### .UPG File/Firmware Upgrade File

The .UPG file contains CRT-400 firmware updates. The CRT-400 stores firmware and updates in Flash memory, and cell data, thresholds, and calibration in EEPROM. Both types of memory retain data with the power off. Site setup and readings are stored in EEPROM and then stored to the removable USB flash hard drive when **Save** is selected.

### .CDF File Cell Data File

The cell readings are in .CDF data files. These files are created by the CRT-400 for saving readings to the USB device. It is the transport file that gets data from the CRT-400 to the computer. This file contains one set or multiple sets (if in multi-string mode) of readings for a complete string of batteries. The Battery Analysis System (BAS) program imports this file into an ADF file.

### **.ADF File Accumulated Data File**

The .CDF Data File can be imported by the BAS program into an .ADF accumulated data file, or viewed separately using the CRT-400 Previewer program. The ADF file contains sets of readings that were imported from CDF files. One ADF file can contain many CDF files from the same string. This gives the BAS program the ability to trend over many sets (different dates) of data. Create one ADF file for each string or one battery with parallel strings. Every time readings are taken for that string, import the data in the CDF file into the ADF file.

### **.CSV File Comma Separated Value File**

When the CRT-400 creates a .CDF file, it also creates a .CSV file with the same name. Microsoft Excel uses .CSV files to display data in spreadsheet format. If the .CDF file is overwritten, the .CSV file will be overwritten.

**Note:** At Load Data/F3-Cell Data/F2, the Cellcorder LCD window displays only .CDF cell data files. Other file formats are handled automatically.



**CAUTION:** Use only one USB flash hard drive. If more than one device is used, it is possible that setup, file then site information may not be exactly the same on both USB flash hard drives and results will be affected.

### **.BLF Baseline Resistance File**

This BLF battery list file for the Cellcorder BAS program has baseline data searchable by manufacturer and model number. If you already have battery baseline data, you can download then save the file to the USB, so existing baseline data is not overwritten.

### **Acquire File from the Web site – Save to USB Device**

Go to [www.alber.com](http://www.alber.com) and select **Baseline Resistance Data** or go to <http://www.alber.com/BaselineRef.htm>.



TRUST YOUR BATTERIES™

Technology and Solutions for Battery Testing



- WHAT'S NEW?
- HOME
- ABOUT US
- PRODUCTS
- SERVICES
- SEMINARS
- SALES REPS
- TECH LIBRARY
- DOWNLOADS
- TRAINING
- DEMO
- CONTACT

**New York Times Features Photo with Alber BDS-40**

The New York Times newspaper highlights New Jersey's increase in data center construction and battery backups having backups of their own.

[View the Times photo](#) of the Alber BDS-40 units installed.

**Alber Battery Monitoring and Training**

Alber offers a full line of stationary battery monitors and test equipment, battery diagnostic systems, capacity test systems, resistance testers, hydrometers, and load banks, plus seminars on battery maintenance and testing.

Call us at (954) 623-6660 or (800) 851-4632.

**LINKS**

**+BATTCON**  
STAY ENERGIZED  
Orlando, FL  
May 16 to 18, 2011

TRAINING SEMINARS

ALBER EVENTS

WARRANTY REGISTRATION

EMPLOYMENT OPPORTUNITIES

BASELINE RESISTANCE DATA

MAILING LIST

Figure 60 - [www.alber.com](http://www.alber.com)/Baseline Resistance Data

1. Review the page to look at the information provided.

Internal Resistance Baseline Values		
Manufacturer	Cell Model	Average Resistance (micro-ohms)
<b>Alcad</b>		
Alcad	H22P	2331
Alcad	SD-5	1412
Alcad	SD-13	533
Alcad	XHP 28	1186
Alcad	XHP 36	775
Alcad	XHP 90	507
<b>Americad</b>		
Americad	HED-30	1841
<b>C&amp;D</b>		
C&D	3DCU-5	2987
C&D	4LC-YC11	236
C&D	GC12V75A	6046
C&D	KRC-15	253
C&D	LS12-100	3666
C&D	MCT4000	100
C&D	TEL12-90	4237

Figure 61 - Snapshot Baseline Resistance Data

2. Or the file may be downloaded by selecting the letters **BLF** from the downloading a BLF file paragraph on the same page.
3. Once you have clicked on **BLF**, the File Download window displays, select **Save** to save the file.

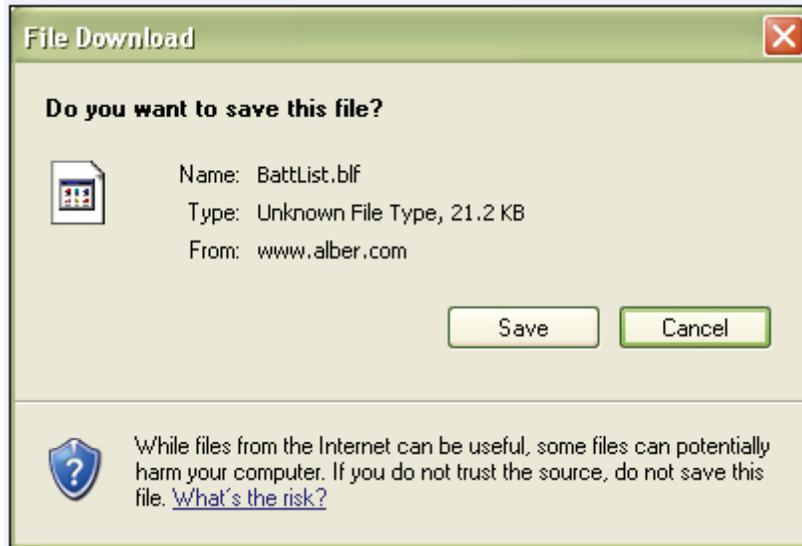


Figure 62 - File Download Window

4. Insert the USB flash hard drive into the CRT's USB port and save the file to the USB flash hard drive.

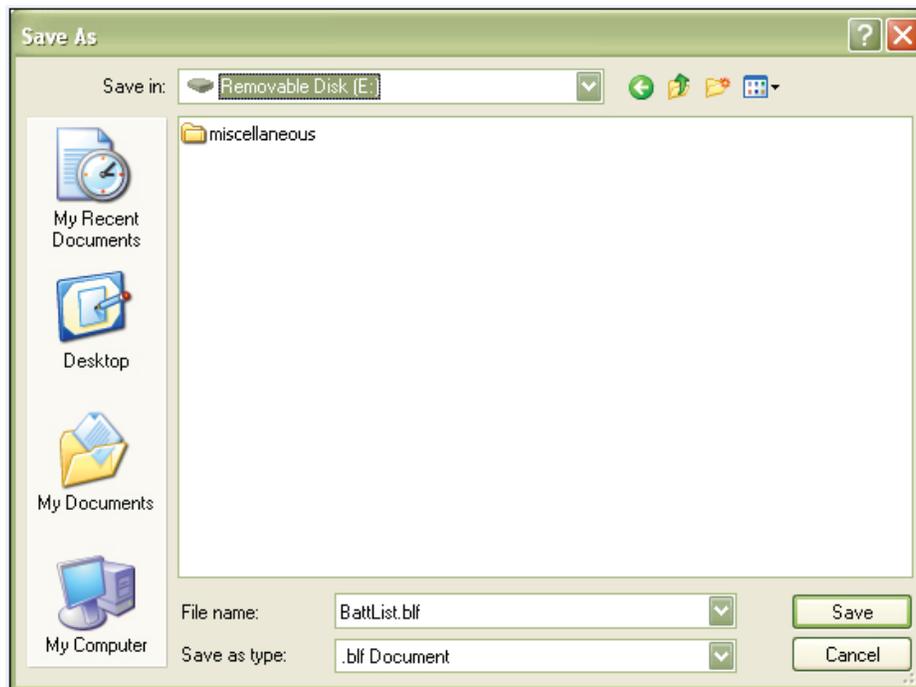


Figure 63 - Saving BLF File

- Remove the USB device from the computer as follows, double-click the My Computer icon on the Windows desktop.



Figure 64 - My Computer ICON

- Right click the Removable Disk drive, in this case (E) and select Eject from the menu. Or double-click the safely remove device icon, that is located in the toolbar.

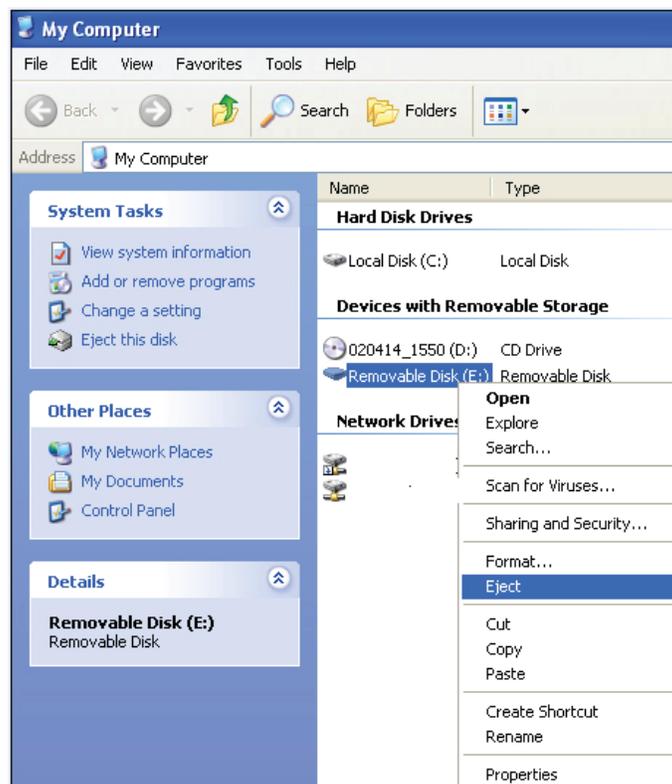


Figure 65 - My Computer/Eject

- The Safely Remove Hardware window displays. It is best to highlight the device and click **Stop**.



Figure 66 - Safely Remove Hardware Window

8. A confirmation window displays. Scroll down with the mouse and select the device to be removed and click OK.

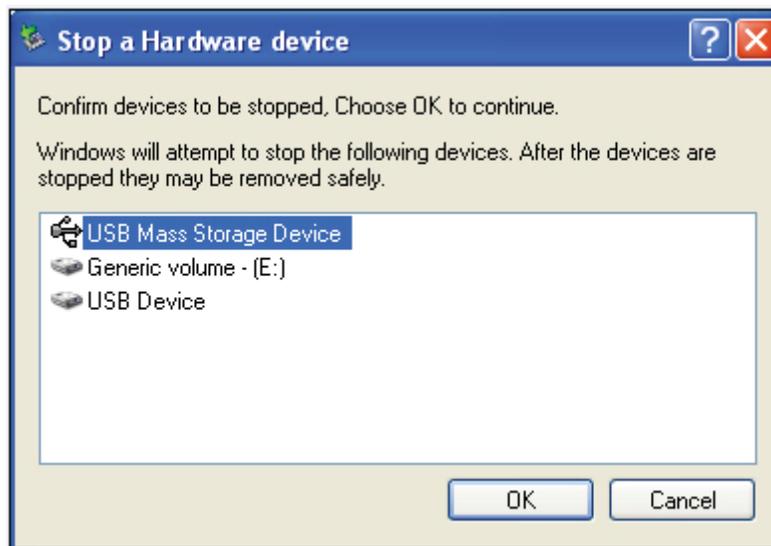


Figure 67 - Confirmation to Stop Hardware Device

9. Once the message. Safe To Remove Hardware appears, then remove the USB flash hard drive.



Figure 68 - Safe to Remove Hardware Device



**CAUTION:** Make sure the light on the USB is off before removing the USB device from the PC. Failure to follow the Safe Hardware Removal steps could result in lost data.

## 14.2 To Load an Existing File


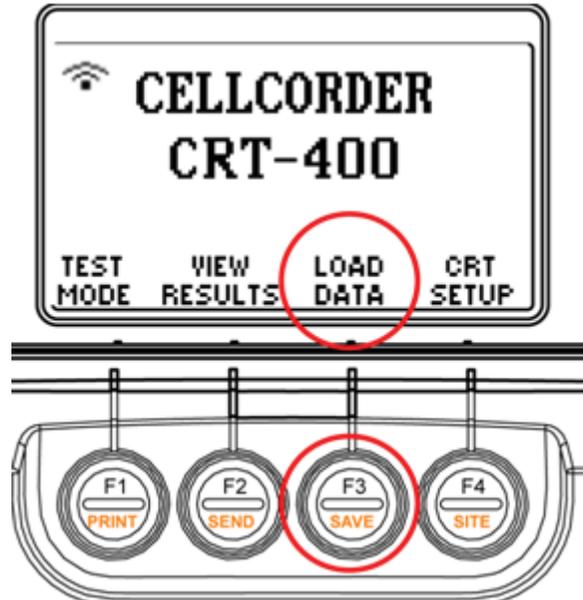


Figure 69 - CRT Main Menu on LCD/Load Data

Select Cell Data/F2.

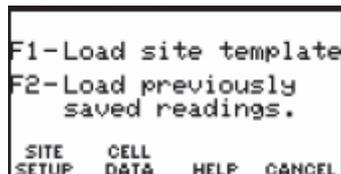


Note: The USB flash hard drive must be inserted to accomplish this Load Data function.

Highlight a .CDF data file from the USB flash hard drive by using the arrow keys. Now, press Select/F1.



The main menu appears once the file is selected.

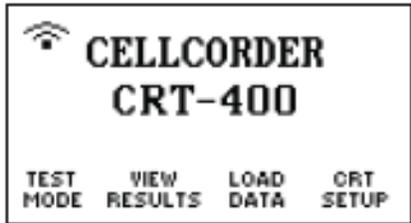


### 15.3. Appending to an Existing File

New readings can be appended to an already existing data file.


Once the file is loaded, press F1/Test Mode and select either test:

- F1-Voltage/Volt
- F2-Resistance/Res
- F3-S.G./Temp./SG/Temp

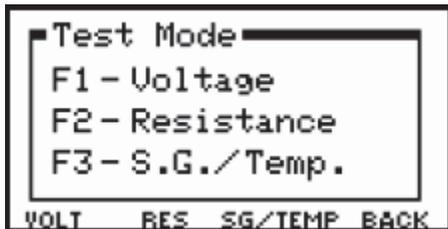

Press F1-Voltage/Volt

If available, data for Cell 001 appears. When you press F1 for Voltage/Volt and the test is done and confirmed by selecting F4/Done, then you will be asked to confirm saving the information to the USB flash hard drive: F1/Yes or F2/No. When the test is done, select F4/Done.

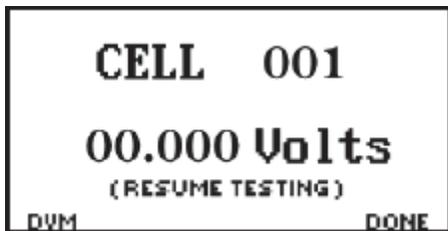

Now, enter File Name by typing it into the space provided or press F3/Select Names to choose the filename that you want the information to be included in.






Press F2–Resistance/RES or


Confirm battery voltage, amp hours and intercell connections.

**Note:** To display a cell number, type a number and press Enter or use the arrows. Resume testing on cells with no data (not yet tested) or press Retest to test cells previously tested. To go back to Test Mode after selecting F2– Resistance/RES you must choose F4/Back.

Press F1/Test Mode and press F2–Resistance/RES. Perform test and select F4/Done when test is completed.

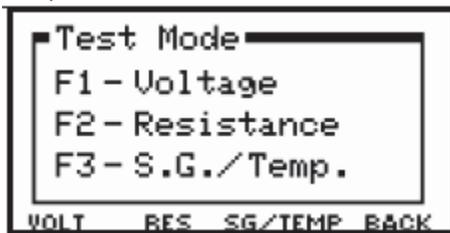

Enter File Name by typing it into the space provided or press F3/Select Names to choose the filename that you want the information to be included in.

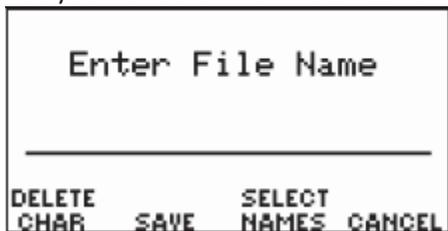

### Specific Gravity and Temperature

Since Specific Gravity and Temperature readings come from the optional hydrometer, refer to “The Hydrometer and the Data Logger” for instructions on how to measure with a hydrometer and to make sure the most current readings are transferred to the USB device.

## 15.4. Storing Data for Multiple Strings

To read and store data for a new battery, first save the previous battery data to the USB flash drive by pressing Shift/ F3.

Now enter the file name and then clear the data from CRT's temporary storage by pressing F1.

The CRT asks for confirmation, press F1 for Yes.

## 15.5. Deleting a File from the USB Flash Hard Drive


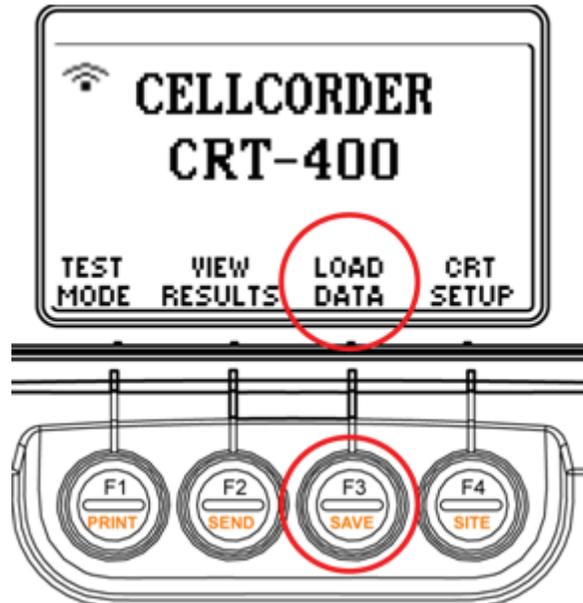


Figure 70 - CRT Main Menu on LCD/Load Data

**Note:** The USB flash hard drive must be inserted to accomplish this Load Data/F3 function.

Select Cell Data/F2.

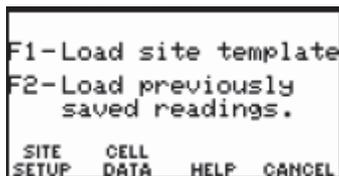

Highlight a .CDF data file from the USB flash hard drive by using the arrow keys.

Now, press Delete/F2.




At the confirm LCD window, press Yes/F1.



When Data File Deleted appears, press Continue/F3.



The main menu will appear once the file has been deleted.

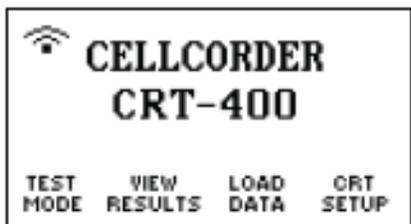

## 15.6. Sending Readings Via IR

Data can also be sent via IR or *Bluetooth* using the BAS or Previewer programs. Refer to the Battery Analysis System (BAS) User's Guide or CRT-400 Previewer User's Guide for more about creating and importing into an .ADF file.

**Note:** The fastest way of transferring readings from Cellcorder temporary storage to a computer is with the USB flash hard drive.

To Send Readings from the CRT-400 to a computer follow these steps:

1. Start the BAS program, then click the **Cellcorder Interface** button.
2. On the next box, select CRT and click OK.


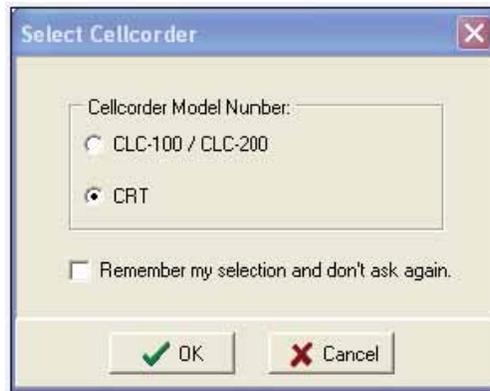


Figure 71 - BAS Software Program Select Cellcorder

3. Power on the CRT. Press and release Shift then press F2. At the next LCD window, press F1 for IR or F2 for *Bluetooth*. Or press F4 to Cancel.

Wait for the message, "Ready for data transfer" to display.

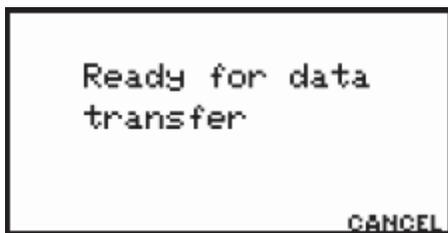

4. On the BAS LCD window, Instructions for CRT, click **Continue**.
5. Align the computer and CRT-400 IR ports.
6. On the CRT Interface window, click **Include Configuration** within the Battery Data area, to include site configuration data.
7. This is not mandatory if accurate configuration data already exists.
8. Then, click **Capture**.

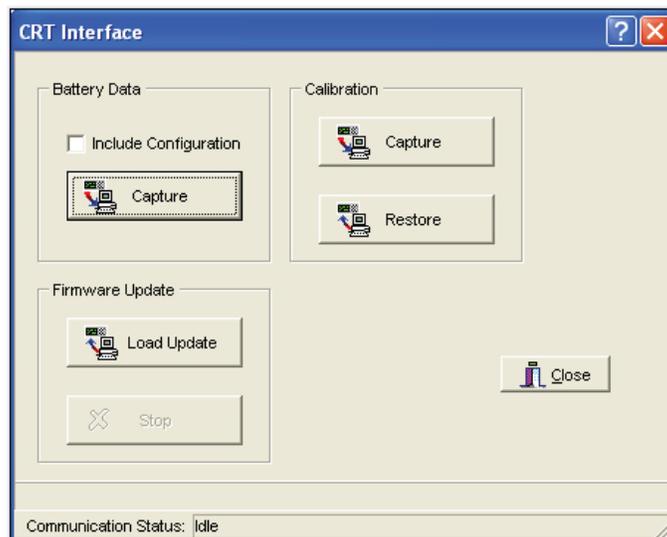


Figure 72 - BAS/CRT Interface Window

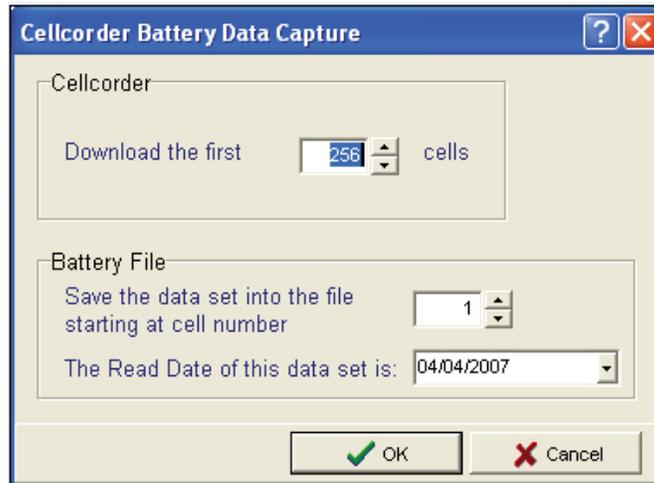


Figure 73 - BAS/Battery Data Capture Open or Create New File

Note: If an .ADF file is not open, select or create one.

On the Cellcorder Battery Data Capture window, select:

1. Number of cells to download
2. Starting cell number
3. Read date and click OK.


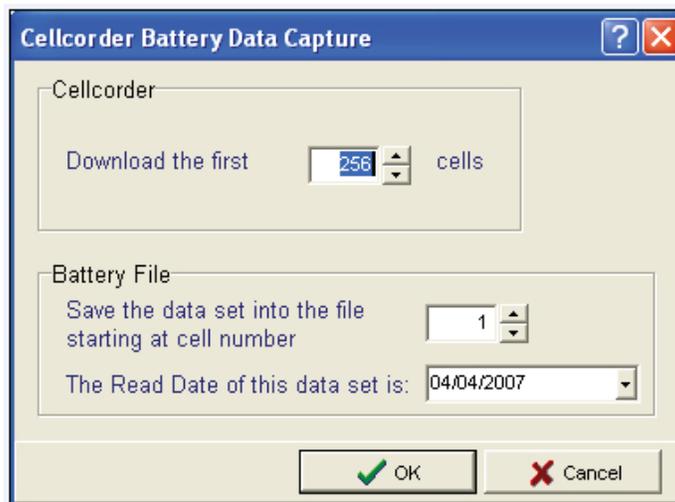


Figure 74 - BAS/Cellcorder Battery Data Capture

The Cellcorder displays Sending data...

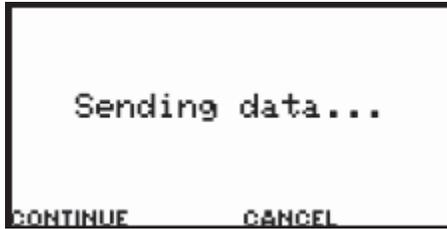

When done, the CRT Interface window displays Data transfer completed.

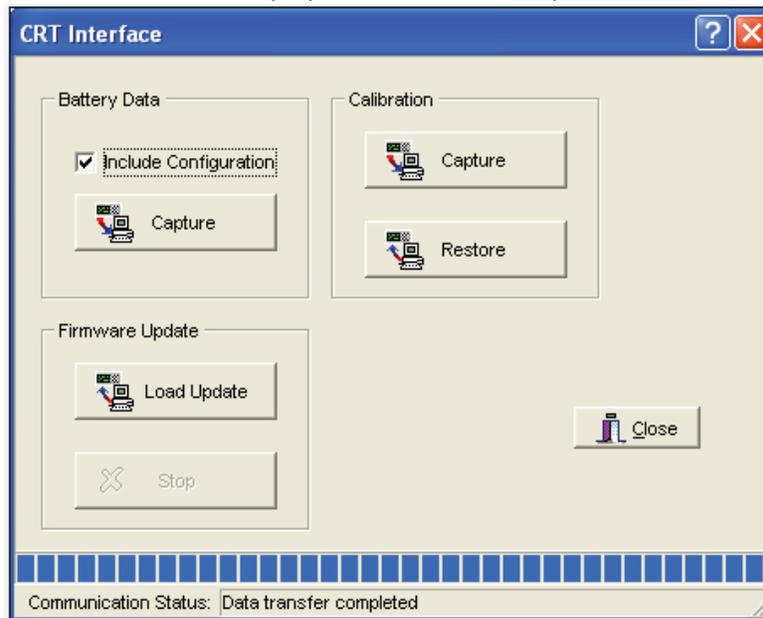


Figure 75 - BAS/CRT Interface Data Transfer Completed

4. Click Close.

Once, finished, select F3/Cancel twice to go back to the main menu on the CRT.

In the BAS software's main menu, select File then Save, type the file name in the box provided, and click Save to store the .ADF file under Programs/Alber/Alber Battery Analysis/Cellcorder ADF Files.

## 15.7. Sending Readings Via *Bluetooth* Wireless

**Note:** Discovering, pairing, and setting up the COM Port for *Bluetooth* devices on the PC and within the BAS software needs to be done first. If the PC displays the *Bluetooth* PIN Code Request box, type the *Bluetooth* PIN code 0000 and click OK.

1. Start the BAS program, then click the  Start the Cellcorder Interface button. The Select Cellcorder window appears. Select CRT and click OK.


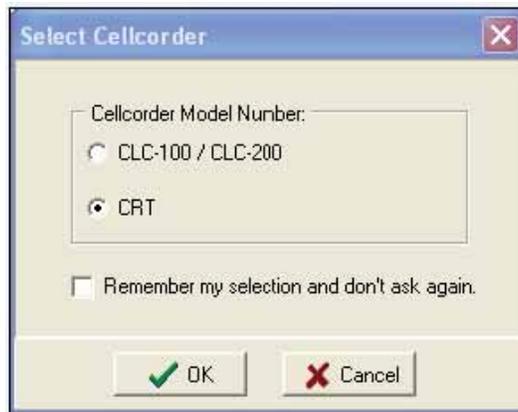


Figure 76 - BAS Software Program Select Cellcorder

2. Power on the CRT-400. Press **Shift** then press **F2**. Press **F2/Bluetooth**. Wait for the message, Ready for data transfer to display.

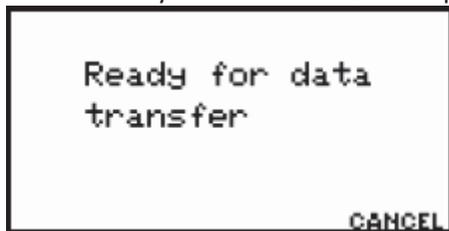

3. On the **BAS Instructions for CRT** window, click **Continue**. On the **CRT Interface** window, click **Include Configuration** within the Battery Data area, to include site configuration data. Then, click **Capture**.

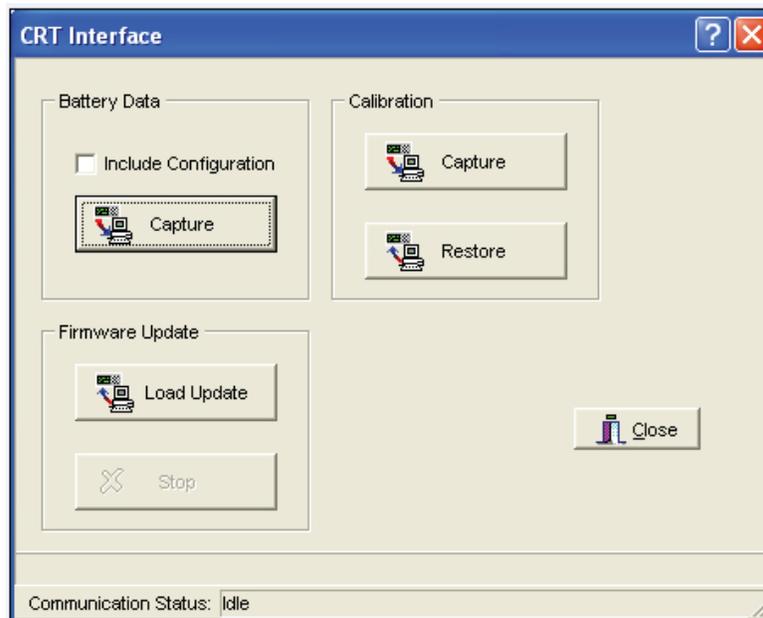


Figure 77 - BAS/CRT Interface Window

Note: If an .ADF file is not open, select or create one.

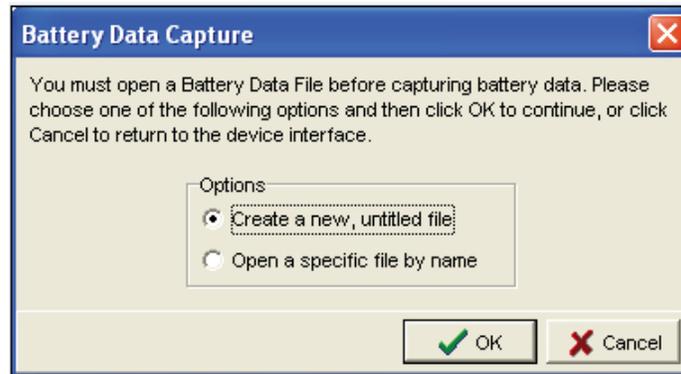


Figure 78 - BAS/Battery Data Capture Open or Create New File

4. On the Cellcorder Battery Data Capture window, select the following:
  - number of cells to download
  - starting cell number
  - read date
5. Then click OK.


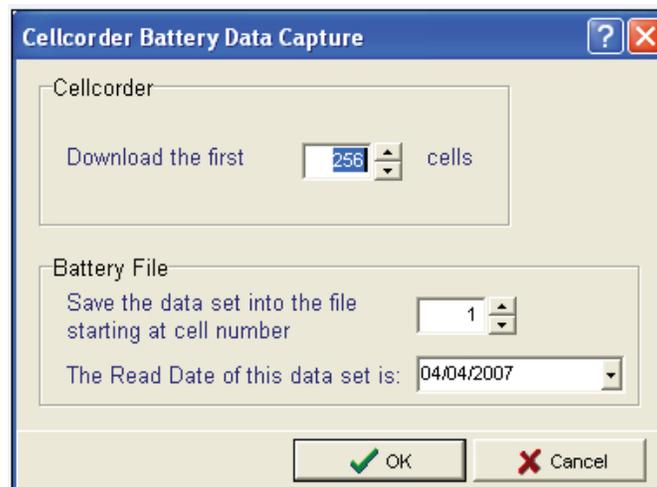


Figure 79 - BAS/Cellcorder Battery Data Capture

The Cellcorder displays Sending data...

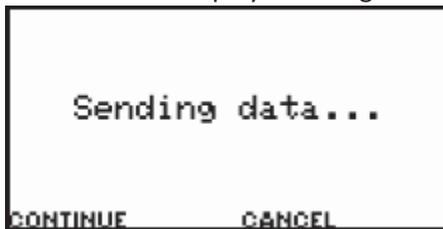

6. When done, the BAS CRT-400 Interface window displays Data transfer completed. Click Close. Once, the transfer is complete, select F4/Cancel twice to go back to the main menu on the CRT.

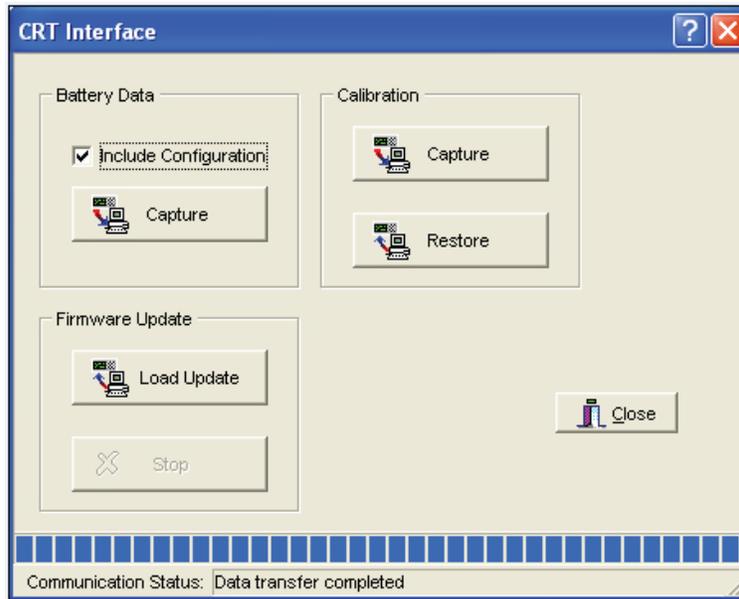


Figure 80 - BAS/CRT Interface Data Transfer Completed

7. In the BAS software's main menu, select **File** then **Save**, type the file name in the box provided.
8. Click **Save** to store the .ADF file under **Programs/Alber/Alber Battery Analysis/Cellcorder ADF Files**.

You may print test results using the optional thermal printer that interfaces to the Cellcorder via IR, or you may transfer data to a computer and send to any printer on your system. A complete test printout contains the following:

#### Site Information:

- Location shows the location name
- Battery shows the battery name
- String shows the string name
- Model # shows the battery model number
- Total V shows the strings Overall Voltage OV
- # cells shows the number of cells in the string
- Installed shows the battery Installation date
- Read shows the date that the Cellcorder readings were taken

#### Summary and Thresholds

A summary of average, minimum, and maximum values:

- VOLT shows the cell voltage
- RES shows the cell resistance
- SG shows the specific gravity
- Temp shows the temperature
- Int R1, 2, 3, 4 shows the Intercell resistance of 1, 2, 3 and 4

### Cell Data Listed For Each Cell

- VOLT shows the cell voltage
- RES shows the cell resistance
- Int R1 shows the Intercell resistance R1
- Int R2 shows the intercell resistance R2
- Int R3 shows the intercell resistance R3
- Int R4 shows the intercell resistance R4
- Specific Gravity shows the specific gravity
- Temp shows the temperature

Set the thermal printer power switch to ON. If the Status LED is on, connect the printer charger. A flashing Status LED means high temperature or paper out. Refer to the printer manual for more information.



**CAUTION:** Charge the printer's battery with the printer's power off. The printer cannot operate from the charger. Minimum charge time is one hour. Do not leave the charger connected; this will shorten battery life. To begin to print to the thermal printer, press **Shift** then **F1**.

On the **Select Headers** LCD window, select items for the report: site information, statistics, faults, and thresholds. Press **Next/F2**, Select Data you want included, then press **Next/F2**,

**Note:** Use the arrows to highlight an item, then press **Enter** to select or unselect it.

### Select Headers

```

Select Header(s):
 Site    Stats
 Faults  Thresholds
NEXT  HELP  CANCEL
  
```

### Select Data

```

Select Data:
 Voltage    IcR1
 Resistance  IcR2
 S/G        IcR3
 Temp.      IcR4
NEXT  BACK  CANCEL
  
```

### Place PC/Printer

```

Place a PC with an
IRDA port within
1 meter of the IR
port.
CONTINUE  CANCEL
  
```

Align the Cellcorder and printer IR ports, and press **Continue/F1**. The printer Status LED flashes while data is being received.

## 16. Viewing Results

### 16.1. Viewing Status

When data is in Cellcorder temporary storage, the Status LCD windows display the total number of cells with data, overall voltage (OV), averages, min– max values, and threshold violations (faults).

View Results/F2– Status

```

STATUS
Total of ### cells
have data.
OV = ###.##
AVG MIN-MAX FAULTS BACK
  
```

View Results/F2–Average Status/F1

```

STATUS - Average
Vc (V) = -----
Rc (μΩ) = -----
Ric1 (μΩ) = -----
MORE CANCEL BACK
  
```

View Results/F2–Min Max Status/F2

```

STATUS - Min Cell
S.G. = ----- ---
Temp.(#) = ----- ---
MORE CANCEL BACK
  
```

Note: To go back a LCD window, exit a function, or return to the main menu, press Back/F4, Cancel/F3 or press ESC.

### 16.2. Viewing the Overall Voltage Data

View Results/F2–Status to see where OV is located on the LCD.

```

STATUS
Total of ### cells
have data.
OV = ###.##
AVG MIN-MAX FAULTS BACK
  
```

The Cellcorder adds the cell voltages in a string and calculates overall voltage OV. Press View Results/F2 to display the number of cells that contain data and the calculated OV of those cells. You may also view OV using the BAS program and print OV in reports.

Note: The OV value cannot be typed in.

Average Avg

View Results/F2–Average Status/F1 as an example.

```

STATUS - Average
Uc (U) = -----
Rc (μΩ) = -----
Ric (μΩ) = -----
MORE      CANCEL  BACK
  
```

Press Avg/F1 to display the average cell voltage  $V_c$ , cell resistance  $R_c$ , and intercell resistance  $R_{ic}$ .

Press More/F1 to display more average  $R_{ic}$ , specific gravity SG, and temperature values.

### Min-Max

View Results/F2–Min Max Status/F2 for reference.

```

STATUS - Min   Cell
S.G. = ----- ---
Temp. (#) = ----- ---
MORE      CANCEL  BACK
  
```

Press Min–Max/F2 to display minimum and maximum values for  $V_c$ ,  $R_c$  and  $R_{ic}$ , and the associated cell numbers.

### Faults

To display values that exceed thresholds, press Faults/F3.

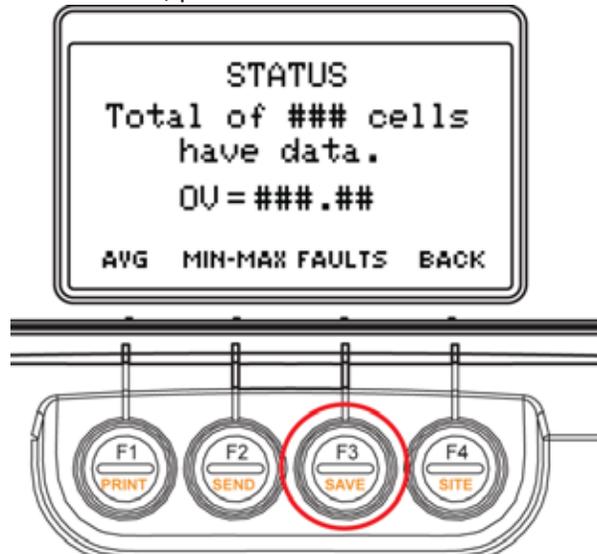


Figure 81 - View Results/F2–Faults/F3

Then the item for which you want faults displayed:

- F1/Volts/
- F2/RC/intercell resistance
- F3/More

Select Parameters–Volt–RC–More

```

Select which
parameters
to list faults.

VOLTS  RC  MORE  CANCEL

```

- F1/S/G
- F2/Temperature
- F3/RIC/intercell resistance

Select Fault Parameters–S/G–TEMP–RIC

```

Select which
parameters
to list faults.

S/G  TEMP  RIC  BACK

```

Voltage/resistance fault LCD windows indicate cell number and fault type: Voltage, Internal or Intercell. The reading at fault is highlighted. To retest a voltage or resistance reading that violates thresholds, press Retest/F3.

VOLT Faults

```

CELL - ###  Vc( )
###.### Vc
Rc
##### μΩ
Ric1)----- μΩ
Ric2)----- μΩ
Ric3)----- μΩ
Ric4)----- μΩ

NEXT  PREV  RETEST  CANCEL

```

Specific Gravity/temperature LCD windows show cell number, with the problem Specific Gravity/Temp value highlighted.

Cell Specific Gravity Temp

```

CELL - ###
S.G.      Temp.
#.###     ##.#

NEXT  PREV  CANCEL

```

To display more faults, press F1/Next or F2/Prev Previous.

## 17. Using Diagnostics

Warning and error messages indicate operation and connection status. On power up, the Cellcorder displays up loadable flash memory and boot memory versions. If errors occur during use, messages appear. If the Cellcorder malfunctions, Diagnostics may help determine the cause.

To display Diagnostics, press **Shift** release then press **9**. To view more menu items, press the arrow keys.



**Note:** To go back a LCD window, exit a function, or return to the main menu, press **Back/F3**, **Cancel/F3** or **ESC**.

### 17.1. Testing Keypad

To test keypad functionality, press **1** on the keypad. Press any key except the green Power button and the LCD window indicates the key is pressed.

**Note:** Do not press **ESC** twice or you will exit. If you press **Shift**, press **Shift** again before continuing with other keys.

#### Display

To cause the LCD window to display a series of letters and numbers to make sure the display is functioning properly, select **2. Display** by pressing **2**. To escape press **ESC**

#### IR Port

This test requires a PC or printer with IR interface. To test the IR communication port with a computer or printer, select **3**.

**Note:** When using the IrDA interface port with a CRT printer, the printer must be set up in “IRDA Physical layer” mode to communicate with an Alber CRT-400.

IR Port by pressing **3**, then select PC Interface or Printer Interface.

Follow the LCD window instructions.

#### Safety Relay



**WARNING:** Disconnect the CRT-400 Cellcorder test leads from any equipment before initiating this Safety Relay diagnostic. If the diagnostic is enabled while the CRT-400 is connected to a voltage source, the unit can be damaged.

Select **4. Safety Relay** by pressing **4** to test the internal relay that protects Cellcorder circuitry. The relay clicks while this diagnostic is active.

### USB Flash Hard Drive

Press **Shift** release, then press **9**.

Press **1** to check if the USB port is working properly.

#### USB Port Good



To check the version, press **F1/VER**. If the message, USB port failed appears then try another USB flash hard drive.

If this message occurs with the second/third alternate USB device, then call 954-377-7101 and ask for CRT assistance.

#### USB port failed



**CAUTION:** Do not remove the USB flash drive when the Cellcorder USB Memory LED is lit.

To test the input/output I/O to the USB flash hard drive, use the down arrow to view the next diagnostics options and select **1**. USB flash hard drive by pressing **1**. When testing is successful, the LCD window displays USB port good!

### Load Module

This test requires test leads and the voltage source to test all conditions. If the leads are not connected, only the 1 to 2 volt range operates.



**WARNING:** This diagnostic draws up to approximately 60 Amps from the voltage/current source. The AC Power indicator must not be lit while test leads are connected.

Select Load Module by pressing **2** to test the circuitry that applies a load current to the battery under test. To exit, press **F3/Cancel**.

## Select Load



On the Select Load menu, select the voltage range by choosing the corresponding number on the keypad, then connect the resistance load leads to the voltage source.

## 17.2. A/D Linearity

**Important: Use Only When Instructed By Albér Technical Support**

To display readings from analog to a digital converter, select A/D Linearity by pressing 3.

## Select Channel



## Voltage Channel

Voltage Channel/press 1 and the LCD window displays the actual value of the test current. To exit, press F3/Cancel.

## Test I Channel

Test I Channel/press 2 and the LCD window displays the actual value of the test current. To exit, press F3/Cancel.

## ICr Channel

ICr Channel/press 3 and the LCD window displays the voltage connected to the black clip and the red/black sense clip on the resistance three lead set. This input is for the voltage reading across the intercell connector under a test condition. Input voltage must not exceed 130mV.

To exit, press F3/Cancel.

## A/D Reference

A/D Reference/press 4 and the LCD window displays the internal reference for the analog to digital converter. The raw count A/D value should be approximately 10000. Press to go back to the previous window. Then to exit, press F3/CANCEL.

## Protection Circuit

To test the circuitry that protects the Cellcorder against overload conditions, select 4. **Protection Ckt/Circuit** by pressing 4 and the LCD window displays 2 choices:

### Protection Circuit

- 1 Over Voltage
- 2 Reverse Polarity.



Both choices necessitate lead connection and further directions on the LCD window.

### Modem (If Installed)

Use the down arrow to view the next diagnostics options. Reset modem by pressing 1. )

### Buzzer

Tests the buzzer by selecting 2. The CRT provides an audible feedback for keystrokes and alarm conditions. To continue diagnostics, select **Continue/F1**.


### Fan

Test the Cellcorder's fan by selecting 3. To stop the fan diagnostic and continue on, select **Continue/F1**.

### Temperature Sensors

Temp. Sensors/press 4 and the LCD displays temperatures of the CRT-400 circuit board; Load Temperature and regulator Ambient Temperature. When the load temperature rises due to continual testing, the fan turns on. If the load temperature goes too high, testing circuitry is disabled and a warning appears.

### Load And Ambient Temperature

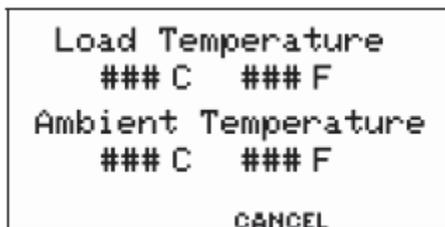

To do further diagnostic tests select **Cancel/F3**.

## 18. Utilizing CRT-400 Service Menu

The password protected Service Menu has the Calibration, Factory Defaults, and Change Password options. The Service menu is not used during normal use. To display the Service Menu, press **Shift** release then press **Shift**. The password LCD window appears.

**Note:** To go back a LCD window, exit a function, or return to the main menu, press **Back/F3**, **Cancel/F3** or **ESC**.

### 18.1. Entering the Password

The factory set default password is 1234. If the password is unknown, contact Alber for a password based on the randomly generated four numbers following Service code.

Password and Service Code



Service Menu to Calibrate the CRT-400

After you type the password, press **Enter** to display the Service Menu:

1. Calibration
2. Factory Defaults
3. Chg. Password



If calibration is necessary, please contact Alber at 954-377-7101 for service.

To Record the Flash Code

The current for the 8V to 12V Load (I3) test depends on the Cellcorder flash code. Power up the CRT-400 and, after the initial LCD window, note the flash code, which either has no asterisk ( \* ), such as 05.0200, or has an asterisk, such as 05.0200,\*. Make sure to note the presence or absence of an asterisk on the Calibration Form as well.

## Flash Version Factory Defaults

```

System Initializing
  * * * * *
Flash Vers.##.#####
Boot Vers.##.#####

```

Resetting to factory defaults resets the calibration constants, sets the password to 1234, resets threshold settings, resets the values of any site in temporary memory, and restores display settings.



**WARNING:** The Cellcorder loses calibration when reset to factory default and must be recalibrated.

Unplug any test leads from the Cellcorder before initiating a firmware reset.

To display the password protected Service Menu and Calibration Menus, press **Shift** release, then press 7.

Type in the password and press **Enter**. The default password is 1234.

## Password And Service Code

```

Enter password
  * * * * *
Service code: ####
          CANCEL

```

At the Service Menu, select 2 for the Factory Defaults Service Menu


```

Service
1. Calibration
2. Factory Defaults
3. Chg. Password
          CANCEL

```

At the **Memory Initialize** message prompt to restore to default settings, press **Yes/F2**. To go back to the main menu select **Cancel/F3**.


## Factory Defaults

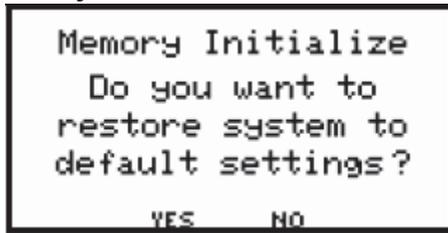

## 18.2. Changing the Password

You may change the password to any four digit number. To display the password protected Service Menu and Calibration Menus, press Shift release, then press 7. Type in the password and press Enter. Use the default password 1234.

## Password and Service Code

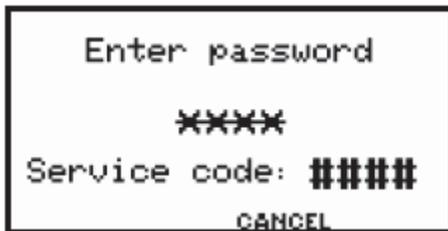


At the Service menu, select 3 to change the Password.



Note: Do not press Enter.

At Enter New Password, type the new, four digit password. Use the arrow key if the cursor does not advance. Type the new password again in the Confirm New Password area, then press F2/Accept.

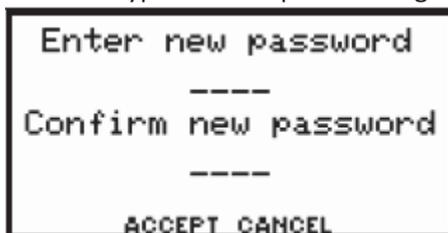

If New Password and Confirm Password agree then the Service Menu appears.



### 18.3. Error Codes

USB flash hard drive error messages display text such as USB drive is not installed Press ESC to continue or out of memory, or numeric error codes. Determine if the problem is the USB flash hard drive. Remove the troublesome flash drive and, if available, insert another device. If the Cellcorder reads the USB flash drive, then the problem exists in the first USB flash drive.

Attempt to read the defective USB flash drive using the USB drive on the computer. If neither the Cellcorder nor the computer can read the USB flash drive, then the drive is defective or data on the USB is corrupted.

If the computer reads the data successfully, copy the data to another USB flash drive and see if the Cellcorder can read it. If not, remove the USB flash drive from the Cellcorder.

Power down and restart the Cellcorder. Insert the USB flash drive and attempt to read it. If the error message still appears, the problem may be in the Cellcorder. Contact the factory for assistance.

### 18.4. Battery Maintenance Schedule

The CRT-400 Cellcorder can easily take periodic maintenance readings. An effective maintenance program that meets the recommendations of most battery manufacturers calls for the following measurements:

Parameter	Vented Batteries		
	Quarterly	Semi-Annually	Annually
Cell Voltage	X	-	X
Internal Cell Resistance	-	-	X
Intercell Resistance	X 10%	-	X
Specific Gravity	X 10%	-	X

Parameter	VRLA Batteries		
	Quarterly	Semi-Annually	Annually
Cell Voltage	-	X	X
Internal Cell Resistance	X	-	X
Intercell Resistance	-	-	X
Specific Gravity	-	-	-

Table 5 - Battery Maintenance Schedule

**Note:** VRLA or sealed cells must be tested more often because of their shorter life expectancy and lower reliability.

Use Cellcorder resistance measurements in conjunction with baseline data on the batteries being maintained. Obtain cell resistance baseline data from the battery manufacturer or Albér, or acquire it with a capacity test.

Take Cellcorder readings according to the Maintenance Schedule table; the resistance readings dictate which battery string should be subjected to capacity testing. If one or more cells exhibit cell resistance 30% to 40% higher than the average or baseline value, then capacity test those cells using a single cell tester, such as the Albér SCT. If most cells are above the normal expected readings, then capacity test the entire string.

## 18.5. Upgrading Firmware

Upgrade CRT-400 Cellcorder firmware using the USB flash drive or the IR ports on the computer and CRT-400. Upgrades are on the Web: [www.alber.com](http://www.alber.com).

**Note:** Upgrading using the USB flash hard drive is much faster than via IR.




**WARNING:** Do not continue until you have the .UPG upgrade file ready. You will be clearing the current firmware.

### To Upgrade Firmware Using the USB Device

Download the .UPG file from the Albér Web site [www.alber.com](http://www.alber.com) or an Albér CD to Program Files/Alber/Alber Battery Analysis, then use Windows Explorer to copy the file to the USB flash hard drive. With Cellcorder power off, insert the USB flash hard drive into the Cellcorder. Hold ESC and press the Power button to start in firmware upgrade mode.

The CRT-400 is ready to clear Flash memory for the new program, press **Continue/F2**.

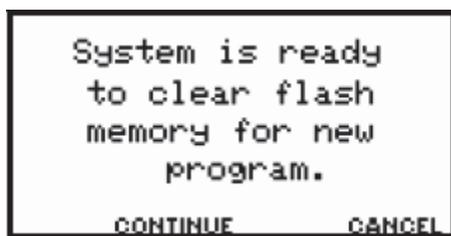

The CRT-400 is ready for an upgrade, select file transfer method, press **USB/F2**.



The CRT LCD lets you know that it is being prepared for the Memory Upgrade.

```
Preparing Memory
for upgrade.
```

File transfer in progress appears and the frame number counts down.

```
File transfer
in progress.
Frame:####
CANCEL
```

When the upgrade is successful. System is running Version nn.nnnnn appears, press Continue/F3.

```
Upgrade Successful
System is running
Version ##.####
CONTINUE
```

To Upgrade Firmware Using the IR Port W/BAS and PC

Download the .UPG file from the Albér Web site, [www.alber.com](http://www.alber.com) or an Albér CD to Program Files/Alber/Alber Battery Analysis, then use Windows Explorer to copy the file to the USB flash hard drive.

With Cellcorder powered off, insert the USB flash hard drive into the Cellcorder. Hold ESC and press **Power** to start in firmware upgrade mode. At the message System is ready to clear Flash memory for new program, press Continue/F2.

```
System is ready
to clear flash
memory for new
program.
CONTINUE CANCEL
```

At System ready to receive upgrade file. Select file transfer method, press Infrared/F3.

The CRT LCD lets you know that it is being prepared for the Memory Upgrade. File transfer in progress appears.

```
File transfer
in progress.
Frame:####
CANCEL
```

Note: The Frame: #### does not count down at this time.

Start the BAS program. Check or choose the COM port that enables the IR interface. Select  from the BAS software toolbar.

To change the port click on the down arrow to select a highlight and select a port, then click OK.

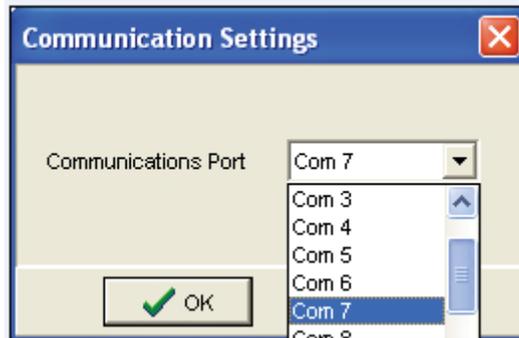


Figure 82 - Communications Settings Com Port BAS Software

Then click the Start the Cellcorder Interface button. Select CRT and click OK.

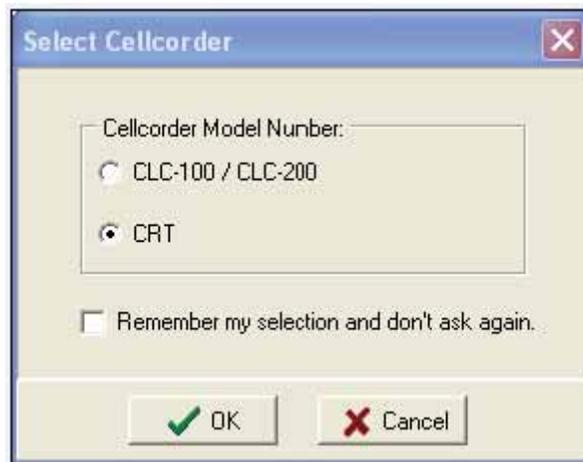


Figure 83 - BAS Software Program Select Cellcorder

On the BAS Instructions for CRT LCD window, click Continue.

Align the computer and CRT-400 IR ports.



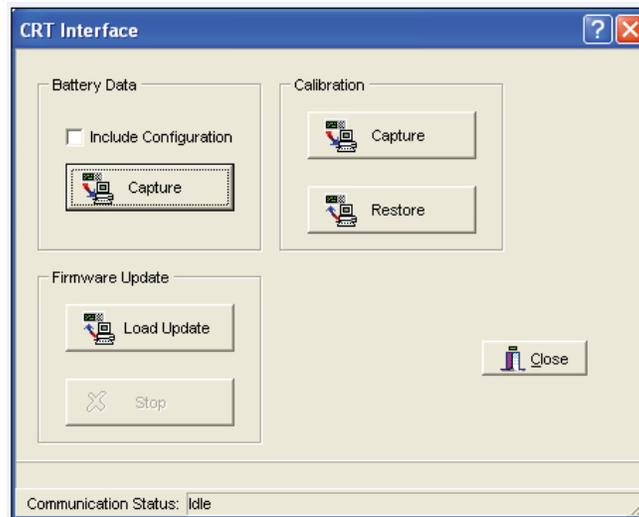


Figure 84 - BAS/CRT Interface


On the BAS CRT Interface window, click **Load Update** under Firmware Update.

Select the .UPG file, then click **Open**. File transfer in progress begins to count down on the CRT.



Note: The Frame: #### counts down at this time.

When the upgrade is successful and the system is running Version nn.nnnnn appears, press **Continue/F3**.

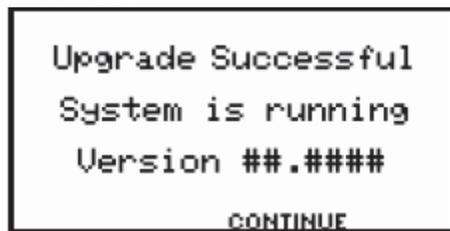

Click **Close**.

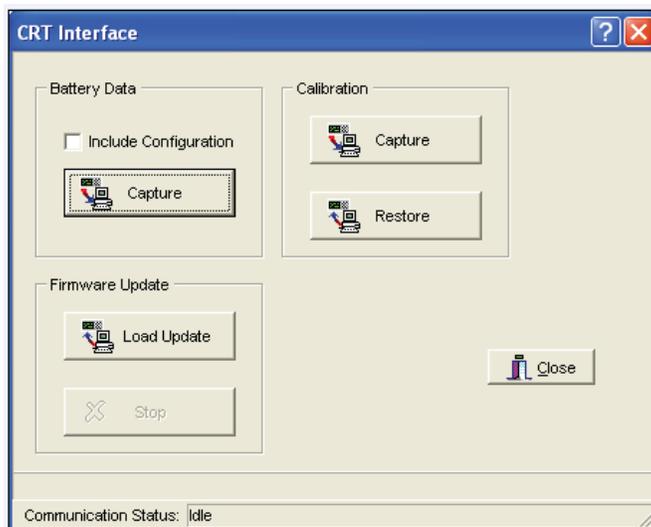


Figure 85 - BAS/CRT Interface Window

## 19. Application Note CC-001

The Internal Resistance and Cellcorder document is available on Albers Web site at:  
<http://www.alber.com/>

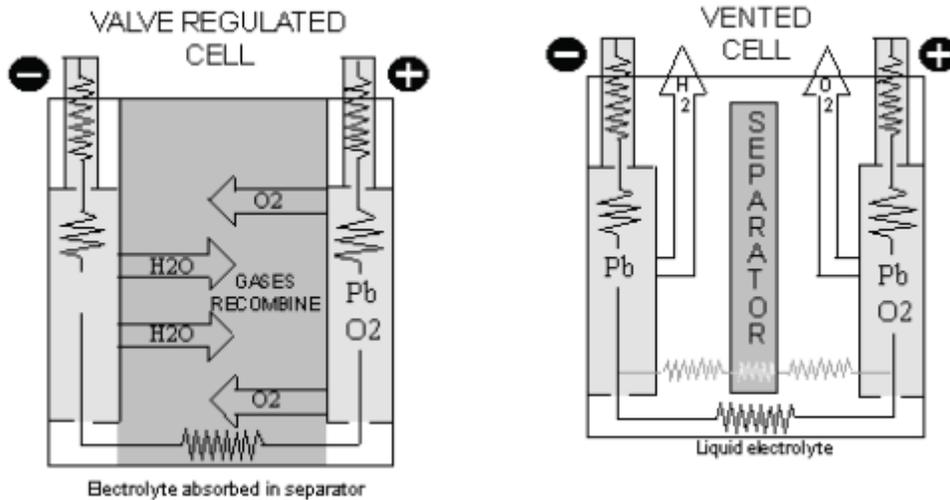


Figure 86 - Valve Regulated and Vented Cells

### Introduction

With the changeover from “vented” cells to “sealed,” VRLA cells, and the proliferation of UPS systems, an even greater impetus has been placed in finding economical and reliable ways to establish the state of a battery’s capacity and its conduction path. In this Application Note, the primary focus will be on a new, relatively low cost aid in determining a battery’s health by virtue of its cells’ internal resistances together with float voltages and intercell connection resistances. All three of these variables are rapidly measured and conveniently recorded by the Albcórp Cellcorder, the storage battery multimeter.

### The Search

The search for new approach to capacity and conduction path testing has been ongoing. Traditionally, a battery’s capacity to store energy has been specified by its manufacturers as its ability to supply a constant amount of current, or power, to the load for a defined time period to a final voltage. The real test of the battery’s actual capacity as opposed to its rated capacity frequently involves hours of manpower and load and data acquisition equipment.

Unfortunately, a new approach has yet to gain industry-wide acceptance. The consensus of battery experts is still that load testing under controlled conditions is the only method with certainty of establishing a battery’s actual capacity. This is reflected in several national standards; the latest of which was issued in 1995.

However, after many years of experience, studies and experiments, a wealth of information about battery behavior and measurements has been produced and some light has been shed on new tools that will help assess a battery’s condition.

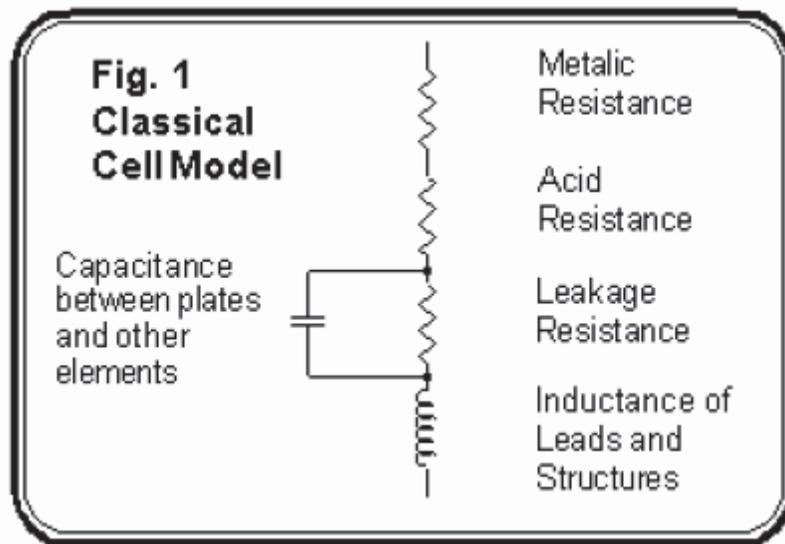


Figure 87 - Classical Cell Model

As early as 1959, the equivalent circuits of cells and typical circuit values were published. These circuit models of a battery's cell, are critical to understanding how its condition relates to cell internal parameters, conduction paths and capacity.

#### The Basics: Resistance, Inductance and Capacitance

The models' circuit elements are resistance, capacitance and inductance. Researchers have investigated battery parameters from DC through several thousand hertz and have made measurements in all units. They tried to relate those to cell capacity, often with mixed or conflicting results.

In almost all typical battery applications, the inductance has no practical impact on battery performance because of its small magnitude (from 0.05 to 0.2 micro henries.) On the other hand, the actual capacitance of cells is surprisingly large, as much as 1.7 Farads per 100 Amp-Hours. This cell characteristic is put to good use by charger manufacturers. They depend on it to filter their charger output.

However, little evidence has evolved that ties capacitance with the actual capacity of a cell. It's worth noting that one researcher felt capacitive reactance "obscures" the predominant indicator of cell capacity, electrochemical resistance. More so, as the test frequency is increased. Impedance and admittance measurements include both capacitance and inductance in their readings.

#### The Nature Of Internal Resistance

At Albér, we have centered our efforts on cell internal resistance. A refined cell model has been developed which subdivides the internal resistances of a cell, into its metallic and electrochemical components. These resistances do not change with test frequency. Indeed, researchers have concluded that a zero frequency, DC, or extremely low frequencies, yield the best results when studying capacity relationships.

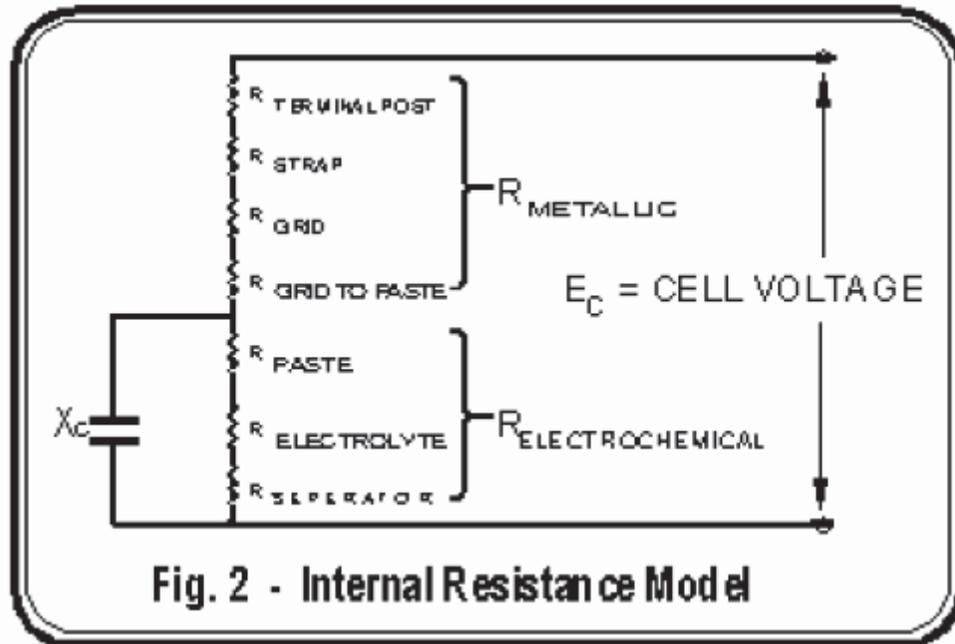


Figure 88 - Internal Resistance Model

Another group focusing on internal resistance is prestigious Nippon Telephone and Telegraph. Their research and field personnel have shown that a major result of the lead acid battery deterioration mechanism is an increased internal resistance. A 500 microsecond duration pulse technique is used to measure cell internal resistance. Test results lead them to conclude that battery deterioration (capacity) can be estimated within  $\pm 10\%$  by internal resistance measure.

Note that Capacity vs. Normalized R internal curve, is somewhat curved. Some feel the relationship between most cell internal parameters and capacity is not a simple straight line as has been described in recent times but rather a more complex curvi-linear function.

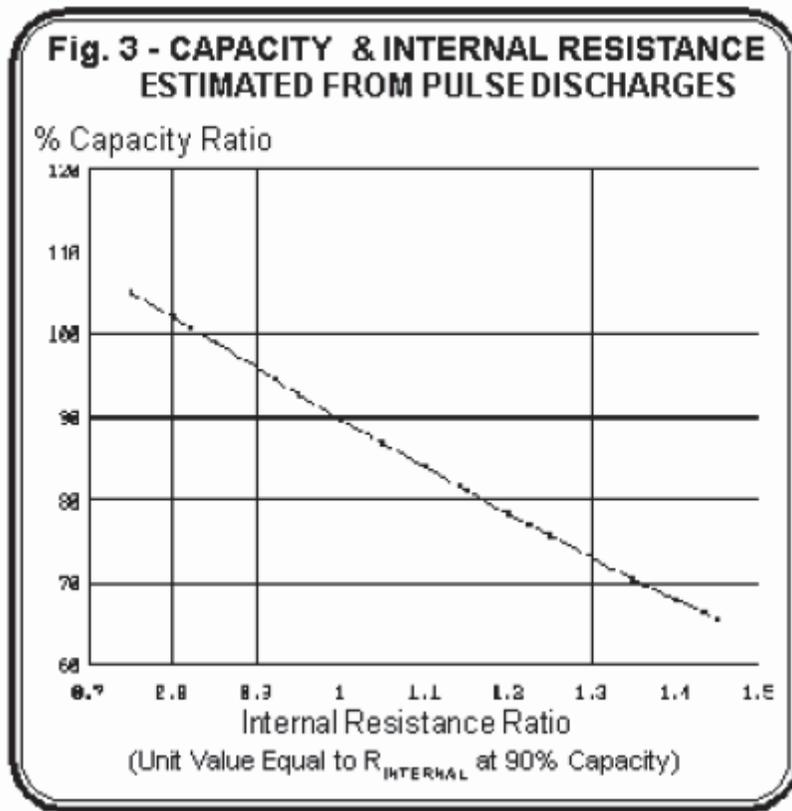


Figure 89 - Capacity and Internal Resistance Ratio

Part of this belief that a straight line cannot describe a capacity relationship is rooted in the differences exhibited during battery discharges from cells with metallic vs. electrochemical resistance problems. The typical discharge curve of a cell at 100% capacity.

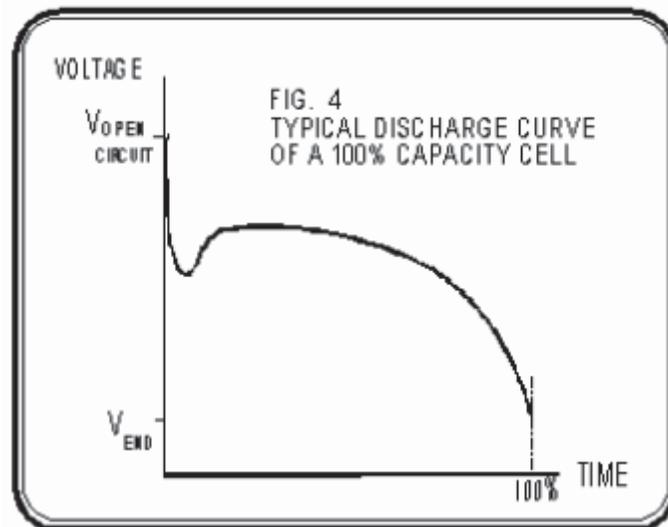


Figure 90 - Typical Discharge Curve of a 100% Capacity Cell

A battery's capacity is adversely affected by an increased internal resistance. Obviously, the power is dissipated internally,  $I^2 \times R_{INTERNAL}$ , and is not available where it is really needed... at the load. Thus, actual capacity is diminished. However, during discharge this reduction in capacity appears differently depending upon whether the resistance change is primarily metallic or electrochemical in nature.

### Metallic Resistance

This portion of the internal conduction path troubles most battery test experts. It is here that deterioration of a cell can occur most rapidly and then will often go undetected between the yearly integrity tests or, even less frequently, the capacity tests. The tear down of failed batteries with abnormal internal resistances has proven that the terminal posts and the internal straps and grids are most often the victims of corrosion, poor welds or "burns." Where found, contact surfaces of a copper insert can corrode or loosen from its surrounding lead post. The Cellcorder easily detects these types of problems.

The illustration clearly shows the loss of capacity due to a high internal metallic resistance. The available voltage at the battery's terminals is reduced from the start of the discharge and continues to the end.

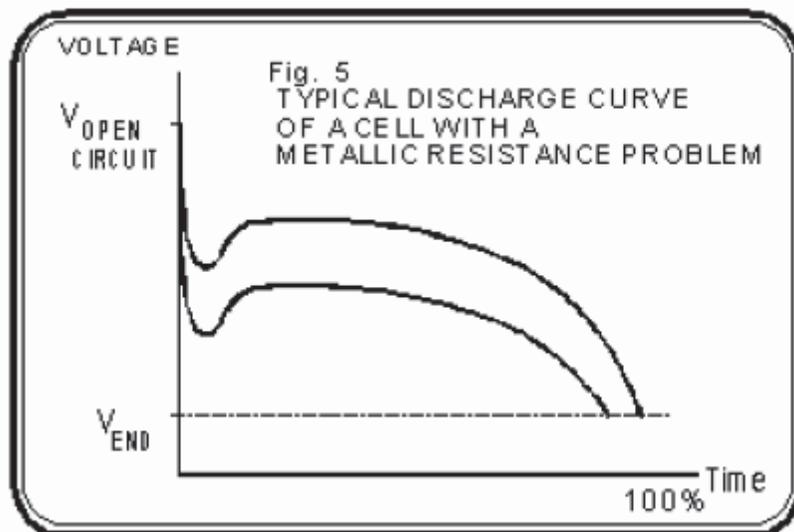


Figure 91 - Typical Discharge Curve with Metallic Resistance Problem

### Electrochemical Resistance

Cell paste, electrolyte and separators form the electrochemical part of cell internal resistance. Long-term increases in RELECTROCHEMICAL can be caused by loss of active material or paste due to aging. Short-term changes also occur naturally during parts of the charge or discharge processes when the specific gravity is altered; or when the contents of the separators varies and/or the chemical composition of the surfaces change. Separator compression, clogging or shorts, and conditions like sulfation are frequently causes of abnormal, increased electrochemical resistance; however, accelerated electrolyte dry out appears to be public enemy #1 when it comes to VRLA failures.

The next figure reveals how a battery with an electrochemical resistance problem behaves. Its reduced capacity does not become apparent until much further into the discharge, like "running out of fuel." On the other hand, the metallic resistance problem can be viewed as pinching the fuel line! In either case, the worse the resistance, the greater the shortfall between the cell's rated and actual capacity.

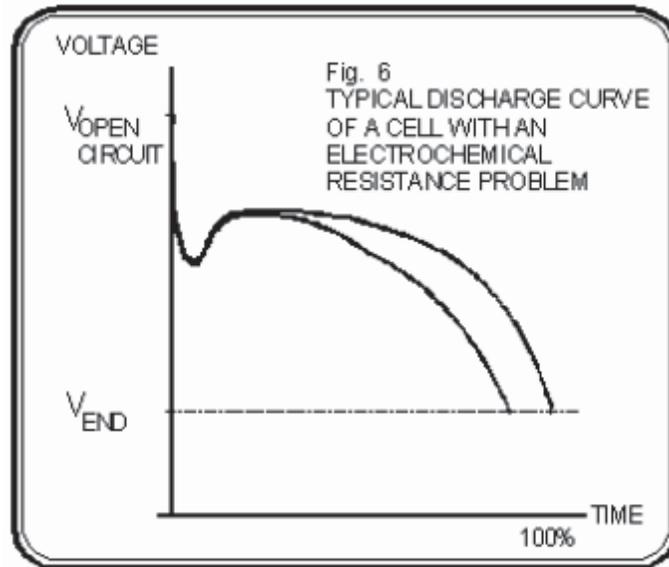


Figure 92 - Typical Discharge Curve with a Cell with an Electrochemical Resistance Problem

### Battery Aging and Internal Resistance

Internal resistance provides a clue to aging. The aging process of a battery's cells is based upon the rates at which their materials and construction deteriorate under design conditions. For example, the life of nearly all stationary cells is specified at 77°F, under particular float charge conditions and discharges of stipulated depth and frequency. Very slow corrosion of conduction paths, the loosening of active materials from plates, grid deformation and, in the case of VRLA cells, dry out of electrolyte are all natural processes that push a cell to its end life. This aging process is marked by increasing cell internal resistance and decreasing capacity. It is generally agreed that below 80% actual capacity, the cell's deterioration will accelerate rapidly and replacement is recommended.

The internal resistance increases slowly but, toward the end of a cell's life, it accelerates greatly. Its end-life value is normally about 25% or so above its initial value, but can be as high as 50%.

### Temperature and Internal Resistance

Being aware of the effect of temperature on internal resistance is important. The next figure shows a typical AGM VRLA cell, it clearly shows rapid internal resistance and impedance increases below temperatures of about 45°F.

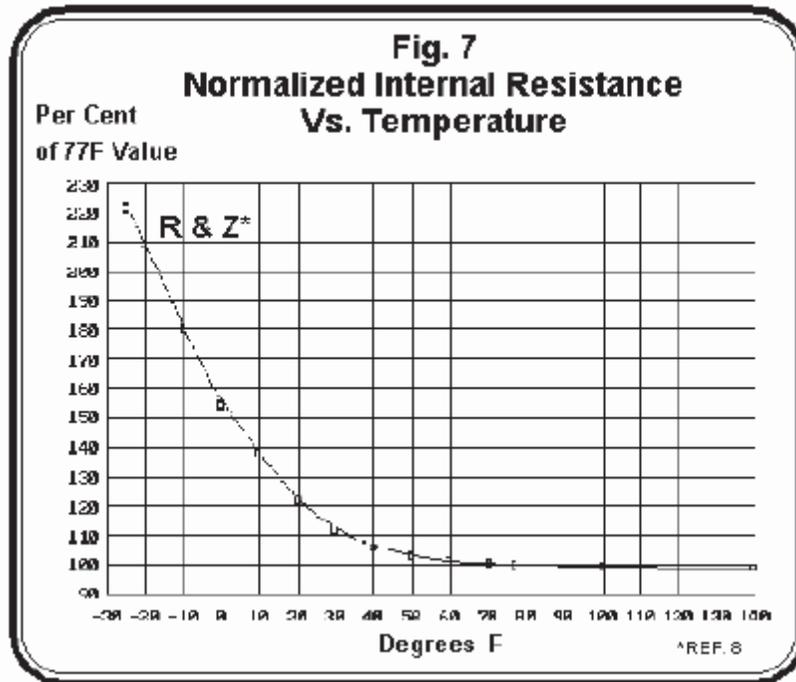


Figure 93 - Normalized Internal Resistance Vs. Temperature

In temperate climates, VRLA cells in unconditioned temperature environments may show considerable internal resistance variation between quarterly measurements. Recording of the ambient temperatures at the time of measurement will save you further testing and false alarms. Similarly, cells chilled by air conditioning exhibit higher readings than their sheltered neighbors. If possible, try to re-direct the air flow.

### The Cellcorder

The Cellcorder is invaluable in determining what a battery or cell's internal resistance is and in helping to identify abnormal conditions and normal aging. While a battery or cell is on-line, it accurately and repetitively measures the internal resistance using DC techniques. The AC filtering currents, stray 60 hertz fields, noise and normal float currents have virtually no effect on its readings.

The authors can't help but wonder what earlier researchers could have accomplished if they had access to microprocessor and solid state technology. The microprocessor of the Cellcorder permits it to not only control measurements, but to also precisely time the readings and performs calculations. To boot, it can tell whether a reading is valid and then records the results. The battery manufacturers have customarily determined the internal resistance of cells using simple Ohms Law. They usually measure the voltage differences and current during a battery discharge. The Cellcorder does the same thing, but very quickly and accurately. Figure 8 reveals what happens when a battery is subjected to a load. The instantaneous voltage drop when the load is applied, or the instantaneous voltage recovery when the load is removed, is due to the internal resistance. The Cellcorder reads the current and the cell voltage just prior to removal of the load and then measures the recovered cell's voltage.

The resultant resistance is simply R Internal.

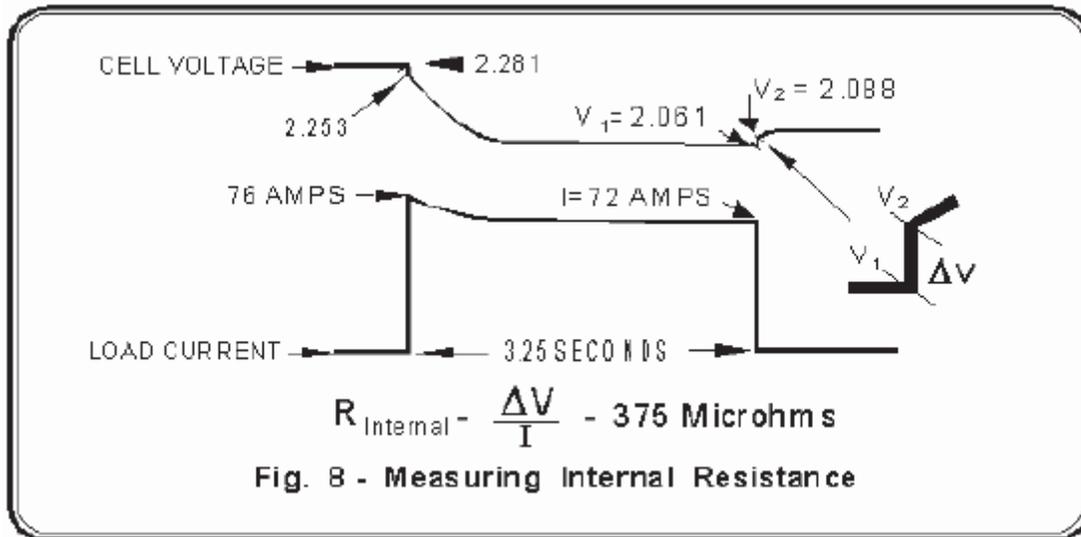


Figure 94 - Measuring Internal Resistance

### The Momentary Test Discharge

This is a feature worth your time to understand. It is, in part, what distinguishes the Cellcorder from most instruments presently on the market and will help provide readings in which you can be confident. For rated cell capacities of less than 1000 Amp-hours, the discharge is short, only three to four seconds, in the order of 20 to 75 amps. For larger capacities, the duration is close to 10 seconds.

To prove a point about safety and the effects of short-term high currents, we performed the following experiment. We imagined an internal conductor corroded down to the size of a dot.

We found that passing the Cellcorder's test current through a skinny wire (27 inches of #20 gauge wire) caused no damage nor barely heated it. Try it! The reason is that very little energy is involved. It amounts to only a maximum of 5 watts per 1000 microhms and lasts only seconds.

In an actual test, within milliseconds of starting, the Cellcorder senses the current level. If there is a very high internal resistance, the current will be low and the discharge will be instantaneously terminated. Thus, a cell with an exceptionally corroded internal conductor will not be further damaged. After tens of thousands of cell tests, there have been no reports indicating that the Cellcorder's test discharge has caused a cell to open circuit.

Interestingly, many battery specialists feel disappointed that their most severely corroded cells have not opened. They would rather have them open during a supervised test than during an actual emergency when no one is around!

### Albér Research

Carefully conducted Albér experiments have revealed other important properties of cell internal resistance. One is the relationship between metallic resistance and electrochemical resistance. Many would expect that as the energy stored in a fully charged cell diminishes, the internal resistance of the cell would increase both proportionately and significantly. This belief is widely held because of how the lead acid cell electrochemistry is envisioned.

Measured amounts of energy were methodically removed and each time the internal resistance was read. It was found that the internal resistance rose no more than 3% after removal of 32% of the cell's energy. Upon continued discharge, the internal resistance increased rapidly in a non-linear fashion.

Since it is extremely unlikely that the cells' metallic resistance could have changed while the cells were discharged, it can be concluded that:

- changes noted in total internal resistance were due exclusively to electrochemical resistance change
- electrochemical resistance change is a small part of total internal resistance as the stored energy drops from 100% to substantially lower levels of charge

In the real testing world, this is good news. It means that a battery can be reliably tested by the Cellcorder at float, open circuit voltage and even partially discharged.

### The "Baseline" and when Best to Get it

The fantasy of a "battery literate" person is that complete capacity and internal resistance test data, from day zero, is available for analysis. He seeks to determine the typical internal resistance of cells at 100% and 80% as well as the trend from 100% through 80% capacity.

The fantasy begins with the battery's installation. An acceptance capacity test is conducted and the cells' internal resistances measured. The results should be fairly uniform and he would safeguard this data. He knows it serves as the ideal baseline, or "reference" per IEEE/ANSI P-1188, for future internal resistance tests. He will then be able to make cut and dry decisions about maintenance or cell replacement.

Unfortunately, it's a fantasy in most environments because, in the rush and tumult of getting a facility on-line, establishing a baseline usually has low priority. As a result, we are then left to getting data in the best ways possible.

The second best time to obtain a set of data is shortly after capacities have been determined on the same model cells of the same age. Lastly, try obtaining data on the same model cells of any age. Over time, data to the end-life or 80% capacity level will be accumulated.

### Caution

Internal resistance data taken *without* the benefit of correlated known capacities is often referred to as "as-found comparative values." This as-found data could be used to set a baseline, but be *very cautious*. It is not unusual to find an entire string of cells of uniform internal resistances, and normal appearance on float, but with *falling capacities*. In this situation, we highly recommend at least a crude service/load test be performed to lend some credence to the internal resistance measurements.

### The Course Of Action

If you do not have end-life or 80% baselines developed from significant samples of the same cells, age, etc., you should use the following rough rules-of-thumb based upon Cellcorder user reports and in-house experience.

If the internal resistance is: 20%–50% above the 100% baseline, then the cell be load tested.... the sooner the better if it's towards the high end; at 50% or above the baseline, the cell be replaced.

Surprisingly, the IEEE/ANSI VRLA P-1188 proposed standard is more liberal in this matter. It recommends that from 25% to about 43%, the cell's manufacturer be contacted. Above 43%, a load test be done ASAP. Actually, the standard is expressed in the reciprocal of internal resistance, conductance (mhos.)

### Data Anomalies

Another part of the battery literates' fantasy is also likely to be shattered: that all the data gathered for the baseline, or test readings taken afterward, would fall reasonably close to any trend line. That is, higher capacity cells will have uniformly lower internal resistances and lower capacity cells will have proportionately higher internal resistances. Even cells fresh off of a tightly controlled production line fail to completely conform with this expected behavior.

In the course of your own testing, you will find tested, high capacity cells with an unusually high internal resistance. Similarly, there will be cells with the low internal resistance characteristic of a good cell that would fail a capacity test. Unfortunately, the current state of the art does not permit impedance, conductance, admittance or resistance testing to definitively identify the cells with anomalies—without the assistance of a load test.

If you are fortunate to have large amounts of both capacity and corresponding internal resistance data, developing a baseline should be no problem. When a program is just starting, or there are few cells of a particular model, some educated “guess-timing” helps in sorting out data. If you need baseline data try calling us or the cell's manufacturer.

### Internal Resistance Test Frequency

The whole purpose of the internal resistance check is to determine whether a cell has deteriorated and if so, how much and how fast. Logically, checks are done periodically. At least quarterly, check cells that have exhibited signs of abnormality either from inspection or an earlier capacity, integrity or internal resistance test.

Since neither specific gravity nor visual checks can be done on sealed cells, you would want to do much more frequent testing than on vented cells. For that reason, it's no surprise the P-1188 VRLA proposed Standard recommends internal measurements be taken quarterly. On the other hand, the standard for vented batteries, 4501, doesn't specify this type of check. However, it does call for annual connection resistance readings and you would want to take the internal resistances at the same time.

That's the nicest part of the Cellcorder...its “multimeter” functions measure and record both the internal and connection resistances at the same time! It saves you time and you don't even move the test leads for single post cells. For detailed information, request Cellcorder Application Note CC002, Intercell Resistance Measurement Procedures which covers single and multiple-post cells measurements.

### Managing the Cellcorder's Data Files

As a testing program progresses, the number of computer data files will increase rapidly... as many as four yearly per battery string if the P-1188 guidelines are followed. To quickly identify these type files and manage them with minimum errors through DOS or through Windows File Manager, a file naming system can be important. Try to include in the filenames' eight characters as many descriptors as possible to reflect the data's date, location and battery. Thus, filename 941WPB1A.DAT would describe the first test data, in 1994, for location WPB's battery 1, string A.

Whether you use numbers or characters, the important thing is to make the filename as recognizable as possible while avoiding duplicate filenames. This helps immensely in finding files and to avoid overwriting, deleting or copying wrong files, especially when using operating systems before version MSDOS 6.

### Safeguarding the Cellcorder

By far, the most common cause of damage to the Cellcorder is from grossly excessive input voltages, particularly when taking UPS cell readings.

AWARENESS is the most important factor in avoiding these kind of problems. Before any testing begins, take five minutes to survey the battery bank to make sure that:

- cells are not miss numbered
- the intertier cable routing is unmistakable
- the main battery terminals and other span able high voltage points are identified and temporarily covered

Also, before making a measurement that includes a cable routed through a tray to another tier, use a voltmeter to identify the other end. Make sure no potentially damaging voltage is present.

- POWER-UP the Cellcorder before connecting it to a battery. This activates additional protective circuitry.
- CLEAN-UP is also important especially in preserving the jaws and clips
- of the test leads. Wipe off all grease and then apply an acid neutralizing solution.

## References

1. ANSI/IEEE 450-1995, "IEEE Recommended Practice for Maintenance, Testing and Replacement of Vented Lead-Acid Batteries for Stationary Batteries," ANSI, New York, NY 1995
2. ANSI/IEEE PAR #1188, "IEEE Recommended Practice for Maintenance, Testing and Replacement of Valve Regulated Lead-Acid Batteries for Stationary Batteries," ANSI, New York, NY 1994
3. E. Willihnganz and P. Rohner, "Battery Impedance: Farads, Milliohms, Microhenries," AIEE, 1959
4. S. DeBardelaben, "Determining the End of Battery Life," Intelec '86, Toronto, Canada
5. S. Misra, T. Noveske, L. Holden, S. Mraz, "Use of AC Impedance/Conductance and DC Resistance for Determining the Reliability of VRLA Battery Systems", Intelec '93, Paris, France
6. Y. Konya, T. Takeda, K. Takano, M. Kohno, Et. Al., "A Deterioration Estimating System for 200 AH Sealed Lead-Acid Batteries", Intelec '94, Vancouver, B.C.
7. K. Peters, "Ten Years Experience of VRLA Batteries in Telecommunications Service," May 1994, 8th Battery Conference and Exhibition, Solihull, UK
8. Johnson Controls, "Impedance and Conductance Testing," Application Note Form 41-7271, Aug. 1994, Milwaukee, WI and Alber in-house data.
9. G. Alber, "Are Internal Cell Parameter Measurements a Substitute or Supplement to Capacity Testing?" Sep. 1994, NE Utilities Battery Conference, Albany, N.Y.

## 20. Application Note CC-002-A

### Internal Resistance Measurement Procedures Introduction

Intercell resistance problems account for a great many battery system failures. In UPS or other high current applications, the failures can lead to explosions and fires that are not only costly but also represent safety hazards.

Most battery manufacturers, unfortunately, do not supply baseline resistance values, so presently users must establish their own values. The recommended procedures for establishing base lines are:

New systems... read all the resistance values after installation and calculate the average value.

Older systems... disassemble 10 sets of intercell connections; burnish, neutralize and clean them; reapply corrosion inhibiting compound, reconnect, retorque, and then calculate the average of the new readings. Intercell resistance measurements should be taken once a year of all cells (IEEE-450-1995 and forthcoming IEEE VRLA maintenance recommendations). Any connection that is 20% or greater than the baseline or installation value requires corrective action. The importance of these measurements is illustrated by the new VRLA standard that recommends quarterly sampling 25% of the intercell connection resistances. If an upward trend is detected, all connection resistances should be measured to aid in determining the cause and corrective actions.

### How to Take Readings

When taking intercell connection resistance readings, it is important that: the test leads are connected properly. Measurements should include the post to intercell connector resistance. Always check your connections and connect *only* to posts, *not* nuts, bolts or straps. (This is the main area where connection problems occur) The test probe tips make a good connection, piercing any grease, lead oxide or crud coating the posts or straps. This is the leading cause of error messages after pressing the test button. Often jiggling the probe will lower the readings significantly and save you the heartache of unnecessarily reworking a connection.

### Single Interconnections

The following figure shows how the Alber Cellcorder should ideally be connected to obtain the proper measurement. Note that, ideally, the reading includes both the intercell connector resistance and the post to intercell connection resistance.

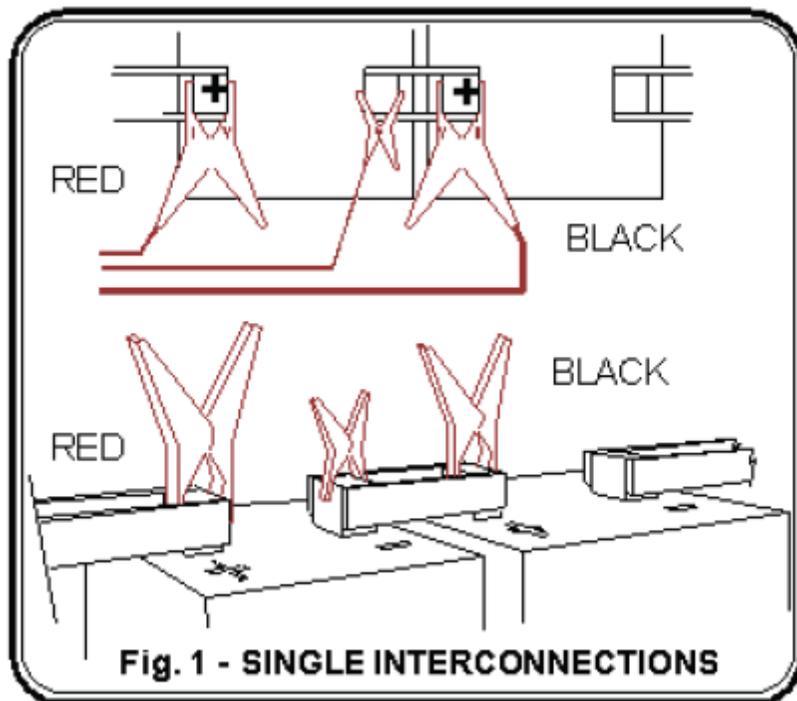


Figure 95 - Single Interconnections

The next figure (Fig 2A) below shows the connection for VRLA cells, such as the ABSOLYTE II batteries, where the terminal post is accessible. Figure (Fig 2B) below shows the connection for VRLA cells where the terminal post is not accessible. In this type of cell, the intercell to post connection resistance is included in the internal cell resistance measurement.

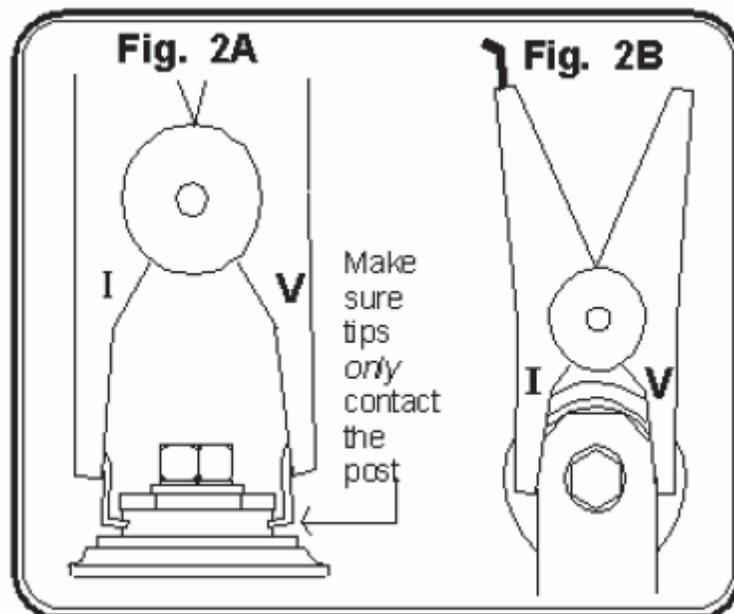


Figure 96 - Contacting Tips to Posts (Fig. 2A and Fig. 2B)

**Note:** Do not connect to the stainless steel bolt heads to make this measurement.

### Dual Interconnections

Figures (3A) and (3B) below, show the typical intercell connections for dual post cells. This type of interconnection requires that two readings be taken.

The first one shown should be with the intercell leads connected from Terminal Post A to Terminal Post C. Take the second reading with the intercell leads connected from Terminal Post B to Terminal Post D. The positive (a red clip) Cellcorder lead should remain connected (as shown) to the same terminal post for both measurements.

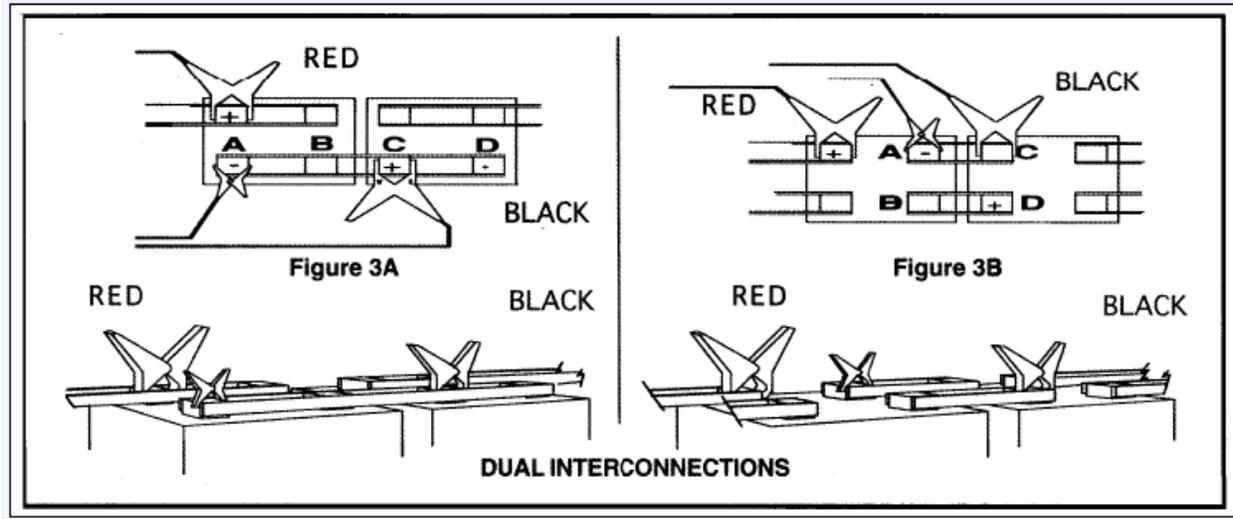


Figure 97 - (Figure 3A and 3B) Connections for Dual Posts.

### Triple Interconnections

Figures (4) and (5) show the typical intercell connections for triple post cells. For cells arranged as in (Fig. 4), three readings are made. The first one, shown, should be with the intercell leads connected from Terminal Post A to Terminal Post D. Take the second reading with the intercell leads connected from Terminal Post B to Post E. The third reading is with the intercell leads connected from Terminal Post C to Post F.

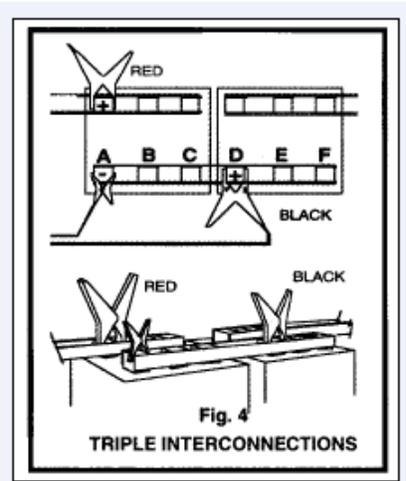


Figure 98 - (Figure 4) Connections for Triple Posts.

For VRLA cells or flooded cells configured as shown in the figure below, four readings are made, forming two “X’s.” Terminal Posts A to E then B to D, and B to F then C to E.

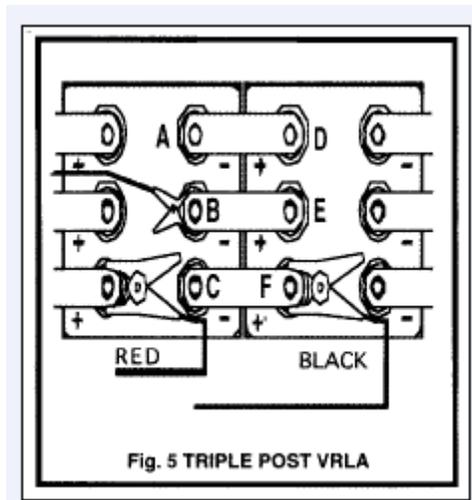


Figure 99 - (Fig 5) Connections for Triple Posts.

In all triple post strap measurements, the positive (a red clip) Cellcorder lead should remain connected (as shown) to the same terminal post for all readings.

## 21. Cellcorder Connection Options

For further information on which Cellcorder leads are best suited to your individual requirements, contact your local ALBER representative or ALBERCORP directly at: [www.alber.com](http://www.alber.com) Phone (954) 377-7101 Fax (954) 377-7042.

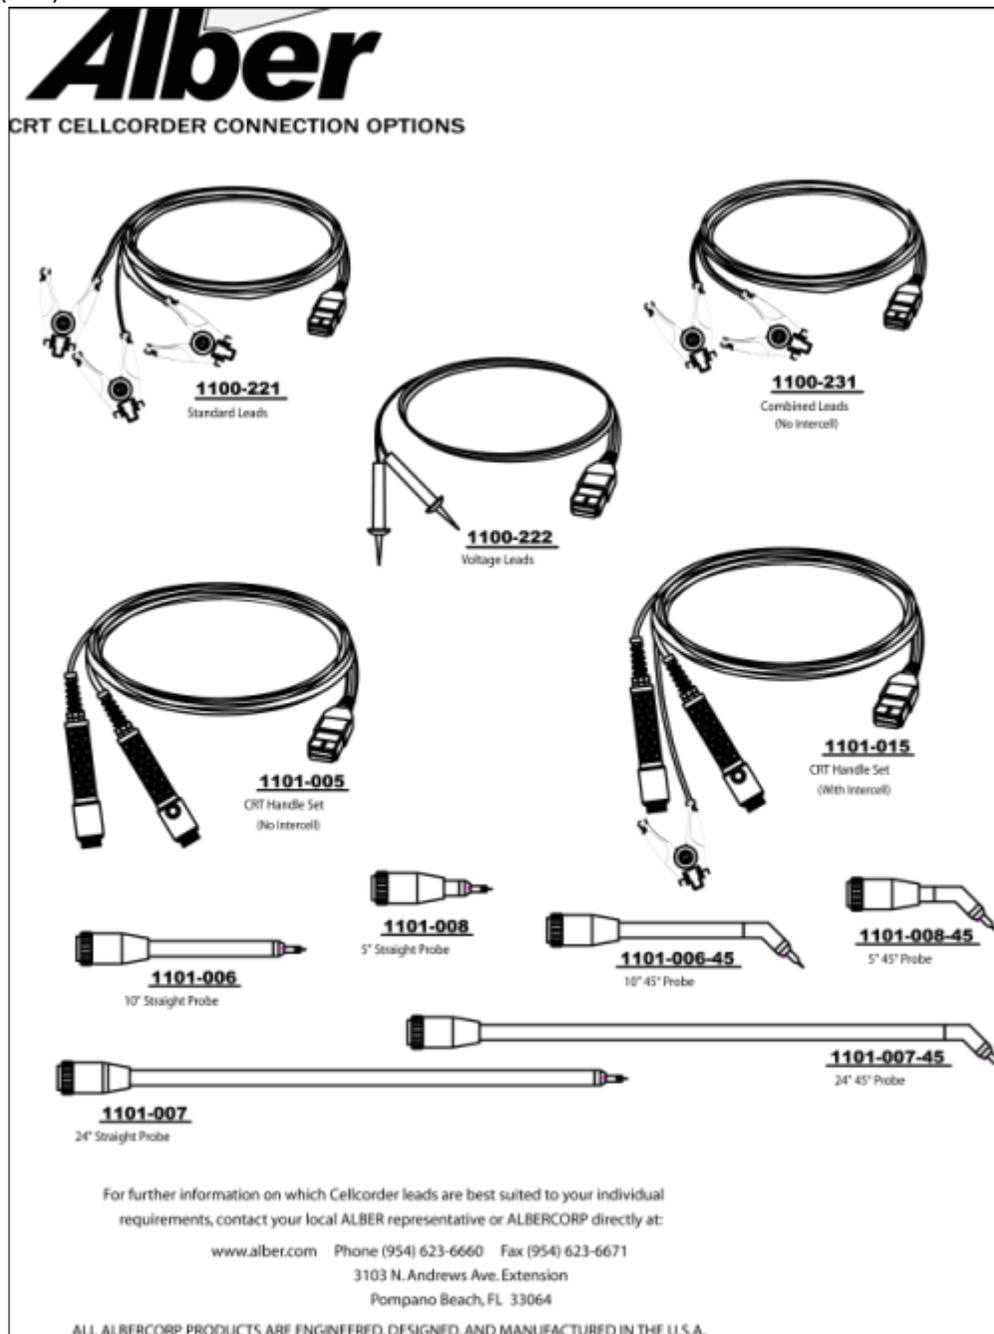


Figure 100 - CRT-400 Cellcorder Connection Options



## 23. Index

- .ADF File 15-3
- .BLF Baseline Resistance File 15-3
- .CSV File Comma Separated Value File 15-3
- A/D Linearity 17-3
- AC Power 3-14
- AC Power LED 3-9
- Auto Ranging 3-3
- BAS Software 3-1
- Baseline Resistance Data 15-4
- Baseline Resistance Data File on USB 5-3
- Battery Aging and Internal Resistance 19-6
- Battery Charge LED 3-9
- Battery Maintenance Schedule 18-4
  - Bluetooth* option 4-1
- Bottom Panel Connectors/Accessory
  - Compartment 3-14
- Buzzer 17-4
- Cellcorder
  - features 3-1
- Cellcorder Serial Number 3-1
- Changing the Password 18-3
- Charge Complete 4-2
- Charging
  - Cellcorder Battery 4-1
- Classical Cell Model 19-2
- Clearing Memory 13-6
- Combined Testing 7-4
- Computed Testing 7-4
- Connecting
  - Resistance Test Leads 9-1
- Connection
  - Dual Post Cells 9-2
  - Single Intercell 9-1
- Connection Options 21-1
- Connections
  - Triple Post Cells 9-4
- CRT Clear 14-5
- CRT Load Data Main Menu 14-4
- CRT Setup 5-2, 5-9, 13-1
- CRT-400
  - Display 3-15
  - Physical 3-15
- CRT-400
  - Memory 3-15
- CRT-400
  - Communication 3-15
- CRT-400
  - Battery 3-15
- CRT-400
  - Main Menu Functions 5-1
- Damaged Equipment 1-2
- Data Analysis, Storage and Transfer 3-4
- Data Anomalies 19-10
- Data Logger 12-1
- Data Logger to Transfer Data 12-5
- Deleting a *Bluetooth* Device 13-14
- Deselect a Site 14-5
- Deselecting a Site 5-8
- Diagnostics 17-1
- Digital Voltmeter 11-1
- Displaying Additional Functions 13-8
- Document Symbols 1-1
- Dual Interconnections 20-3
- Dual Testing 7-3
- Editing a Site Template 14-1
- Electrochemical Resistance 19-5
- Entering the Password 18-1
- Equipment
  - Service 1-2
- Error Codes 18-4
- F1, F2, F3, and F4 Buttons 3-12
- Fan 17-4
- Flash Code 18-1
- Float Voltage 3-3
- Frequency 13-9
- Help LCD windows and Menu Selections 3-14
- Hydrometer 12-1
- Hydrometer Usage 12-2
- ICr Channel 17-3
- Infrared Port 3-2
- Intercell Resistance 3-4
- Intercell Resistance Threshold 13-6
- Internal Cell Resistance 3-4
- Internal Components 2-1
- Internal Resistance 19-10
- Jaw Options 22-1
- Keypad Buttons 5-7
- Load Data 5-2, 5-5

- Load Module 17-2
- Measurement Capabilities 3-3
- Metallic Resistance 19-5
- Modem (If Installed) 17-4
- Momentary Test Discharge 19-8
- Moving Probes 9-6
- Nature Of Internal Resistance 19-2
- Navigation 5-3
- Normal Use Protection 2-1
- Panel Controls and Indicators 3-8
- Part Numbers 3-5
- Password 18-1
- Password Change 18-3
- Preventive Maintenance 2-1
- Product Safety Practices 1-2
- Protection Circuit 17-3
- Quad Testing 7-4
- Radio Frequency RF Headset Communication 3-4
- Reading USB 5-9, 13-2
- Readings 3-3
- Recommended Reading 4-1
- Reset Switch 3-4
- Resistance Measurement Procedures 20-1
- Resistance Readings 7-1, 8-1
- Resume Testing 6-3
- Safeguarding 19-11
- Safely Remove Hardware 4-5
- Safety Information 1-1
- Safety Relay 17-1
- Safety Symbols 1-2
- Selecting a Battery 13-2
- Selecting a Manufacturer 13-2
- Selecting a Model 13-2
- Sending Readings Via IR 15-12
- Serial Number Location 3-2
- Service Menu 18-1
- Servicing and Adjusting 1-2
- Set Amp Hours 7-3
- Set Intercell Connections 7-3
- Setting Date and Time 13-10
- Setting Thresholds 13-3
- Shipping 2-1
- Single Interconnections 20-1
- Single Testing 7-3
- Sound Adjustment 13-9
- Specific Gravity Threshold 13-6
- Specific Gravity Thresholds 12-3
- Stop a Resistance Test 9-6
- Storage 2-1
- Stored In Memory 6-2
- Substituting Parts or Modifying Equipment 1-3
- System Overview 3-1
- TELCO 3-14
- Temperature and Internal Resistance 19-6
- Temperature Sensors 17-4
- Test Lead 3-3
- Test Lead Connection 4-3
- Test LED 3-10
- Test Mode 5-2
- Threshold Temperatures 12-3
- Top Panel Controls Keypad 3-10
- Top Panel Indicators 3-9
- Transferring
  - Hydrometer Data to Computer 12-6
- Trans-reflective LCD 3-12
- Triple Interconnections 20-3
- Triple Testing 7-4
- Uninterruptible Power Supply 1-3
- Upgrade Firmware Using the USB Device 18-5
- Upgrading Firmware 18-5
- UPS 1-3
- USB connection 3-3
- USB Device 4-4
- USB LED 3-10
- USB Port and Flash Hard Drive 4-4
- Using the Hydrometer 12-4
- Valve Regulated 19-1
- Vented Cells 19-1
- View Results 5-2
- Viewing Status 16-1
- Voltage and Current Protection 3-16
- Voltage Skewing Effect 10-1
- Voltage Test Leads 6-1
- Voltage Testing 6-2